



Development Guide

XML API for Aastra SIP Phones

Firmware 3.3.1

Doc. No.: PA-001011-03-03
April 2014

Aastra 6730i, 6731i and 6739i
Aastra 6753i, 6755i, 6757i and 6757iCT
Aastra 9143i, 9480i and 9480iCT
Aastra 6735i, 6737i
Aastra 6863i, 6865i and 6867i

Aastra will not accept liability for any damages and/or long distance charges, which result from unauthorized and/or unlawful use.

While every effort has been made to ensure accuracy, Aastra will not be liable for technical or editorial errors or omissions contained within this documentation. The information contained in this documentation is subject to change without notice.

Copyright 2014 Mitel Networks Corporation. www.aastracom

All Rights Reserved.



TABLE OF CONTENTS

1	Introduction.....	15
1.1	Aastra XML API	15
1.2	<i>Revision History.....</i>	15
1.2.1	Version 3.3.1 (9143i / 9480i / 9480iCT / 6730i / 6731i / 6739i / 53i / 55i / 57i / 57iCT / 6863i / 6865i / 6867i)	15
1.2.2	Version 3.3.1 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)	15
1.2.3	Version 3.3.1 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)	15
1.2.4	Version 3.3.0 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)	15
1.2.5	Version 3.2.2 (9143i/9480i/9480iCT/6730i/6731i/6735i/6737i/6739i/53i/55i/57i/57iCT)	16
1.2.6	Version 3.2.2 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)	16
1.2.7	Version 3.2.1 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)	16
1.2.8	Version 3.2.0 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)	16
1.2.9	Version 3.0.1 (6739i).....	17
1.2.10	Version 3.0.0 (6739i).....	17
1.2.11	Version 2.6.0 (9143i/9480i/9480iCT/6730i/6731i/51i/53i/55i/57i/57i CT)	17
1.2.12	Version 2.5.3 (9143i/9480i/9480iCT/6730i/6731i/51i/53i/55i/57i/57iCT)	17
1.2.13	Version 2.5.2 (9143i/9480i/9480iCT/6730i/6731i/51i/53i/55i/57i/57i CT)	18
1.2.14	Version 2.4.1 (9143i/9480i/9480iCT/6730i/6731i/51i/53i/55i/57i/57i CT)	18
1.2.15	Version 2.4.0 (9143i/9480i/9480iCT/51i/53i/55i/57i/57i CT)	18
1.2.16	Version 2.3.1 (9143i/9480i/9480iCT/51i/53i/55i/57i/57i CT)	18
1.2.17	Version 2.3.0 (9143i/9480i/9480iCT/51i/53i/55i/57i/57i CT)	18
1.2.18	Version 2.2.1 (9143i/9480i/9480iCT/51i/53i/55i/57i/57i CT)	20
1.2.19	Version 2.2.0 (51i/53i/55i/57i/57i CT)	20
1.2.20	Version 2.1.1 (51i/53i/55i/57i/57i CT)	20
1.2.21	Version 2.1.0 (53i/55i/57i/57i CT)	20
1.2.22	Version 2.0.2 (53i/55i/57i/57i CT)	21
1.2.23	Version 2.0.1 (53i/55i/57i/57i CT)	21
1.2.24	Version 1.4.2 (9112i/9133i/480i/480i CT)	22
1.2.25	Version 1.4.1 (9112i/9133i/480i/480i CT)	22
1.2.26	Version 1.3.1 (9112i/9133i/480i/480i CT)	22
1.2.27	Version 1.3.0 (9112i/9133i/480i/480i CT)	23
2	XML and the Aastra IP Phones.....	24

2.1	<i>What is XML?</i>	24
2.2	<i>Functionality</i>	24
2.3	<i>How does it work?</i>	25
2.3.1	Phone initiated application	25
2.3.2	Server initiated application	25
2.4	<i>System Architecture</i>	26
2.4.1	Corporate applications	26
2.4.2	Internet applications	26
2.4.3	Telephony applications.....	27
2.5	<i>Development environment</i>	27
2.5.1	Typical software architecture.....	27
2.5.2	Web server	28
2.5.3	Scripts/Languages.....	28
2.5.4	XML Validation tools.....	28
2.6	<i>XML format</i>	29
2.7	<i>HTTP format</i>	29
2.8	<i>XML display control and keys</i>	30
2.8.1	Aastra 6730i/6731i	30
2.8.2	Aastra 6753i	31
2.8.3	Aastra 6755i/6735i	32
2.8.4	Aastra 6757i/6757iCT/6737i.....	33
2.8.5	Aastra 9143i	34
2.8.6	Aastra 9480i/9480iCT.....	35
2.8.7	Aastra 6739i	36
2.8.8	Aastra 6863i	37
2.8.9	Aastra 6865i	38
2.8.10	Aastra 6867i	39
3	Aastra IP Phone XML Objects	40
3.1	<i>TextMenu Object (All models)</i>	40
3.1.1	Implementation (softkey and non softkey phones).....	40
3.1.2	Implementation (6739i).....	41
3.1.3	XML Description	43
3.1.4	Dialing from a TextMenu	49
3.1.5	TextMenu styles (when supported)	49
3.1.6	Examples.....	50
3.2	<i>ImageMenu Object (55i/57i/57iCT/6735i/6737i/6739i/6867i)</i>	54
3.2.1	Implementation (55i/57i/57iCT/6535i/6737i)	54

3.2.2	Implementation (6867i)	54
3.2.3	Implementation (6739i)	56
3.2.4	XML Description.....	59
3.2.5	Examples	61
3.3	<i>TextScreen Object (all models)</i>	64
3.3.1	Implementation (softkey and non softkey phones)	64
3.3.2	Implementation (6867i)	65
3.3.3	Implementation (6739i)	66
3.3.4	XML Description.....	67
3.3.5	Examples	71
3.4	<i>FormattedTextScreen Object (all models)</i>	75
3.4.1	Implementation (softkey and non softkey phones)	75
3.4.2	Implementation (6867i)	76
3.4.3	Implementation (6739i)	78
3.4.4	XML Description.....	80
3.4.5	Examples	86
3.5	<i>ImageScreen Object (55i/57i/57iCT/6735i/6737i/6867i/6739i)</i>	90
3.5.1	Implementation (55i/57i/57iCT/6735i/6737i)	90
3.5.2	Implementation (6867i)	90
3.5.3	Implementation (6739i)	92
3.5.4	XML Description.....	95
3.5.5	Examples	98
3.6	<i>InputScreen Object – Single Input field (all models)</i>	100
3.6.1	Implementation (non softkey and softkey phones)	100
3.6.2	Implementation on the 6867i.....	101
3.6.3	Implementation (6739i)	102
3.6.4	XML Description.....	103
3.6.5	Input Type: IP	109
3.6.6	Input Type: Number	110
3.6.7	Input Type: String.....	112
3.6.8	Input Type: timeUS	114
3.6.9	Input Type: timeInt	116
3.6.10	Input Type: dateUS	118
3.6.11	Input Type: dateInt	121
3.7	<i>InputScreen Object – Multiple Input fields (55i / 57i / 57iCT / 9480i / 9480iCT / 6735i / 6737i / 6739i)</i>	123
3.7.1	Implementation (softkey phones).....	123

3.7.2	Implementation on the 6867i.....	124
3.7.3	Implementation on the 6739i.....	125
3.7.4	XML Description	126
3.7.5	Examples.....	134
3.8	<i>PhoneCallLog Object (6739i only)</i>	138
3.8.1	Implementation	138
3.8.2	XML Description	139
3.8.3	Examples.....	143
3.9	<i>PhoneStatus Object</i>	144
3.9.1	Implementation (non softkey and softkey phones).....	144
3.9.2	Implementation on the 6739i.....	145
3.9.3	XML Description	146
3.9.4	Examples.....	149
3.10	<i>PhoneExecute Object (all models)</i>	151
3.10.1	Implementation	151
3.10.2	XML Description	152
3.10.3	Examples.....	152
3.11	<i>PhoneConfiguration Object (all models)</i>	154
3.11.1	Implementation	154
3.11.2	XML Description	154
3.11.3	Examples.....	156
4	XML extensions	158
4.1	<i>Customizable Softkeys (softkey phones)</i>	158
4.2	<i>Graphics (55i/57i/57iCT/6735i/6737i/6867i/6739i)</i>	164
4.2.1	Images.....	164
4.2.2	Icons	166
4.3	<i>LED control</i>	174
4.4	<i>RTP streaming</i>	176
4.4.1	RTPRx.....	177
4.4.2	RTPTx	179
4.4.3	RTPMRx.....	180
4.4.4	RTPMRTx	182
4.4.5	Interaction with action uris.....	183
4.5	<i>Keypress emulation</i>	183
4.6	<i>Wav file streaming</i>	185
4.6.1	XML Commands.....	186
4.6.2	File format.....	186

4.6.3	Interaction with action uris	187
4.7	<i>Wav file loop playback (melody)</i>	188
4.7.1	XML Commands	188
4.7.2	File format	189
4.8	<i>Dial and DialLine URIs</i>	189
4.9	<i>Crash and configuration files retrieval</i>	190
4.10	<i>Special attributes</i>	190
4.10.1	Beep.....	190
4.10.2	Timeout	191
4.10.3	LockIn.....	191
4.10.4	triggerDestroyOnExit.....	191
4.11	<i>TextMenu user selection (6735i/6737i/6739i/55i/57i/57iCT/9480i/9480iCT,6867i)</i>	191
4.12	<i>TextMenu item formatting on 2 lines (55i/57i/57iCT/9480i/9480iCT/6735i/6737i)</i>	192
4.13	<i>“Select” and “Dial” in the same TextMenu object</i>	195
4.14	<i>“Select”, “Dial” and “Dial2” behavior in a TextMenu object</i>	196
4.15	<i>Refresh of an XML page</i>	196
4.16	<i>HTTP headers format for a phone HTTP GET</i>	196
4.16.1	User-Agent.....	197
4.16.2	X-Aaastra-ExpModi.....	198
4.16.3	Accept-Language	199
4.17	<i>Some development guidelines</i>	199
5	URL Format and Variables	201
5.1	<i>URL format</i>	201
5.2	<i>URL Variables</i>	201
5.2.1	Variables related to the active line	202
5.2.2	Variables related to the current call	203
5.2.3	Usage with action uris.....	203
5.2.4	Phone State	204
5.3	<i>HTTPS</i>	204
5.3.1	User Certificates	205
5.3.2	Configuration	206
5.4	<i>XML Objects Pushed to the Phone</i>	208
6	Action URIs	210
6.1	<i>Configuration</i>	210
6.2	<i>Action uri detailed behavior</i>	211
6.2.1	Action uri offhook	211

6.2.2	Action uri onhook.....	211
6.2.3	Action uri incoming	211
6.2.4	Action uri outgoing.....	212
6.2.5	Action uri connected.....	212
6.2.6	Action uri disconnected	212
6.2.7	Action uri startup.....	213
6.2.8	Action uri registered	213
6.2.9	Action uri registration event.....	213
6.2.10	Action uri poll	213
6.2.11	Action uri xml sip notify.....	213
6.3	<i>“Answer” and “Ignore” keys for action uri incoming</i>	215
6.4	<i>“Drop”, “Xfer” and “Conf” keys for XML apps in connected state</i>	215
6.5	<i>Applications</i>	215
7	XML Configuration	217
7.1	<i>Configuring a Custom Service from the Web UI</i>	217
7.2	<i>Configuring a Soft or Programmable Key using the phone Web UI</i>	218
7.3	<i>Configuring the XML Push Server List using the phone Web UI</i>	218
7.4	<i>Configuring the Action URIs using the phone Web UI</i>	219
7.5	<i>Configuring the XML Beep Support using the phone Web UI</i>	220
7.6	<i>Configuring the Status Scroll Delay using the phone Web UI</i>	220
7.7	<i>Configuring the XML SIP Notify using the phone Web UI</i>	221
7.8	<i>XML Configuration using the Configuration Files</i>	222
7.8.1	General XML parameters	222
7.8.2	Action uri parameters	229
7.8.3	Programmable and Soft keys	234
7.8.4	Examples.....	234
8	Troubleshooting XML Applications	235
8.1	<i>Introduction</i>	235
8.2	<i>Troubleshooting tools</i>	236
8.3	<i>Configuring the Syslog Server using the WebUI</i>	236
8.4	<i>Configuring the Syslog server using the configuration files</i>	237
8.5	<i>Parsing error debug example</i>	238
9	Why XML Applications for an IP Phone?	239
9.1	<i>Telephony applications</i>	239
9.1.1	Directory	239
9.1.2	Call Processing.....	239

9.1.3	Voice-Mail	239
9.1.4	Conference Bridge	239
9.1.5	Contact Center	239
9.2	<i>Media and information</i>	240
9.3	<i>Vertical applications</i>	240
9.3.1	Human Resources	240
9.3.2	Travel/Hotel	241
9.3.3	Health Care	241
9.3.4	Education	241
9.3.5	Law Enforcement	241
10	Phone Self-Configuration using XML	242
10.1	<i>Introduction</i>	242
10.2	<i>Message flow</i>	242
10.3	<i>Auto-configuration policy</i>	243
10.4	<i>Architecture</i>	244
11	Sample XML applications	245
11.1	<i>Access from the Internet</i>	245
11.2	<i>Local server using XAMPP</i>	245
11.2.1	XAMPP installation	246
11.2.2	XML scripts installation	246
11.2.3	XAMPP start and stop	246
11.2.4	Test your installation	248
11.2.5	Troubleshooting Apache	248
11.3	<i>Applications</i>	248
11.3.1	Area code lookup (US/Canada)	248
11.3.2	Biorhythms	249
11.3.3	CNN News	250
11.3.4	Currency Converter	251
11.3.5	ESPN News	252
11.3.6	FOX News	253
11.3.7	Horoscope	254
11.3.8	IP Geolocation	254
11.3.9	Movies	255
11.3.10	Netflix	256
11.3.11	Stock Quotes	257
11.3.12	Today	258

11.3.13 Local Weather	259
11.3.14 World Clock	260
11.3.15 Yahtzee	260
11.3.16 Global menu	261
12 Appendix A: XSL Model.....	262
13 Appendix B: Object Oriented PHP Classes.....	269
13.1 <i>AastralIPPhoneCallLog()</i>	269
13.2 <i>AastralIPPhoneConfiguration()</i>	271
13.3 <i>AastralIPPhoneExecute()</i>	272
13.4 <i>AastralIPPhoneFormattedTextScreen()</i>	272
13.5 <i>AastralIPPhoneImageMenu()</i>	274
13.6 <i>AastralIPPhoneImageScreen()</i>	277
13.7 <i>AastralIPPhoneInputScreen() – Single Input field</i>	279
13.8 <i>AastralIPPhoneInputScreen() – Multiple Input fields</i>	281
13.9 <i>AastralIPPhoneStatus()</i>	284
13.10 <i>AastralIPPhoneTextMenu()</i>	285
13.11 <i>AastralIPPhoneTextScreen()</i>	287
13.12 <i>AastralIPPhoneScrollableTextMenu()</i>	289
13.13 <i>AastralIPPhoneScrollableDirectory()</i>	291
13.14 <i>Examples provided with the PHP API</i>	293
14 Appendix C: Dynamic Parameters	294
15 Appendix D: Localized input character set	298
15.1 <i>English</i>	298
15.2 <i>French/Français</i>	298
15.3 <i>Spanish/Español</i>	298
15.4 <i>German/Deutsch</i>	299
15.5 <i>Italian/Italiano</i>	299
15.6 <i>Portuguese/Português</i>	299
16 Appendix E: XML Self-Configuration	300
17 Appendix F: CSV based Directory.....	311
17.1 <i>Introduction</i>	311
17.2 <i>Phone compatibility</i>	311
17.3 <i>Installation</i>	312
17.4 <i>XML key configuration</i>	312
17.5 <i>CSV file format</i>	312

17.6 Configuration files.....	312
17.6.1 server.conf	312
17.6.2 directory.conf.....	313
17.7 Application Files.....	313
18 Appendix G: LDAP Directory.....	315
18.1 Introduction	315
18.2 Installation.....	316
18.3 Network Requirements	317
18.3.1 Phone -> XML Proxy Server	317
18.3.2 XML Proxy Server -> LDAP-Server	317
18.4 Active Directory / LDAP-Server Requirements.....	317
18.5 Configuration files.....	317
18.5.1 server.conf	317
18.5.2 ldap_directory.conf.....	317
19 Appendix H: PictureCallerID (6867i/6739i).....	319
19.1 Introduction	319
19.2 Application implementation.....	320
19.3 Requirements/Compatibility.....	320
19.3.1 HTTP Server	320
19.3.2 Aastra 6739i.....	321
19.4 Installation.....	321
19.4.1 Introduction	321
19.4.2 HTTP Server	321
19.4.3 Package installation	321
19.4.4 Test your installation	321
19.4.5 Troubleshooting	322
19.4.6 Windows PC using XAMPP Lite	322
19.5 Configuration	322
19.5.1 Phone Configuration	322
19.5.2 Application configuration	323
19.5.3 Number matching examples	325
19.5.4 Pattern matching examples	325
19.6 Files	327
20 LAST PAGE OF THE DOCUMENT	329

TABLE OF FIGURES

Figure 1: Basic XML document.....	24
Figure 2: Aastra IP Phone acting as a client.....	25
Figure 3: Aastra IP Phone acting as a server	26
Figure 4: Access to an internal application	26
Figure 5: Access to an Internet application.....	27
Figure 6: Access to a telephony application	27
Figure 7: Typical software architecture of an XML application	28
Figure 8: XML conversion table	29
Figure 9: Aastra 6731i XML display and keys.....	31
Figure 10: Aastra 6753i XML display and keys.....	32
Figure 11: Aastra 6755i/6735i XML display and keys.....	33
Figure 12: Aastra 6757i/6757iCT/6737i XML display and keys	34
Figure 13: Aastra 9413i XML display and keys.....	35
Figure 14: Aastra 9480i/9480iCT XML display and keys	36
Figure 15: Aastra 6739i XML display and keys.....	37
Figure 16: Aastra 9413i XML display and keys.....	38
Figure 17: Aastra 9413i XML display and keys.....	39
Figure 18: Aastra 6867i XML display and keys.....	39
Figure 19: TextMenu Implementation on 6739i	43
Figure 20: "numbered" style TextMenu	49
Figure 21: "none" style TextMenu	49
Figure 22: "radio" style TextMenu	49
Figure 23: TextMenu Example 1 (non softkey phones)	50
Figure 24: TextMenu Example 1 (softkey phone)	51
Figure 25: TextMenu Example 1 (6739i).....	51
Figure 26: TextMenu Example 2 (softkey phone)	52
Figure 27: TextMenu Example 2 (6739i).....	53
Figure 28: ImageMenu 6867i implementation (mode regular/extended)	55
Figure 29: ImageMenu 6867i implementation (fullscreen mode).....	56
Figure 30: ImageMenu implementation (regular mode).....	57
Figure 31: ImageMenu implementation (extended mode)	58
Figure 32: ImageMenu implementation (fullscreen mode)	58
Figure 33: ImageMenu Example (55i/57i/57iCT/6735i/6737i)	62
Figure 34: ImageMenu Example (6739i).....	63

Figure 35: TextScreen implementation on 6867i.....	65
Figure 36: TextScreen implementation on 6739i.....	66
Figure 37: TextScreen Example (non softkey phones)	72
Figure 38: TextScreen Example (softkey phones)	72
Figure 39: TextScreen Example (6739i).....	73
Figure 40: TextScreen Example (6867i).....	74
Figure 41: FormattedTextScreen layout.....	75
Figure 42: FormattedTextScreen layout on 6867i	77
Figure 43: FormattedTextScreen implementation on 6867i	78
Figure 44: FormattedTextScreen layout on 6739i	79
Figure 45: FormattedTextScreen implementation on 6739i	80
Figure 46: FormattedTextScreen Example 1 (non softkey phones).....	87
Figure 47: FormattedTextScreen Example 2 (softkey phones).....	87
Figure 48: FormattedTextScreen Example 3 (6739i)	88
Figure 49: FormattedTextScreen Example 4 (6739i)	89
Figure 50: ImageScreen 6867i implementation (mode regular/extended)	91
Figure 51: ImageScreen 6867i implementation (fullscreen mode).....	92
Figure 52: ImageScreen 6739i implementation (normal mode)	93
Figure 53: ImageScreen 6739i implementation (extended mode)	94
Figure 54: ImageScreen 6739i implementation (fullscreen mode).....	94
Figure 55: ImageScreen Example (55i/57i/57iCT/6735i/6737i).....	99
Figure 56: ImageScreen Example (6739i).....	100
Figure 57: InputScreen implementation on 6867i.....	102
Figure 58: InputScreen implementation on 6739i.....	103
Figure 59: InputScreen “IP” Example (non softkey phone)	109
Figure 60: InputScreen “IP” Example (softkey phone)	110
Figure 61: InputScreen “IP” Example (6739i)	110
Figure 62: InputScreen “Number” Example (non softkey phone)	111
Figure 63: InputScreen “Number” Example (softkey phone)	111
Figure 64: InputScreen “Number” Example (6739i)	112
Figure 65: InputScreen “String” Example (non softkey phone)	113
Figure 66: InputScreen “String” Example (softkey phone)	114
Figure 67: InputScreen “String” Example (6739i)	114
Figure 68: InputScreen “TimeUS” Example (<i>non softkey phone</i>)	115
Figure 69: InputScreen “TimeUS” Example (<i>softkey phone</i>).....	116
Figure 70: InputScreen “TimeUS” Example (6739i)	116
Figure 71: InputScreen “TimeInt” Example (<i>non softkey phone</i>).....	117

Figure 72: InputScreen “TimeInt” Example (<i>softkey phone</i>)	118
Figure 73: InputScreen “TimeInt” Example (6739i).....	118
Figure 74: InputScreen “DateUS” Example (<i>non softkey phone</i>)	119
Figure 75: InputScreen “DateUS” Example (<i>softkey phone</i>)	120
Figure 76: InputScreen “DateUS” Example (6739i).....	120
Figure 77: InputScreen “DateInt” Example (<i>non softkey phone</i>)	121
Figure 78: InputScreen “DateInt” Example (<i>softkey phone</i>)	122
Figure 79: InputScreen “DateInt” Example	122
Figure 80: InputScreen implementation on 6768i mode “normal”.....	124
Figure 81: InputScreen implementation on 6768i mode “condensed”	124
Figure 82: InputScreen implementation on 6739i mode “normal”	125
Figure 83: InputScreen implementation on 6739i mode “condensed”	126
Figure 84: InputScreen multiple inputs “condensed” (55i/57i/57iCT/9480i/9480iCT/6735i/6737i) .	135
Figure 85: InputScreen multiple inputs “condensed” (6739i)	135
Figure 86: InputScreen multiple inputs “normal” ((55i/57i/57iCT/9480i/9480iCT/6735i/6737i).....	136
Figure 87: InputScreen multiple inputs “normal” (6739i).....	137
Figure 88: CallLog Implementation	138
Figure 89: PhoneCallLog Example	144
Figure 90: AastralIPPhoneStatus implementation on the 6739i (no URI callback)	146
Figure 91: AastralIPPhoneStatus implementation on the 6739i (with URI callback)	146
Figure 92: PhoneStatus Example (non softkey phone)	149
Figure 93: PhoneStatus Example (softkey phone)	149
Figure 94: PhoneStatus Example (6739i)	150
Figure 95: Astra 6755i screen.....	165
Figure 96: Astra 6757i/6757i CT screen	165
Figure 97: One cell icon	167
Figure 98: Two cell icon	167
Figure 99: HTTP flow for XML applications	235
Figure 100: Auto-configuration message flow.....	243
Figure 101: Self-configuration implementation architecture	244
Figure 102: LDAP directory architecture.....	315
Figure 103: LDAP directory message flow.....	316

1 Introduction

1.1 Aastra XML API

Aastra SIP phones support an XML API since firmware release 1.3.0. This XML API allows external applications to control the display of the phone as well as its configuration.

The list of potential XML applications is endless, see chapter 9 for some examples of potential XML applications.

This document details the XML objects supported by the Aastra SIP phones using firmware version 3.3.1 and how to implement them.

1.2 Revision History

1.2.1 Version 3.3.1 (9143i / 9480i / 9480iCT / 6730i / 6731i / 6739i / 53i / 55i / 57i / 57iCT / 6863i / 6865i / 6867i)

- Firmware not available for 6735i/6737i
- Added support for 6863i, 6865i and 6867i

1.2.2 Version 3.3.1 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)

- Firmware not available for 6735i/6737i
- Wav.Repeat command removed.
- New Melody.Play and Melody.Stop commands to repeatedly play a wav file.

1.2.3 Version 3.3.1 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)

- Firmware not available for 6735i/6737i
- AastraIPPhoneConfiguration now allows locking/unlocking softkeys and programmable hardkeys using the “softkeyN locked: 0/1” parameter.
- New wave file streaming command Wav.Repeat to repeat the wave streaming until it is stopped by a Wav.Stop command.
- Volume control tag added to the wave streaming commands Wav.Play and Wav.Repeat.

1.2.4 Version 3.3.0 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)

- Firmware not available for 6735i/6737i
- AastraIPPhoneConfiguration now supports range settings in order for instance to reset a list of softkeys in a single command.
- New XML command to control all the softkey attached LEDs in a single command.
- New GoodbyeLockinURI parameter attaching an action to the Goodbye key when displayed XML UI object is in LockedIn mode.
- New phone variable \$\$ACTIVEPROXY\$\$ reflecting current active proxy and providing XML server redundancy information.
- Aastra6739i only
 - AastralIPPhoneStatus can be used to display icons on the top line
 - Custom icons can now be downloaded from the server as a png file
 - Label color in every UI object can now be configured
 - New Call log XML object to provide call logs or redial applications equivalent to the native 6739i UI.
 - New line wrapping control mechanism in AastraIPPhoneTextMenu items using the split tag

- Top line title and icon can now be customized by the XML UI objects using `TopTitle` tag
- AastralPPhoneInputScreen now supports immediate edition mode using the `defaultFocus` tag

1.2.5 Version 3.2.2 (9143i/9480i/9480iCT/6730i/6731i/6735i/6737i/6739i/53i/55i/57i/57iCT)

- Support for Aastra 6735i and Aastra 6737i SIP phones

1.2.6 Version 3.2.2 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)

- Some bug fixes, see firmware release notes for more details
- Aastra6739i only
 - Default softkey “Done” for all UI objects
 - Idle screen now supports a background picture.

1.2.7 Version 3.2.1 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)

- Aastra6739i only
 - AastralPPhoneImageScreen and AastralPPhoneImageMenu now support jpeg images on top of png images
 - AastralPPhoneImageScreen and AastralPPhoneImageMenu now support 3 image size
 - 380x340 pixels
 - 640x340 pixels
 - 640x480 pixels
 - AastralPPhoneTextMenu now supports a new tag “unitScroll” to change the behavior of the scrolling and mimic the behavior of a 57i (the arrow keys move the selected item one by one)
 - AastralPPhoneStatus now supports custom icons to be displayed along with the alert/message text and also an URI to be triggered when the user actually presses the message.
 - AastralPPhoneInputScreen now supports the `inputLanguage` tag
 - Wave file streaming commands now supported
- All phones
 - AastralPPhoneTextMenu now supports new tags “scrollUp” and “scrollDown” which are triggered when the scrolling reaches the top or the bottom of the menu items
 - Feedback on XML errors as well as ongoing operations is now provided to the user.

1.2.8 Version 3.2.0 (9143i/9480i/9480iCT/6730i/6731i/6739i/53i/55i/57i/57iCT)

- Aastra 6739i now supports
 - AastralPPhoneImageScreen loading a remote png file
 - AastralPPhoneImageMenu loading a remote png file
 - Custom XML menu under the “Services” key
 - Beep in the root tag
 - Icons for Textmenu items and custom softkeys
 - RTP streaming
 - Lock/Unlock and ClearCallersList commands
 - LED control on expansion modules
- XML object `AastralPPhoneDirectory` no longer supported
- Aastra 6751i no longer supported
- Play Wav command command is supported on all phones but the 6739i.

1.2.9 Version 3.0.1 (6739i)

- Support for Keypress emulation but limited to hard keys.
- AastraIPPhoneInputScreen now supports multiple input fields.
- AastraIPPhoneFormattedTextScreen is now supported with 1 enhanced tag and 1 new tag to leverage the Aastra 6739i color display
 - Size now supports “small” and “large” on top of “double”
 - A Color tag is now supported
- AastraIPPhoneStatus is now supported.
- Also the capability to override a ‘telephony’ key by an XML script is now supported using the following configuration parameters:
 - services script
 - callers list script
 - directory script
 - redial script
 - xfer script
 - conf script
 - icom script
 - voicemail script
 - options script
- UTF-8 encoding is now supported and is the default mode.

1.2.10 Version 3.0.0 (6739i)

- First version of the XML API SDK dedicated to the 6739i running firmware 3.0.0

1.2.11 Version 2.6.0 (9143i/9480i/9480iCT/6730i/6731i/51i/53i/55i/57i/57i CT)

- AastraIPPhoneInputScreen now supports up to 10 fields in normal mode.
- New action uri connected which is triggered when the phone enters in the “connected” state.
- New line parameter for the Dial tag in AastraIPPhoneTextMenu to indicate which SIP line to use when the dial command is performed
- New DialLine URI equivalent to the Dial command but adds the SIP line to use.
- New AastralPPhoneExecute command “UploadSystemInfo” for crash file and configuration files retrieval

1.2.12 Version 2.5.3 (9143i/9480i/9480iCT/6730i/6731i/51i/53i/55i/57i/57iCT)

- New scrollConstrain tag for AastralPPhoneTextMenu to control the wrap-around in the list. When enabled, scrolling down on the last entry of the list does not wrap to the first item.
- New numberLaunch tag for AastralPPhoneTextMenu to allow a user to launch the following menu by typing its number on the keypad, of course it is limited to menu 1-9.
- New scrollUp, scrollDown, scrollLeft and scrollRight tags for

- AastralPPhoneTextScreen,
- AastralPPhoneFormattedTextScreen
- AastralPPhoneImageScreen

which allows an override of the navigation keys default behaviour.

- “Please Wait...” is now displayed instead of “Loading Page...” when the phone is waiting for an answer of the XML server.
- AastralPPhoneExecute, when using a regular URI the command now supports phone variables.
- Localized input mapping has been modified to allow the input of the ‘+’ character by pressing ‘0’ twice.
- XML objects now properly support UTF-8 for the encoding and the charset.

1.2.13 Version 2.5.2 (9143i/9480i/9480iCT/6730i/6731i/51i/53i/55i/57i/57i CT)

- Documentation fixes.
- Object oriented php classes updates.
- Updated sample csv directory application allowing search by company.
- Updated media applications.

1.2.14 Version 2.4.1 (9143i/9480i/9480iCT/6730i/6731i/51i/53i/55i/57i/57i CT)

- Support for the new Aastra 6730i and 6731i SIP phones.

1.2.15 Version 2.4.0 (9143i/9480i/9480iCT/51i/53i/55i/57i/57i CT)

- New action uri `onRegistrationEvent` which is triggered each time the registration status of the phone changes.
- New `setType` tag for `AastralPPhoneConfiguration` which allows to set configuration parameter at a different precedence than just the server provided configuration.
- New contextual softkeys ‘Drop’, ‘Conf’ and ‘Xfer’ available in the connected state, these new softkeys are similar to the ‘Answer’ and ‘Ignore’ softkeys for incoming call state. For the non softkey phones, new ‘allowDrop’, ‘allowXfer’ and ‘allowConf’ have been added.
- `action uri disconnected` now triggered at the end of a wav file stream.

1.2.16 Version 2.3.1 (9143i/9480i/9480iCT/51i/53i/55i/57i/57i CT)

- New configuration parameter `webapps uri` to
 - Remove the WebApps option from the 51i, 53i, and 9143i Service Menus, and disable the WebApps key for all other phone models.
 - Specify a customized URI for the WebApps key instead of using the default URI of [http://xml.myaastra.com/?localip=\\$\\$LOCALIP\\$\\$](http://xml.myaastra.com/?localip=$$LOCALIP$$)

1.2.17 Version 2.3.0 (9143i/9480i/9480iCT/51i/53i/55i/57i/57i CT)

New XML configuration

- The following telephony keys can now be assigned to call an XML script instead of the regular telephony feature:

- Redial
- Transfer
- Conference
- Intercom
- VoiceMail
- Phone 'Options' Key can now be redirected to an XML script.
 - On a normal key press of the options key the XML application set in the URI is displayed
 - On a long key press the normal/local options menu is displayed
- New configuration `auto offhook` to prevent the phone from going into the offhook/dialing state when the handset is off hook and the call ends. This parameter is very useful for XML applications such as Visual Voicemail to stay in the application at the end of the message.

New PhoneExecute commands

- Play/stop a wav file hosted on a HTTP or TFTP server.
- Simulate keypress on the phone
- Reset local Callers list
- Reset local Directory
- Reset local Redial list
- Delete the local configuration and reboot

New attributes

- New root tag attribute `allowDTMF` in some interactive UI objects to allow DTMF passthrough when the phone is in the connected mode.
 - `AastralIPPhoneTextScreen`,
 - `AastralIPPhoneFormattedTextScreen`,
 - `AastralIPPhoneImageScreen`

New action uri(s)

- `action uri disconnected` is triggered when the phone transitions from any active (non idle) call state to idle.

New URL variables

- | | |
|--------------------------------------|---|
| ● <code>\$\$LOCALIP\$\$</code> | Local IP address of the phone |
| ● <code>\$\$CALLDURATION\$\$</code> | Current/last Call duration |
| ● <code>\$\$CALLDIRECTION\$\$</code> | Current/last call direction |
| ● <code>\$\$LINESTATE\$\$</code> | Line state when the 'disconnect' event happens. |

Others

- Custom SSL certificates for HTTPS can now be loaded on the phones.
- Pre-programmed XML Service Key called WebApps pointing to an Aastra hosted service located at [http://xml.myaastra.com/?localip=\\$\\$LOCALIP\\$\\$](http://xml.myaastra.com/?localip=$$LOCALIP$$) that you can also access from your Web browser at www.myaastra.com

Enhancements/fixes

- XML calls are now non-blocking for action uri and pushed XML objects
- Action uri GET calls no longer display an error message if failure to load the page.
- Unicast and Multicast mixed RTP streaming, the phone can now send ear+mouth and not just mouth or receive an RTP stream over an existing one.
- HTTPS URI now supported in the AastraIPPhoneExecute object.

1.2.18 Version 2.2.1 (9143i/9480i/9480iCT/51i/53i/55i/57i/57i CT)

- Support of the 9143i, 9480i and 9480iCT SIP Phones

1.2.19 Version 2.2.0 (51i/53i/55i/57i/57i CT)

- New wrapList root tag for the AastraIPPhoneTextMenu object to display menu items on 2 lines.
- Number of items extended to 30 (instead of 15) for the AastraIPPhoneTextMenu object.
- Action uri polling with a customizable interval to have the phone call an XML URI on a regular basis
- SIP notify to trigger a XML GET, to have the phone making a XML call when an authorized SIP Notify is sent via the SIP proxy server.
- The XML browser is now available when the phone Web UI is disabled.
- Support of Unicast and Multicast RTP streaming triggered by an XML call.
- Improved error handling, the phone now displays the HTTP error message when available instead of “Cannot display”.
- XML GET are now non blocking, the phone keeps processing events when waiting for an answer to an HTTP GET.

1.2.20 Version 2.1.1 (51i/53i/55i/57i/57i CT)

- Support for the new 51i SIP Phone
- Lock and Unlock command for the AastraIPPhoneExecute object to lock or unlock the phone.
- inputLanguage root tag for the AastraIPPhoneInputScreen XML object. This tag allows access to language localized input characters.
- New configuration parameter `xml lock override` added in order to allow a XML Push when the phone is locked.

1.2.21 Version 2.1.0 (53i/55i/57i/57i CT)

- doneAction root tag for the AastraIPPhoneTextScreen and AastraIPPhoneFormattedTextScreen XML objects. This tag allows redirecting the user to a specified URI after a “Done” key press; this can be very useful for non softkey phones such as the Aastra 53i.
- New custom softkeys “Ignore” and “Answer” and “allowAnswer” tag to answer a call when an XML page is called upon the incoming call.

- New custom softkey (List) for the `AastraIPPhoneInputScreen` to enter a list of configured symbols. This new softkey allows for instance an easy email address input using the “@.” List of symbols.
- New configuration parameter `xml get timeout` added in order to control the server answer delay.
- New configuration parameters `services script`, `directory script` and `callers list script` to override internal applications and link the features to an XML script.

1.2.22 Version 2.0.2 (53i/55i/57i/57i CT)

- New command “FastReboot” for the `PhoneExecute` object to trigger a fast reboot of the phone (no firmware check and limited language package check).
- New universal URI type “`Led:`” support to control the LED state of the phone keys when they are typed as XML.
- Extension of the `AastraIPPhoneInputScreen` XML object to support multiple input fields (55i/57i and 57i CT only)

1.2.23 Version 2.0.1 (53i/55i/57i/57i CT)

New XML objects

- `AastraIPPhoneConfiguration`
- `AastraIPPhoneImageScreen (55i/57i/57i CT)`
- `AastraIPPhoneImageMenu (55i/57i/57i CT)`
- `AastraIPPhoneFormattedScreen`

Other

- HTTPS support for XML calls.
- Custom port support for http(s) XML calls
- “`Dial:XXXX`” universal URI support
- New “`style`” root tag for `AastraIPPhoneTextMenu`
- Optional “`Title`” tag for all UI objects
- “`Title`” wrapped on 2 lines (“`wrap`” tag).
- `Cancel remap` for all UI XML objects
- `Timeout` attribute common to all UI XML objects
- `LockIn` attribute common to all UI XML objects
- `triggerDestroyOnExit` root tag for non UI objects
- Icons in `AastraIPPhoneTextMenu (55i/57i/57i CT)`
- Icons in customizable softkeys (55i/57i/57i CT)
- New HTTP header to indicate the presence of expansion modules
- New input types for `AastraIPPhoneInputScreen`
 - `timeUS`, `timeInt`
 - `dateUS`, `dateInt`

1.2.24 Version 1.4.2 (9112i/9133i/480i/480i CT)New attributes

- New “style” tag for AastraIPPhoneTextMenu

1.2.25 Version 1.4.1 (9112i/9133i/480i/480i CT)New XML objects

- AastraIPPhoneStatus
- AastraIPPhoneExecute

Action URIs

- | | |
|----------------------------|-----------------------|
| • End of the boot sequence | action uri startup |
| • Successful registration | action uri registered |
| • On-hook | action uri onhook |
| • Off-hook | action uri offhook |
| • Incoming call | action uri incoming |
| • Outgoing call | action uri outgoing |

URI System variables

- | | |
|------------------------|--|
| • \$\$SIPUSERNAME\$\$ | line user name |
| • \$\$DISPLAYNAME\$\$ | the display name of the focused line |
| • \$\$SIPAUTHNAME\$\$ | the SIP auth name of the focused line |
| • \$\$PROXYURL\$\$ | the SIP proxy of the focused line |
| • \$\$INCOMINGNAME\$\$ | returns the Caller-ID of the incoming call |
| • \$\$REMOTENUMBER\$\$ | returns the number of the remote |

Other

- No more need of URL encoding for pushed pages
- Beep attribute common to all XML objects

1.2.26 Version 1.3.1 (9112i/9133i/480i/480i CT)Customizable softkeys (480i/480i CT)

- Select
- Exit
- Dial
- Submit
- BackSpace
- NextSpace
- Dot
- ChangeMode

Other

- XML softkeys (480i/480i CT)
- XML programmable keys (9112i/9133i)
- destroyOnExit attribute common to all XML objects

1.2.27 Version 1.3.0 (9112i/9133i/480i/480i CT)

Fist revision of this document

New XML objects

- AastraIPPhoneTextScreen
- AastraIPPhoneTextMenu
- AastraIPPhoneInputScreen
- AastraIPPhoneDirectory (480i/480i CT)

2 XML and the Aastra IP Phones

2.1 What is XML?

XML stands for **eXtensible Markup Language**. It is a markup language much like HTML. HTML was designed to display data and to focus on how data looks. XML was designed to describe data and to focus on what data is.

The following are characteristics of XML:

- XML tags are not predefined. You must define your own tags
- XML uses a Document Type Definition (DTD) or an XML Schema to describe the data
- XML with a DTD or XML Schema is designed to be self-descriptive
- XML is a W3C Standard Recommendation

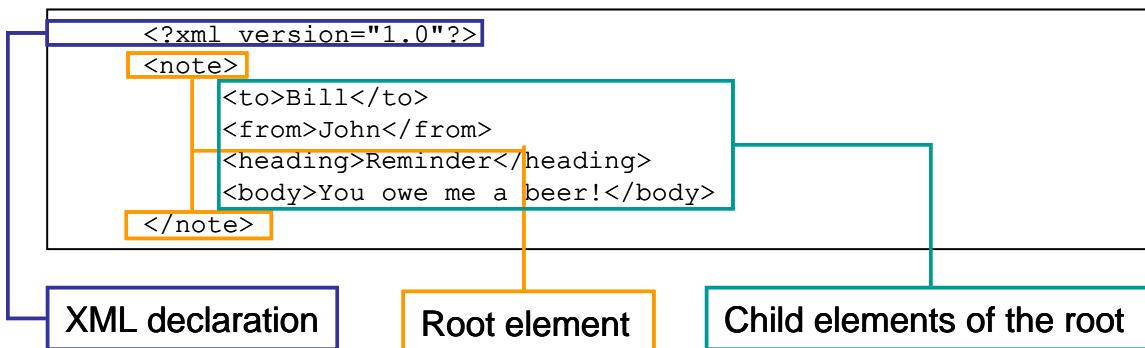


Figure 1: Basic XML document

More information available at <http://www.xml.com>

2.2 Functionality

The XML browser in Aastra IP phones allows developers to create custom services that they can use via the phone's keypad and display. These services include things like weather and traffic reports, contact information, company info, stock quotes, or custom call scripts.

With firmware release 3.3.1, the Aastra 6739i XML API supports 5 proprietary objects that allow the creation of powerful XML applications.

There are 2 types of XML objects:

- UI objects, XML objects which will use the display of the phone when they are received.
- Non UI objects, XML objects which have no direct impact on the current display.

The supported objects are:

- TextMenu object (UI)
- TextScreen object (UI)
- FormattedTextScreen (UI)
- InputScreen object (UI)
- ImageScreen (UI)

- ImageMenu (UI)
- Execute object
- Configuration object
- Status object

Some of these objects also support customizable softkeys that are declared as an independent object.

The following sections describe the process of creating XML objects for the Aastra SIP phones.

2.3 How does it work?

Leveraging on the IP infrastructure, Aastra has decided to develop the browser capability on the phone using the HTTP transport protocol but as a direct support of HTML would not be suitable for the phone horsepower and limited display, the choice has been made to support only XML objects in the browser.

The Aastra SIP phones support two types of applications:

- Phone-initiated
- Server-initiated

2.3.1 Phone initiated application

The phone issues an HTTP (or HTTPS) GET command to the Web server, waits for the answer, decodes and displays this answer as any Web browser such as Microsoft Internet Explorer or Firefox would do as a Web client.

This can be done through a phone custom softkey and from the list of custom features (see chapter 7 for more details).

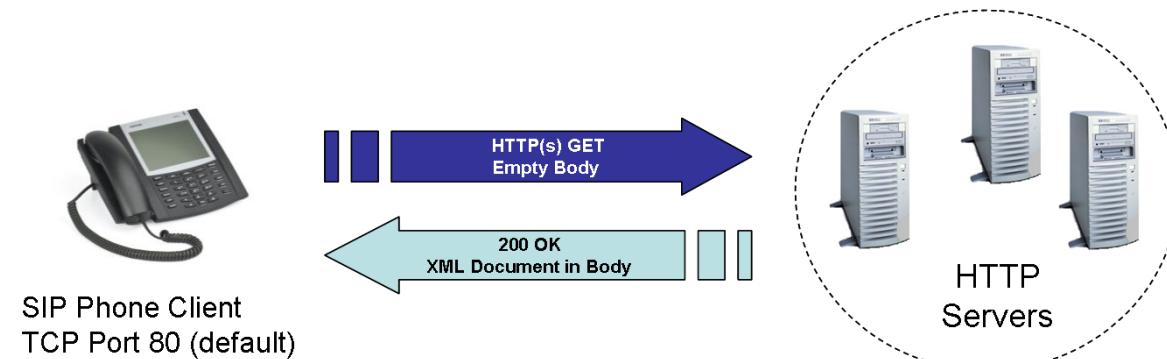


Figure 2: Aastra IP Phone acting as a client

When the phone performs an HTTP GET, it is a non blocking operation (phone will keep processing other events) as long as the GET is not requested by an action uri.

2.3.2 Server initiated application

The other type of application would be more used for alerting as an application is pushing an XML object to the phone. The phone is now acting as a limited Web Server.

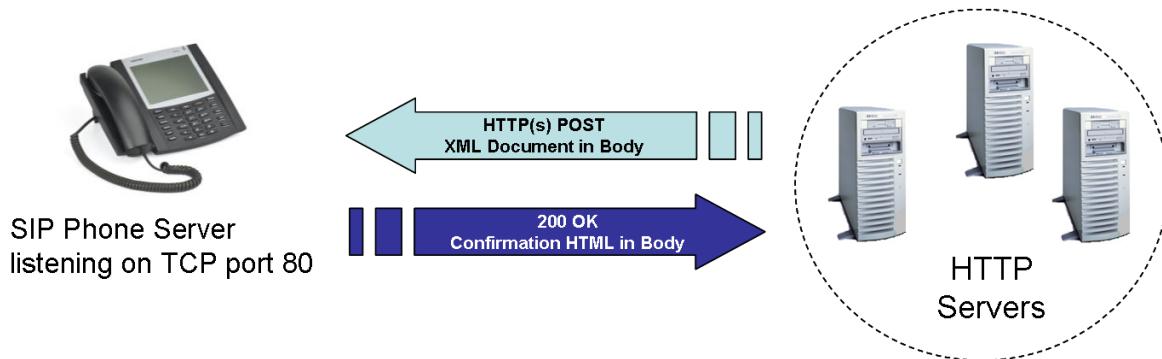


Figure 3: Aastra IP Phone acting as a server

2.4 System Architecture

The XML applications are hosted by one or multiple Web servers which will serve as a proxy to either other applications or to Internet Web servers.

2.4.1 Corporate applications

The following figure details the architecture to allow Aastra IP Phones to access an internal application. The application hosted by the Web server translates the phone requests to a protocol specific to the target application and formats the answer as an XML object to be displayed on the phone.

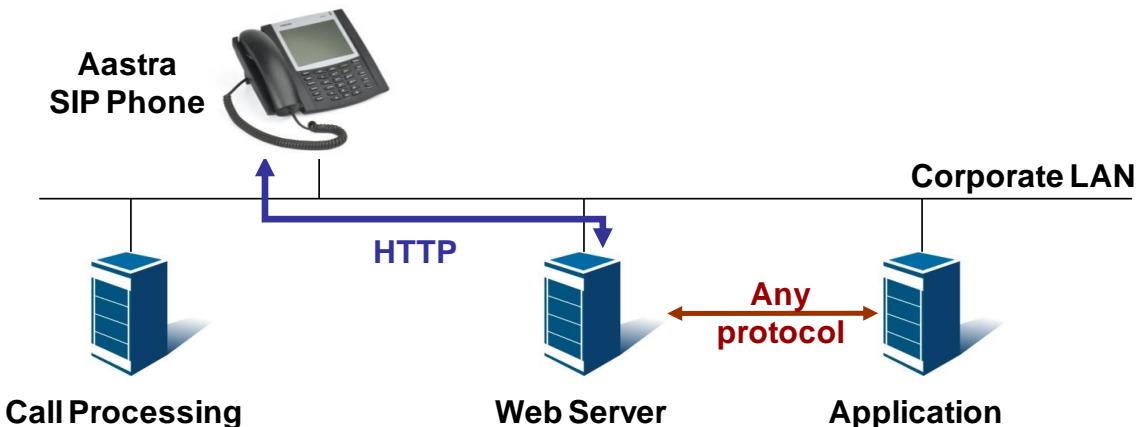


Figure 4: Access to an internal application

2.4.2 Internet applications

The following figure details the architecture of an XML application that would retrieve data from the internet such as a real-time stock-quote service.



Note: for certain Web applications that are not real time, the Internet content can be cached on the XML web server for a faster access.

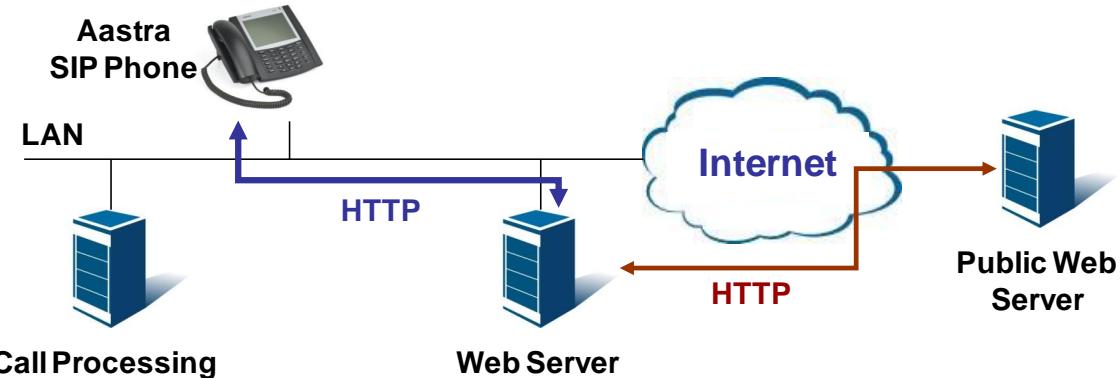


Figure 5: Access to an Internet application

2.4.3 Telephony applications

The following figure details the architecture of an XML application that would provide more telephony features at the phone level.

The application could for instance

- show the list of the parked calls and perform a pick-up,
- activate the Call forward or the DND on the server side
- control a conference from the phone
- login/logout from a call center, access to the voice mail messages
- ...

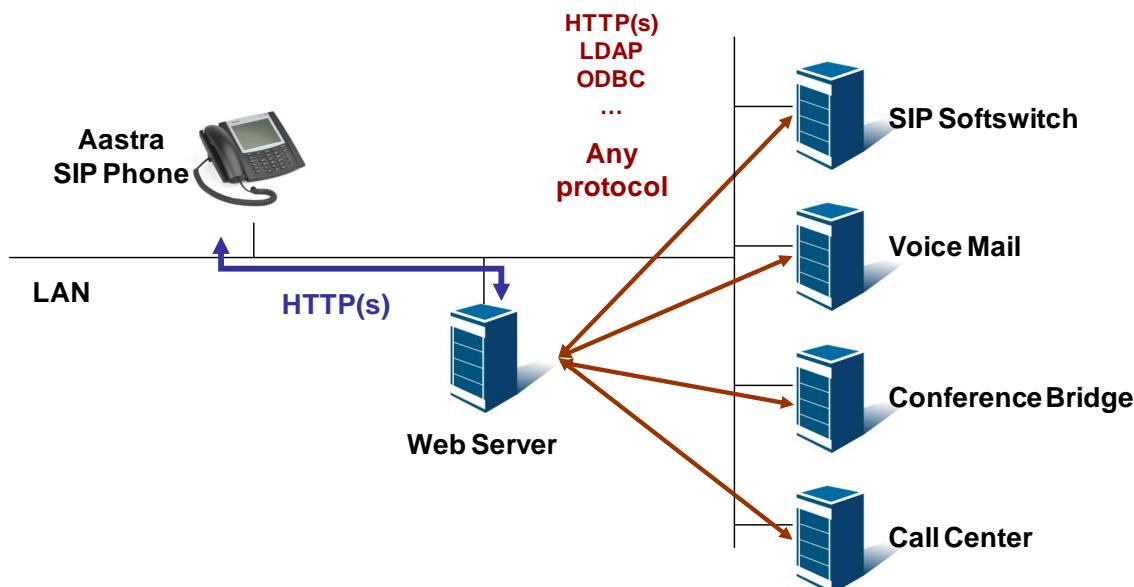


Figure 6: Access to a telephony application

2.5 Development environment

2.5.1 Typical software architecture

The following diagram details the typical architecture of an XML application.

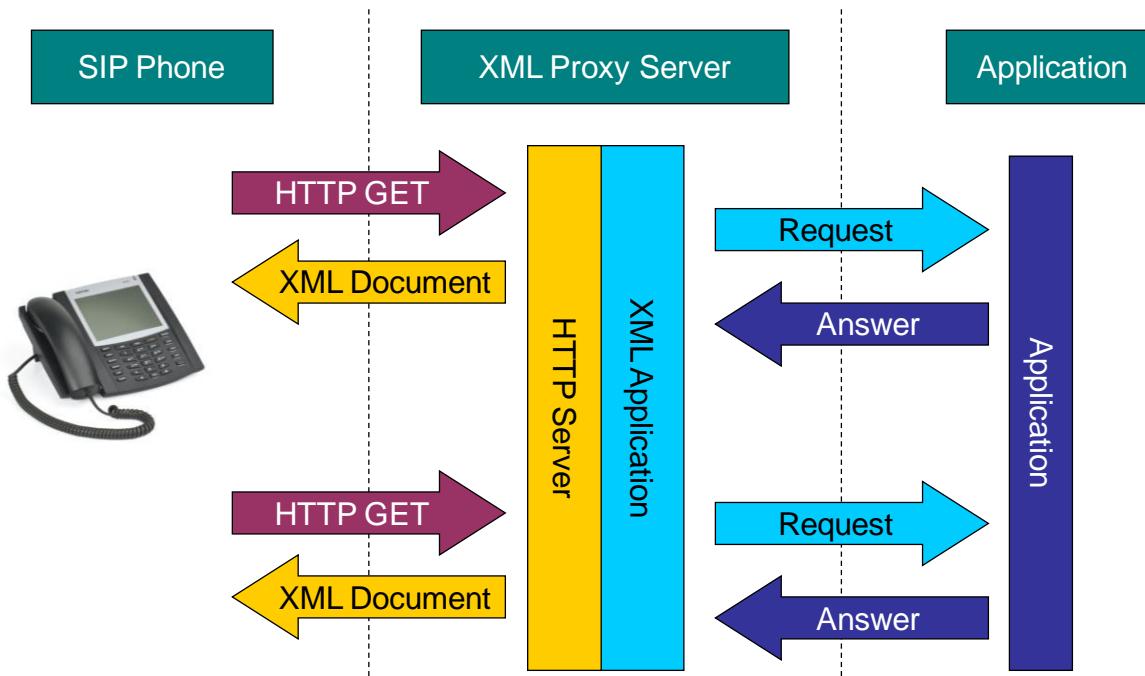


Figure 7: Typical software architecture of an XML application

The XML application is in fact translating requests from the phone to the protocol used by the external application and formats the answer into an XML document that the Aastra SIP phone can interpret.

2.5.2 Web server

There is no constraint in the choice of the Web Server software to be used for Aastra XML applications; the choice is more based on the tools needed for the development such as the script language, the corporate policy or even the cost of the platform.

The most common Web server applications supported are:

- Apache (<http://www.apache.org>) for Microsoft and Linux Operating systems
- Microsoft IIS for Microsoft Operating systems
- ...

2.5.3 Scripts/Languages

As for the Web Server, there is no specific constraint on the tools to develop the applications. All the languages supported to develop a Web application are supported to develop XML applications. The most common are:

- Compiled languages: C, C++, C#...
- Scripting languages: VBscript, Perl, Python, PHP, asp...

2.5.4 XML Validation tools

A large number of tools are available to validate the XML document you will be sending to the phone, these tools use the XSD schema (provided at chapter 11) to check the syntax of the generated XML document.

Example of a Web based tool

<http://tools.decisionsoft.com/schemaValidate/>

2.6 XML format

The text in the Aastra XML objects must be compliant with XML recommendations and special characters must be escape encoded:

Character	Name	Escape Sequence
&	Ampersand	&
"	Quote	"
'	Apostrophe	'
<	Left angle bracket	<
>	Right angle bracket	>

Figure 8: XML conversion table

To respect XML recommendations, the following header can be set at the beginning of the XML document,

```
<?xml version="1.0" encoding="ISO-8859-1"?>
```

Or

```
<?xml version="1.0" encoding="UTF-8"?>
```

By default UTF-8 is used by the phone.

2.7 HTTP format

The HTTP message sent to the Aastra SIP Phone must respect HTTP/1.1 and must include the following parameters in the header:

- Content-Length
- Content-Type

The other parameters of the HTTP header are optional such as charset.

Example

```

HTTP/1.1 200 OK
Date: Tue, 15 May 2007 14:24:33 GMT
Server: Apache/2.0.52 (CentOS)
X-Powered-By: PHP/4.3.11
Content-Length: 564
Connection: close
Content-type: text/xml; charset=ISO-8859-1

<?xml version="1.0" encoding="ISO-8859-1"?>
<AastraIPPhoneInputScreen type="string">
<Title>Title</Title>
<Prompt>Enter value</Prompt>
<URL>http://myserver.com/script.php</URL>
<Parameter>value</Parameter>
<Default></Default>
</AastraIPPhoneInputScreen>
  
```

} **HTTP Header**

} **HTTP body**

2.8 XML display control and keys

This chapter describes the available part of the display for each Aastra SIP phones as well as the keys that are controlled by the XML objects.

2.8.1 Aastra 6730i/6731i

The display and keys available for XML applications on an Aastra 6730i/6731i are:

- 3 lines of 16 characters for the display
- the left and right arrow navigation keys
- the up and down rocker navigation key

The 3rd line of the display is a command line and will be used to display the labels of the available actions. See chapter 3 for more details on how each XML object will use this line of command.

Depending on the XML object displayed on the phone,

- the left arrow navigation key can also be interpreted as a “cancel” key,
- the right arrow navigation key can also be interpreted as a “next” key,
- the “Delete” key is used as a “Backspace” for the AastralPPhoneInputScreen object.

See chapter 0 for more detailed information on each object.

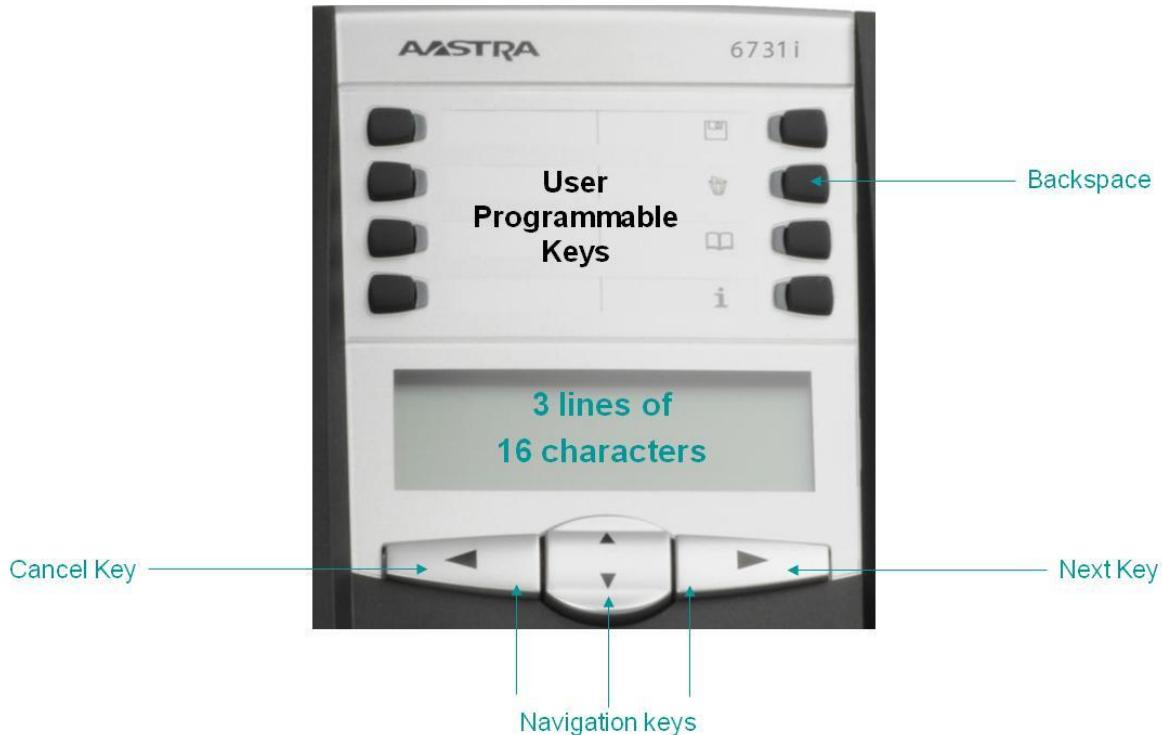


Figure 9: Aastra 6731i XML display and keys

2.8.2 Aastra 6753i

The display and keys available for XML applications on an Aastra 6753i are:

- 3 lines of 16 characters for the display
- the left and right arrow navigation keys
- the up and down rocker navigation key

The 3rd line of the display is a command line and will be used to display the labels of the available actions. See chapter 3 for more details on how each XML object will use this line of command.

Depending on the XML object displayed on the phone,

- the left arrow navigation key can also be interpreted as a “cancel” key,
- the right arrow navigation key can also be interpreted as a “next” key,
- the “Delete” key (second programmable key by default) is used as a “Backspace” for the AastralIPPhoneInputScreen object.

See chapter 0 for more detailed information on each object.

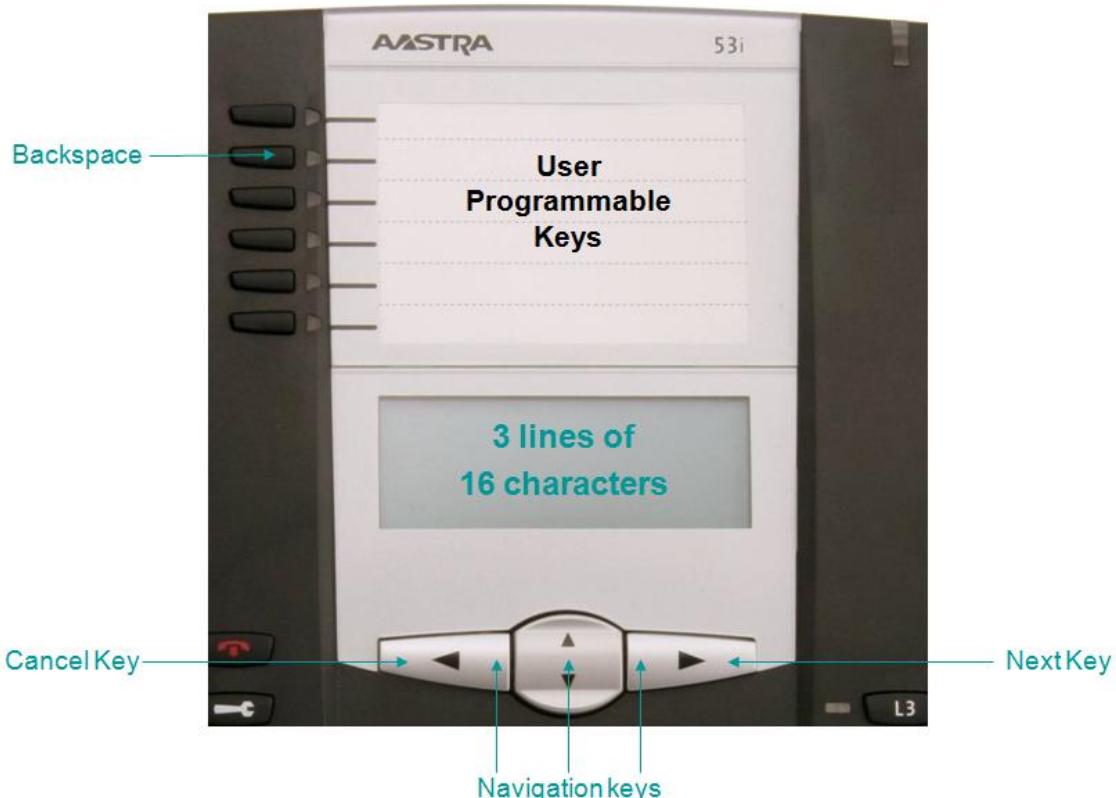


Figure 10: Aastra 6753i XML display and keys

2.8.3 Aastra 6755i/6735i

The display and keys available for XML applications on an Aastra 6755i and Aastra 6735i are:

- 5 lines of 22 characters for the display
- the left and right arrow navigation keys
- the up and down rocker navigation key
- 6 softkeys

Depending on the XML object displayed on the phone,

- the left arrow navigation key can also be interpreted as a “cancel” key,
- the right arrow navigation key can also be interpreted as a “next” key,

See chapter 3 for more detailed information on each object.

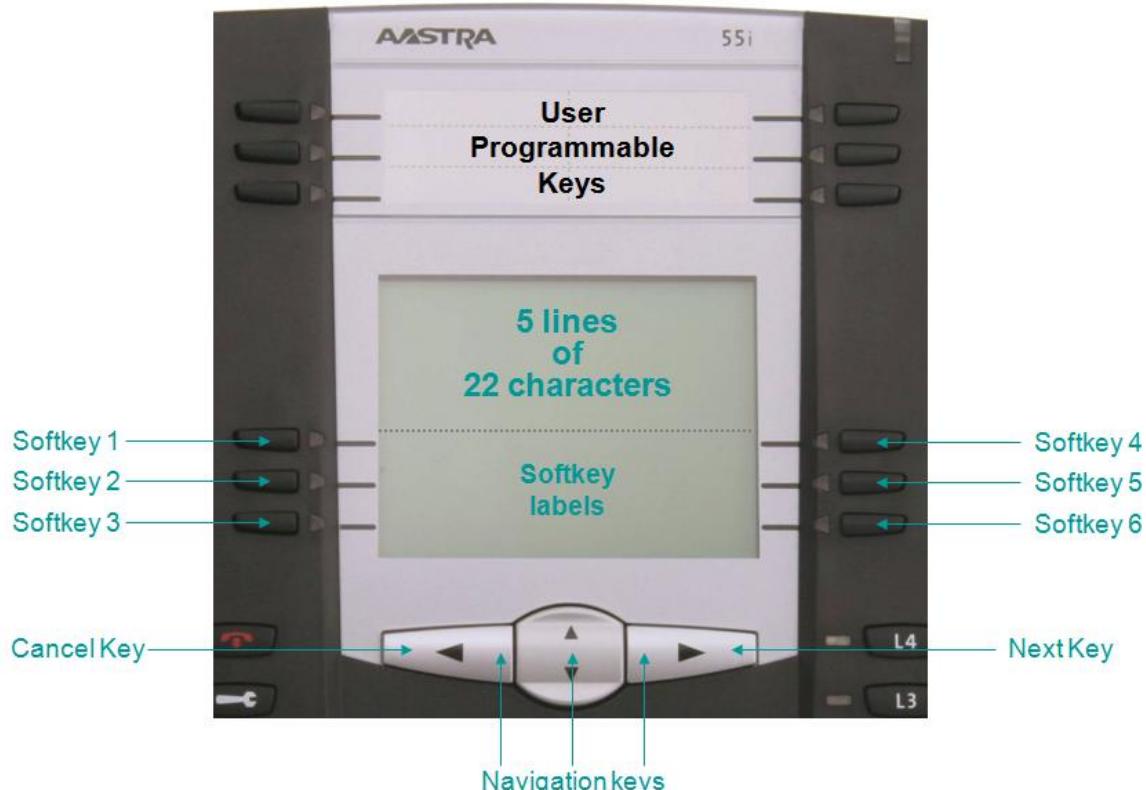


Figure 11: Aastra 6755i/6735i XML display and keys

2.8.4 Aastra 6757i/6757iCT/6737i

The display and keys available for XML applications on an Aastra 6757i/6757iCT/6737i are:

- 6 lines of 22 characters for the display
- the left and right arrow navigation keys
- the up and down rocker navigation key
- 6 softkeys

Depending on the XML object displayed on the phone,

- the left arrow navigation key can also be interpreted as a “cancel” key,
- the right arrow navigation key can also be interpreted as a “next” key,

See chapter 3 for more detailed information on each object.

→ **Note:** the top 3 lines of the display are not available for XML applications; they are dedicated to the labels of the top softkeys.

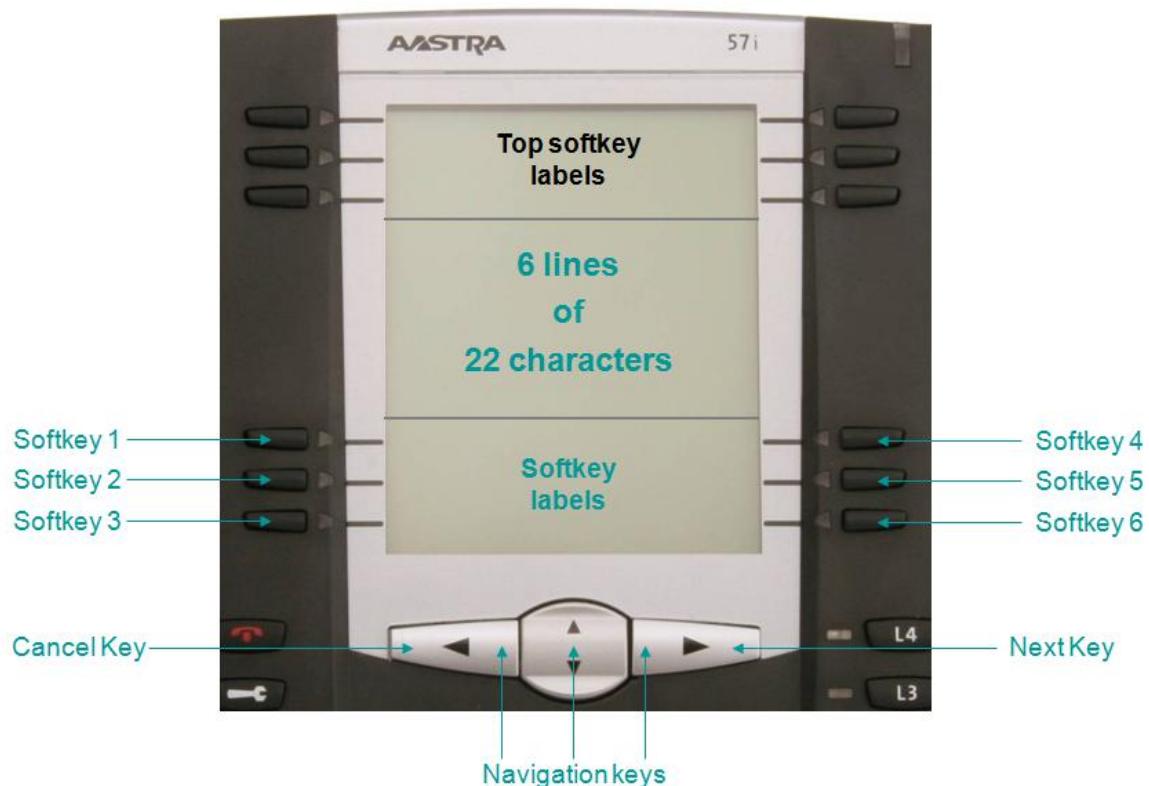


Figure 12: Aastra 6757i/6757iCT/6737i XML display and keys

2.8.5 Aastra 9143i

The display and keys available for XML applications on an Aastra 9143i are:

- 3 lines of 16 characters for the display
- the left and right arrow navigation keys
- the up and down arrow navigation keys

The 3rd line of the display is a command line and will be used to display the labels of the available actions. See chapter 0 for more details on how each XML object will use this line of command.

Depending on the XML object displayed on the phone,

- the left arrow navigation key can also be interpreted as a “cancel” key,
- the right arrow navigation key can also be interpreted as a “next” key,
- the “Delete” key is used as a “Backspace” for the AastralPPhoneInputScreen object.

See chapter 3 for more detailed information on each object.

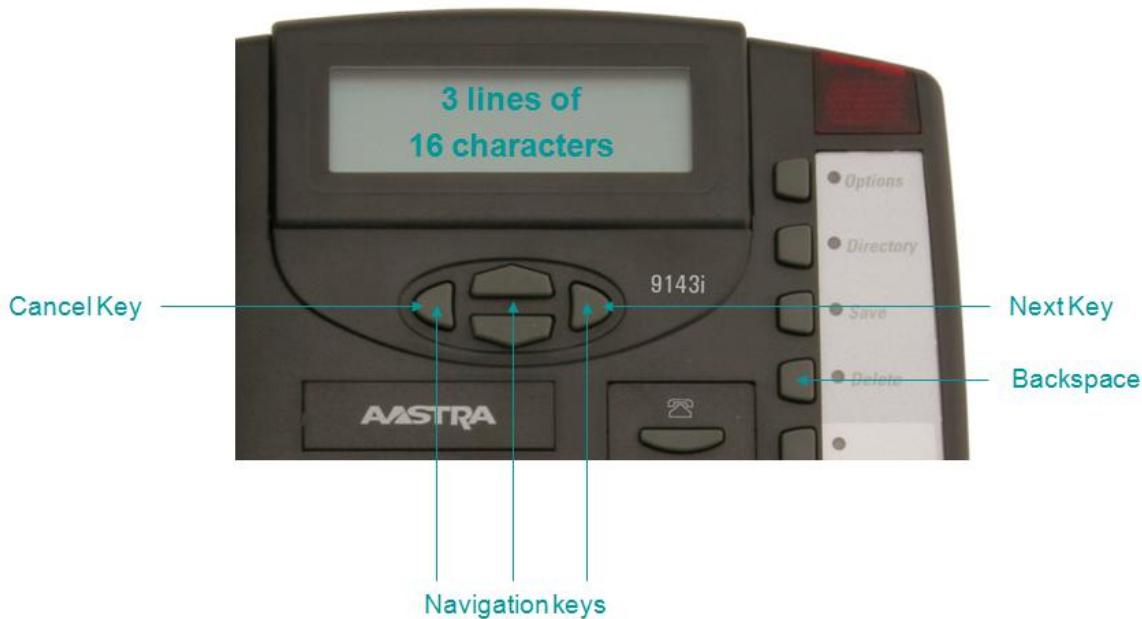


Figure 13: Aastra 9413i XML display and keys

2.8.6 Aastra 9480i/9480iCT

The display and keys available for XML applications on an Aastra 9480i/9480iCT are:

- 5 lines of 21 characters for the display
- the left and right arrow navigation keys
- the up and down arrow navigation keys
- 6 softkeys

Depending on the XML object displayed on the phone,

- the left arrow navigation key can also be interpreted as a “cancel” key,
- the right arrow navigation key can also be interpreted as a “next” key,

See chapter 3 for more detailed information on each object.



Figure 14: Aastra 9480i/9480iCT XML display and keys

2.8.7 Aastra 6739i

The display and keys available for XML applications on an Aastra 6739i are:

- 10 softkeys
- A graphical zone for the XML objects
- A Cancel/Back key
- Scroll Up/Down keys

See chapter 3 for more detailed information on each XML object.

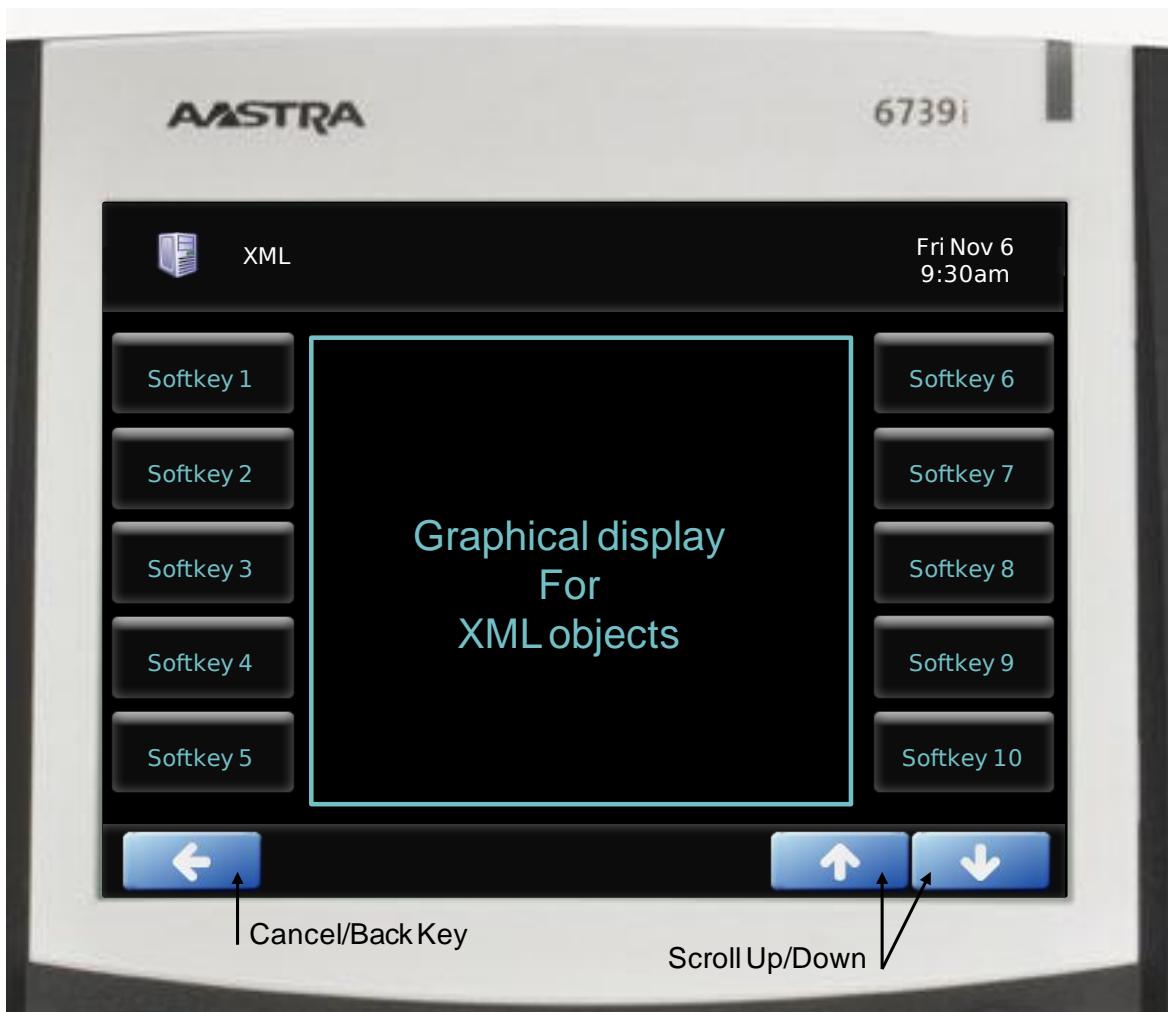


Figure 15: Aastra 6739i XML display and keys

2.8.8 Aastra 6863i

The display and keys available for XML applications on an Aastra 6863i are:

- 3 lines of 16 characters for the display
- the left and right arrow navigation keys
- the up and down arrow navigation keys

The 3rd line of the display is a command line and will be used to display the labels of the available actions. See chapter 3 for more details on how each XML object will use this line of command.

Depending on the XML object displayed on the phone,

- the left arrow navigation key can also be interpreted as a “cancel” key,
- the right arrow navigation key can also be interpreted as a “next” key,
- the “Delete” key is used as a “Backspace” for the AastralPPhoneInputScreen object.

See chapter 3 for more detailed information on each object.

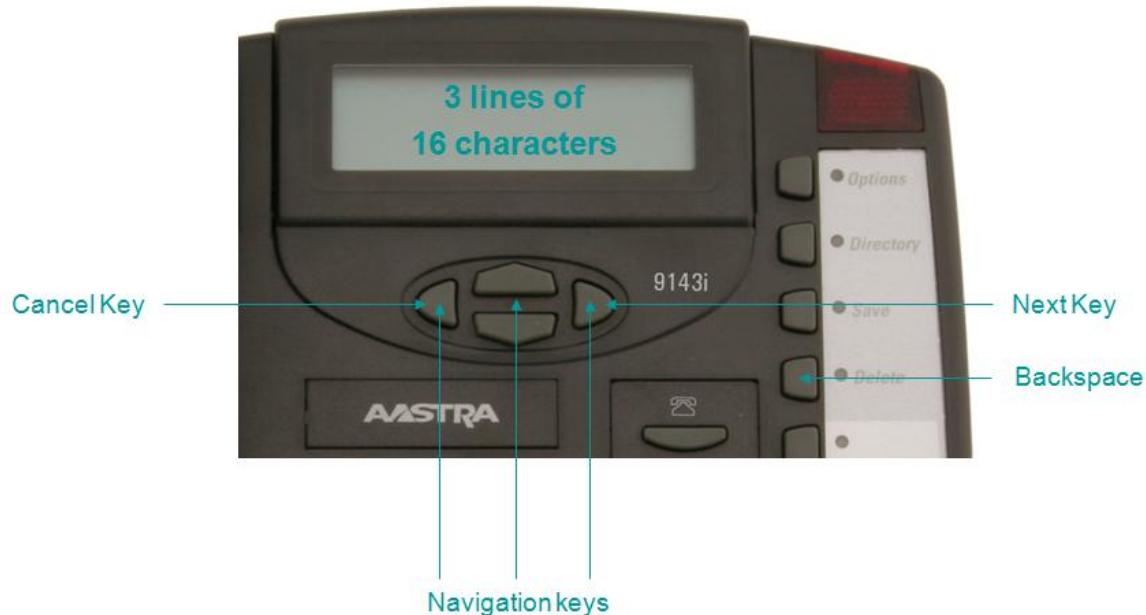


Figure 16: Aastra 9413i XML display and keys

2.8.9 Aastra 6865i

The display and keys available for XML applications on an Aastra 6865i are:

- 3 lines of 16 characters for the display
- the left and right arrow navigation keys
- the up and down arrow navigation keys

The 3rd line of the display is a command line and will be used to display the labels of the available actions. See chapter 3 for more details on how each XML object will use this line of command.

Depending on the XML object displayed on the phone,

- the left arrow navigation key can also be interpreted as a “cancel” key,
- the right arrow navigation key can also be interpreted as a “next” key,
- the “Delete” key is used as a “Backspace” for the AastralPPhoneInputScreen object.

See chapter 3 for more detailed information on each object.



Figure 17: Aastra 9413i XML display and keys

2.8.10 Aastra 6867i

The display and keys available for XML applications on an Aastra 6867i are:

- 4 softkeys (6 logical softkeys for XML applications)
- A graphical zone for the XML objects
- Left/Right arrow navigation keys
- Up/Down arrow navigation keys
- Select key

See chapter 3 for more detailed information on each XML object.



Figure 18: Aastra 6867i XML display and keys

3 Aastra IP Phone XML Objects

This chapter details all the XML objects supported by the Aastra SIP phones

In this chapter:

Non softkey phones are Aastra phones without softkey:

- Aastra 6730i/6731i
- Aastra 9143i
- Aastra 6753i a.k.a 53i
- Aastra 6863i/6865i

Softkey phones are Aastra phones with softkeys:

- Aastra 9480i/9480iCT
- Aastra 6755i a.k.a 55i and 6735i
- Aastra 6757i/6757iCT a.k.a 57i/57iCT and 6737i
- Aastra 6867i (graphical screen)

Touchscreen phones are Aastra phone(s) with a color graphical touch screen

- Aastra 6739i

Notes:

-
- the size of an XML object can not exceed 10000 bytes (10 kb).
 - per XML specifications, only one XML object is supported in the XML document sent to the phone.
-

3.1 TextMenu Object (All models)

The TextMenu object allows developers to create a list of menu items on the IP phones. Go-to line support, arrow indicator, and scroll key support are built into these objects, along with the “**Select**” and “**Done**” softkeys for the phones supporting softkeys. The TextMenu object allows users to navigate the application, by linking HTTP requests to menu items.

For more details on the TextMenu behavior using the `Selection` tag or the `Dial` tag, please refer to section 4.13 and 4.14.

3.1.1 Implementation (softkey and non softkey phones)

Object native interaction

- **Select** Executes the content of the URI field assigned to the selected MenuItem;
- **Exit** Redisplays the previous XML object present in the phone browser.

Non softkey phone keys

The object is displayed on one line or one item at a time. The Up and Down arrow keys allow the user to browse the list up and down.

Line selected	Label	Keys	
Title	Use ^v to view	Up and Down Arrow	Browse up or down
		Left Arrow	Exit
Item	vNext	Up and Down Arrow	Browse up or down
	>Enter	Right Arrow	Select
		Left Arrow	Exit

Softkey phone keys

The object is displayed on up to 6 lines, the title stays on the top of the display. The Up and Down arrow keys allow the user to browse the list up and down.

Line selected	Keys
Item	Up and Down Arrow Browse up or down
	Right Arrow Select
	Left Arrow Exit

Note:

- the Left Arrow key interaction is disabled if the `LockIn` tag is set to "yes".
 - • the Left Arrow key interaction can be modified using the `cancelAction` tag.
 - If the `LockIn` tag is set to "yes" and the `cancelAction` tag is configured, pressing the Left Arrow key triggers the configured `cancelAction`.
-

Object default Softkeys (softkey phones)

Position	Label	Interaction	URIs
1	Select	Select: Executes the content of the URI field assigned to the selected MenuItem;	SoftKey:Select
6	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

3.1.2 Implementation (6739i)

The title is displayed at the top of the XML area and uses up to 2 lines. The menu items are displayed after the title area and up to 4 items can be displayed at a time.

The  key is mapped to the `cancelAction` tag, if not specified the XML object is destroyed.

The  keys allow up and down scrolling in order to display the complete list of items. When scrolling, the title area remains static.



Note: the key interaction is disabled if the LockIn tag is set to "yes".

The item prompts are automatically wrapped on 2 lines if needed.

The green line around the button indicates that the item is selected.

The icon located on the right side of each item is the "Select" key and triggers the default URI of the object.

The icon located on the right side of an item is displayed only if the Dial tag is configured for the item.

Object default Softkeys

Ten customizable softkeys are available for this object.

Position	Label	Interaction	URIs
10	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

The following figure details how the `AastraIPPhoneTextMenu` is implemented on the Aastra 6739i.



Figure 19: TextMenu Implementation on 6739i

3.1.3 XML Description

“Red” tags indicates that the tag does not apply to all phones, when not supported the tags are just ignored.

```

<AastraIPPhoneTextMenu
  defaultIndex = "some integer"
  destroyOnExit = "yes/no"
  style = "numbered/none/radio"
  Beep = "yes/no"
  Timeout = "some integer"
  LockIn = "yes/no"
  GoodbyeLockInURI = "some URI"
  allowAnswer = "yes/no"
  allowDrop = "yes/no"
  allowXfer = "yes/no"
  allowConf = "yes/no"
  cancelAction = "some URI"
  wrapList = "yes/no"
  scrollConstrain = "yes/no"
  unitScroll = "yes/no"
  scrollUp = "Some URI"
  scrollDown = "Some URI"
  numberLaunch = "yes/no"
>
  <Title      wrap="yes/no"
             Color="white/black/red/green/brown/blue/magenta
                     cyan/lightgray/darkgray/lightred/lightgreen
                     yellow/lightblue/lightmagenta/lightcyan"
    >Menu Title</Title>
  <TopTitle   icon="icon index"
             Color="white/black/red/green/brown/blue/magenta
                     cyan/lightgray/darkgray/lightred/lightgreen
                     yellow/lightblue/lightmagenta/lightcyan"
    >Top Title</TopTitle>
  <MenuItem base = "http://base/" icon = "icon index">
    <Prompt Color="white/black/red/green/brown/blue/magenta
             cyan/lightgray/darkgray/lightred/lightgreen
             yellow/lightblue/lightmagenta/lightcyan"
            split="integer"
    >First Choice</Prompt>
    <URI>http://somepage.xml</URI>
    <Dial line="SIP line">Number to dial<Dial>
    <Selection>Selection</Selection>
  </MenuItem>
  <IconList>
    <Icon index = "int">Icon:Iconname or HEX string</Icon>
    <!--As many as different icons used in the object -->
  </IconList>
  <!--Additional Menu Items may be added (up to 30)-->
  <!--Additional Softkey Items may be added (softkey phones)-->
</AastraIPPhoneTextMenu>

```

Notes:

-
- The number of items in a TextMenu object is limited to 30.
 - You must declare at least one item in a TextMenu or the phone will generate a parsing error.
 - 6731i supports only “numbered” style.

XML Document Objects

Document Object	Position	Type	Comments
AastraIPPhoneTextMenu	Root tag	Mandatory	Root object
defaultIndex	Root tag	Optional	Position of the cursor when the XML object is open. If not specified the arrow is positioned on the first menu item.
style	Root tag	Optional	“numbered/none/radio” indicates the style of the TextMenu. Default is “numbered”. <i>Ignored on 6731i, style is always “numbered”</i> <i>Ignored on 6867i and 6739i, style is always “none”</i>
destroyOnExit	Root tag	Optional	“yes/no” indicates if the object is kept or not in the phone browser after exit. If not specified, the object is kept in the browser.
cancelAction	Root tag	Optional	Defines the URI to be called when the user cancels the XML object.
wrapList	Root tag	Optional	“yes” or “no” to indicate if the items will be text wrapped on 2 lines, default is “no”. <i>Ignored on 6867i and 6739i, lines are automatically wrapped.</i>
Beep	Root tag	Optional	“yes” or “no” to indicate if a notification beep must be generated by the phone.
Timeout	Root tag	Optional	Overrides the default 45 seconds timeout of the UI XML object. A Timeout set to “0” will disable the timeout feature. See section 4.10.2 for more details
LockIn	Root tag	Optional	If set to “yes”, the phone ignores all events that would cause the screen to exit without using the keys defined by the object. Default value is “no”. See section 4.10.3 for more details.

Document Object	Position	Type	Comments
GoodbyeLockInURI	Root tag	Optional	Valid only if LockIn="yes", this tag defines a URI to be called when the "Goodbye" key is pressed during a locked XML session. This URI overrides the native behavior of the "Goodbye" key which is to destroy the current XML object displayed.
allowAnswer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Ignore" and "Answer" if the XML object is displayed when the phone is in the ringing state. Default value is "no". See section 6.3 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i.</i>
allowDrop	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Drop" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowXfer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Xfer" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowConf	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Conf" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
scrollConstrain	Root tag	Optional	If set to "yes", the phone will not "wrap" the list: scrolling down the last item does not move the cursor to the first item. Default value is "no".
numberLaunch	Root tag	Optional	If set to "yes", the phone will allow the user to "launch" an item URI

Document Object	Position	Type	Comments
			using the keypad (items 1-9 only). Default value is "no". <i>Ignored on 6739i</i>
unitScroll	Root tag	Optional	If set to "yes", the 6739i will scroll the menu items in the list as it is done on the other phones, pressing the Up/Down arrow moves the selected item by one. Default value is "no". <i>6739i only</i>
scrollUp	Root tag	Optional	This tag allows overriding the default behavior of the Up arrow key once the scrolling reaches an end.
scrollDown	Root tag	Optional	This tag allows overriding the default behavior of the Down arrow key once the scrolling reaches an end.
Title	Body	Optional	Text to be used as title for the object
Wrap	Title tag	Optional	If set to "yes" the title of the object will be wrapped on 2 lines. <i>Ignored on 6867i and 6739i, lines are automatically wrapped.</i>
Color	Title tag	Optional	Label color, the possible values are: <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" If not specified the default value is "white". <i>6867i and 6739i only</i>
TopTitle	Body	Optional	Text to be used as top title for the object <i>6867i and 6739i only.</i>
Icon	TopTitle tag	Optional	Index of the icon to be used for the top title <i>6739i only.</i>

Document Object	Position	Type	Comments
Color	TopTitle tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • “white”, • “black”, • “red”, • “green”, • “brown”, • “blue”, • “magenta”, • “cyan”, • “lightgray”, • “darkgray”, • “lightred”, • “lightgreen”, • “yellow”, • “lightblue”, • “lightmagenta”, • “lightcyan” <p>If not specified the default value is “white”.</p> <p><i>6867i and 6739i only</i></p>
MenuItem	Body	Mandatory	Choice Item (up to 30 instances, minimum is 1 instance)
Base	MenuItem tag	Optional	The value of this attribute is prepended to the value in the URI tags.
Icon	MenuItem tag	Optional	<p>Index of the icon to be used for this menu entry</p> <p><i>6739i, 6755i, 6757i, 6757iCT, 6735i, 6737i and 6867i only.</i></p>
Prompt	MenuItem body	Mandatory	Label of the item
Color	Prompt tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • “white”, • “black”, • “red”, • “green”, • “brown”, • “blue”, • “magenta”, • “cyan”, • “lightgray”, • “darkgray”, • “lightred”, • “lightgreen”, • “yellow”, • “lightblue”, • “lightmagenta”, • “lightcyan” <p>If not specified the default value is</p>

Document Object	Position	Type	Comments
			“white”. <i>6867i and 6739i only</i>
split	Prompt tag	Optional	This attribute tells where to split the prompt on 2 lines giving the position of the first character of the second line. <i>6867i and 6739i only</i>
URI	MenuItem body	Mandatory	URI to be used if the user press “Select” with the cursor on this item
Dial	MenuItem body	Optional	Defines what number will be dialed when an offhook action is performed on the phone or if the “Dial2” custom softkey is pressed
line	Dial tag	Optional	Defines which SIP line to use when the Dial command is executed. If omitted, the Dial command is performed using the first available SIP line.
Selection	MenuItem body	Optional	This tag must be used in conjunction with custom softkeys. See Section 4.11 for details
IconList	Body	Optional	List of icon definitions <i>6739i, 6755i, 6757i, 6757iCT, 6735i and 6737i only.</i>
Icon	IconList body	Optional	Icon value, it can be “Icon:Iconname”, an hexadecimal string representing the icon (except 6739i) or the URL to a png file (6739i only) . See section 4.2.2 for more details. <i>6739i, 6755i, 6757i, 6757iCT, 6735i and 6737i only.</i>
Index	Icon tag	Optional	Index of the icon must be consistent with the ‘Icon’ used in the MenuItems. <i>6739i, 6755i, 6757i, 6757iCT, 6735i and 6737i only.</i>
SoftKey	Body	Optional	See section 4.1 for details



Note: the `numberLaunch` tag works for all TextMenu styles.

Limitations on non softkey phones

- Custom Softkeys are not supported

- Icons are not supported
- Only “numbered” is supported for the `Style` tag.

3.1.4 Dialing from a TextMenu

Dialing from a TextMenu is different between the Aastra 6739i and Aastra 675xi.

On the 675xi, you have 4 ways to dial from a TextMenu using custom softkeys

- “Dial: PhoneNumber” in the `menuItem URI` tag, triggered by the “Select” softkey,
- “PhoneNumber” in the `menuItem URI` tag, triggered by the “Dial” custom softkey,
- “PhoneNumber” in the `menuItem Dial` tag, triggered by the “Dial2” custom softkey.
- “PhoneNumber” in the `menuItem Selection` tag, triggered by a custom softkey pointing to a script parsing the selection parameter and dialing “PhoneNumber” via a `PhoneExecute` command.

On the 6739i, you have only 3 ways to dial from a TextMenu without using any custom softkey

- “Dial: PhoneNumber” in the `menuItem URI` tag, triggered by the  button on the item,
- `PhoneNumber` in the `menuItem Dial` tag, triggered by the  button on the item. This is the recommended way.
- “PhoneNumber” in the `menuItem Selection` tag, triggered by a custom softkey pointing to a script parsing the selection parameter and dialing “PhoneNumber” via a `PhoneExecute` command.

3.1.5 TextMenu styles (when supported)



Figure 20: “numbered” style TextMenu



Figure 21: “none” style TextMenu



Figure 22: “radio” style TextMenu

3.1.6 Examples

XML Example 1

```
<AastraIPPhoneTextMenu>
    <Title>Phone Services</Title>
    <MenuItem base = "http://10.50.10.53/">
        <Prompt>Traffic Reports</Prompt>
        <URI> rss_to_xml.pl</URI>
    </MenuItem>
    <MenuItem>
        <Prompt>Employee List</Prompt>
        <URI>employees.xml</URI>
    </MenuItem>
    <MenuItem base = "">
        <Prompt>Weather</Prompt>
        <URI>http://10.50.10.52/weather.pl</URI>
    </MenuItem>
</AastraIPPhoneTextMenu>
```

Resulting Screens (non softkey phones)



Figure 23: TextMenu Example 1 (non softkey phones)

Resulting Screen (softkey phones)



Figure 24: TextMenu Example 1 (softkey phone)

Resulting Screen (6739i)

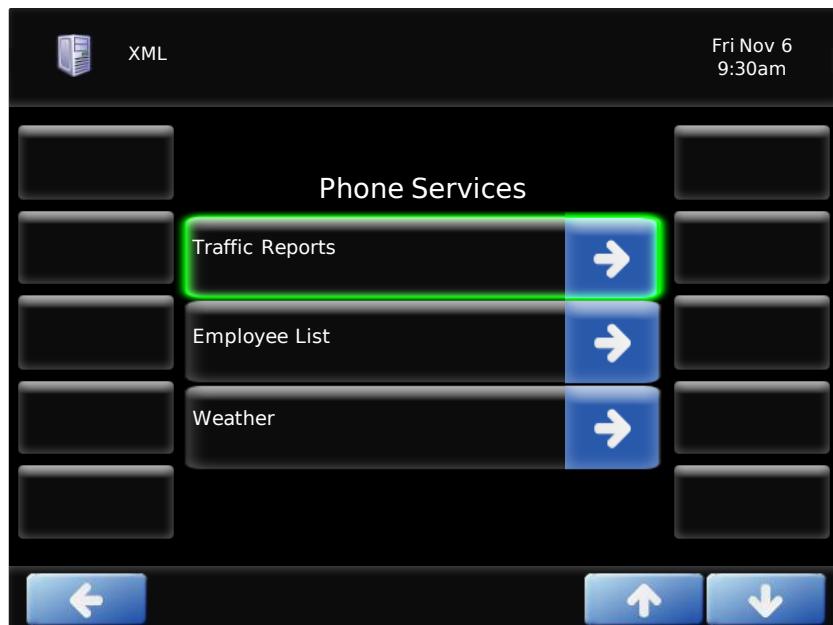


Figure 25: TextMenu Example 1 (6739i)

XML Example 2 (softkey phones)

```
<AAstraIPPhoneTextMenu>
    <Title>Phone Services</Title>
    <MenuItem base = "http://10.50.10.53/" icon="1">
        <Prompt>Traffic Reports</Prompt>
        <URI> rss_to_xml.pl</URI>
    </MenuItem>
    <MenuItem icon="2">
        <Prompt>Employee List</Prompt>
        <URI>employees.xml</URI>
    </MenuItem>
```

```

<MenuItem base ="" icon="3">
  <Prompt>Weather</Prompt>
  <URI>http://10.50.10.52/weather.pl</URI>
</MenuItem>
<IconList>
  <Icon index="1">045E545E0400</Icon>
  <Icon index="2">FEAA8292FE00</Icon>
  <Icon index="3">C00E60029800</Icon>
</IconList>
</AastraIPPhoneTextMenu>
  
```

Resulting Screen


Figure 26: TextMenu Example 2 (softkey phone)

XML Example 3 (touchscreen phone)

```

<AastraIPPhoneTextMenu>
  <Title>Directory John Doe</Title>
  <MenuItem>
    <Prompt>Work Number</Prompt>
    <URI>http://myserver/myscript.php?a=zoom&n=1234</URI>
    <Dial>1234</Dial>
    <Selection>1234</Selection>
  </MenuItem>
  <MenuItem>
    <Prompt>Cell Number</Prompt>
    <URI>http://myserver/myscript.php?a=zoom&n=2345</URI>
    <Dial>2345</Dial>
    <Selection>2345</Selection>
  </MenuItem>
  <MenuItem>
    <Prompt>Home Number</Prompt>
    <URI>http://myserver/myscript.php?a=zoom&n=3456</URI>
    <Dial>3456</Dial>
    <Selection>3456</Selection>
  </MenuItem>
  <SoftKey index = "1">
    <Label>Delete</Label>
    <URI>http://myserver/myscript.php?a=delete</URI>
  </SoftKey>
</AastraIPPhoneTextMenu>
  
```

```

<SoftKey index = "2">
  <Label>Edit</Label>
  <URI>http://myserver/myscript.php?a=edit</URI>
</SoftKey>
</AastraIPPhoneTextMenu>

```

In this example, with item 1 selected:

- Pressing the  icon on the item, will call <http://myserver/myscript.php?a=zoom&n=1234>
- Pressing the  icon on the item, will make the phone dial “1234”
- Pressing the “Delete” softkey, will call
<http://myserver/myscript.php?a=delete&selection=1234>
- Pressing the “Edit” softkey, will call
<http://myserver/myscript.php?a=edit&selection=1234>

Resulting Screen

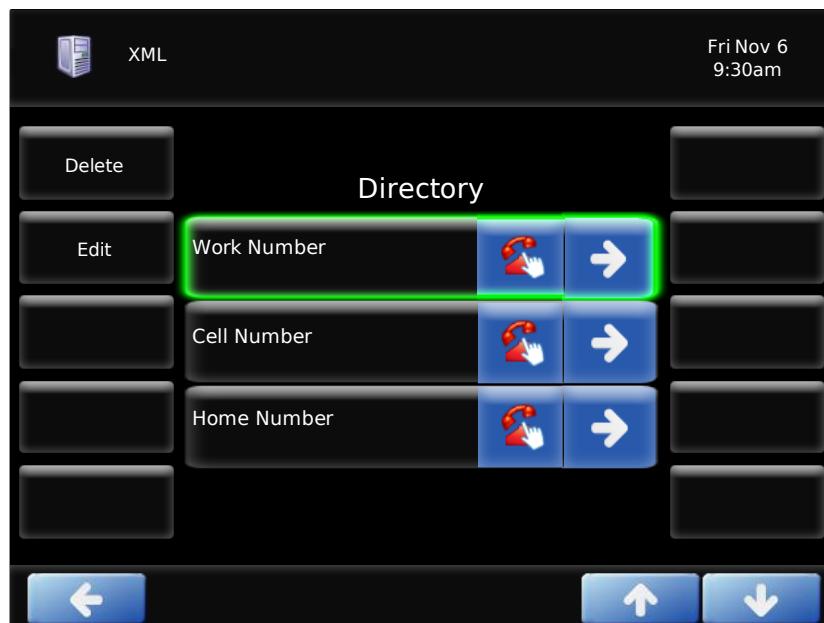


Figure 27: TextMenu Example 2 (6739i)

3.2 ImageMenu Object (55i/57i/57iCT/6735i/6737i/6739i/6867i)

The `ImageMenu` object allows using a bitmap image to serve as a menu. This is desirable when a user wants to display menu choices in some non-ASCII character set or with pictures only. Each menu selection is linked to a keypad key (0-9, *, #).allows developers to create a numerical list of choices.

3.2.1 Implementation (55i/57i/57iCT/6535i/6737i)

The image itself is specified as a series of hexadecimal characters. See chapter 4.2.1.1 for more details.

Note: With firmware 3.3.1 the image size is limited to 144x40 pixels.

Object native interaction

- **Done** Redisplays the previous XML object present in the phone browser.

Object default Softkeys

Position	Label	Description	URIs
6	Done	Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

Note:

- the Left Arrow key default interaction is disabled if the `LockIn` tag is set to "yes".
- the Left Arrow key default interaction can be modified using the `cancelAction` tag on a non-softkey phone.
- If the `LockIn` tag is set to "yes" and the `cancelAction` tag is configured, pressing the Left Arrow key triggers the configured `cancelAction`.
- the Right arrow key default interaction can be modified using the `doneAction` tag on a non-softkey phone.

3.2.2 Implementation (6867i)

For the 6867ii, the image is either a 24/32 bit depth "png" or a "jpeg" file located on a server and which can be downloaded by the phone using TFTP, FTP, HTTP or HTTPS. See chapter 4.2.1.2 for more details.

Three image sizes are supported:

- Up to 320x180 pixels (mode=regular or extended).
- Up to 320x240 pixels (mode=fullscreen). In that case, the softkeys are not displayed.

If the image is bigger than the size supported by the requested mode, the image is clipped based on the requested alignment.

If the image is smaller than the size supported by the requested mode, the image is displayed based on the requested alignment

The **Left** key is mapped to the cancelAction tag, if not specified the XML object is destroyed.

Note:



- the Left Arrow key default interaction is disabled if the `LockIn` tag is set to "yes".
- If the `LockIn` tag is set to "yes" and the `cancelAction` tag is configured, pressing the Left Arrow key triggers the configured `cancelAction`.
- The up, down, left and right arrow key default interactions can be overridden using the `scrollUp`, `scrollDown`, `scrollLeft` and `scrollRight` tags.

Object default Softkeys

Six (four physical) customizable softkeys are available for this object.

Position	Label	Interaction	URIs
4	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

The following figure details how the `AastralIPPhoneImageMenu` is implemented on the Aastra6867i.



Figure 28: ImageMenu 6867i implementation (mode regular/extended)

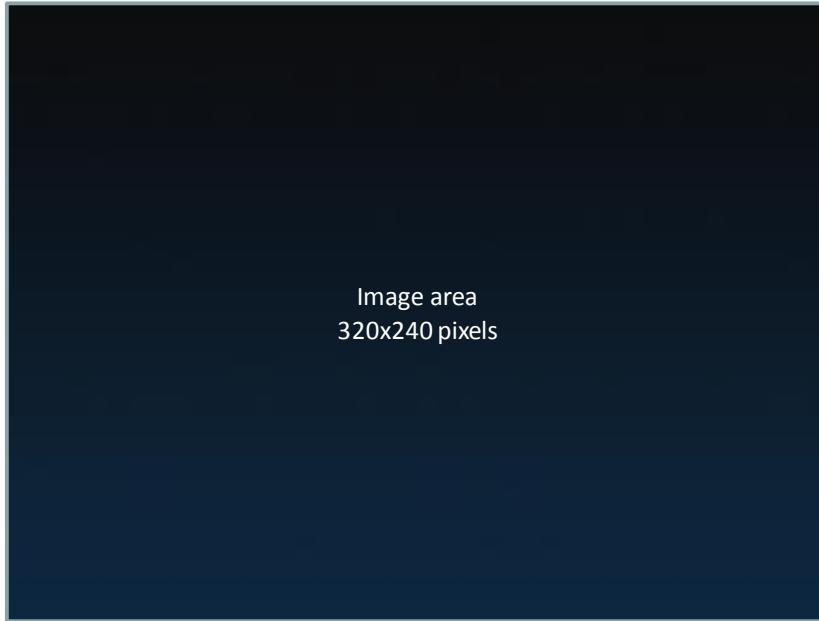


Figure 29: ImageMenu 6867i implementation (fullscreen mode)

Also a URI can be programmed to be called when the user presses the **Select** key (imageAction root tag). If this tag is empty, phone will use the URI configured by the doneAction tag (SoftKey:Exit by default).

So by default pressing the **Select** key destroys the current XML object unless an imageAction or a doneAction is configured.

Native Interaction

- “SoftKey:Exit”

3.2.3 Implementation (6739i)

For the 6739i, the image is a 24 bit depth “png” or “jpeg” file located on a server and which can be downloaded by the phone using TFTP, FTP, HTTP or HTTPS. See chapter 4.2.1.2 for more details.

Three image sizes are supported:

- 380x340 pixels (mode=regular).
- 640x340 pixels (mode=extended).
- 640x480 pixels (mode=fullscreen).

The key is mapped to the cancelAction tag, if not specified the XML object is destroyed.



Note: the key interaction is disabled if the LockIn tag is set to "yes".

Object default Softkeys

Ten customizable softkeys are available for this object.

Position	Label	Interaction	URIs
10	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

The following figure details how the `AastraIPPhoneImageMenu` is implemented on the Aastra6739i.



Figure 30: ImageMenu implementation (regular mode)

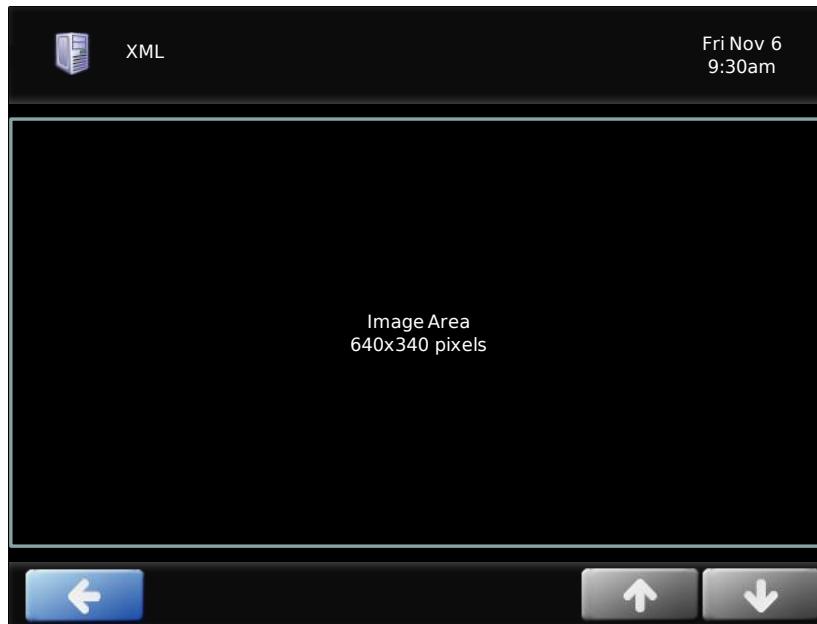


Figure 31: ImageMenu implementation (extended mode)

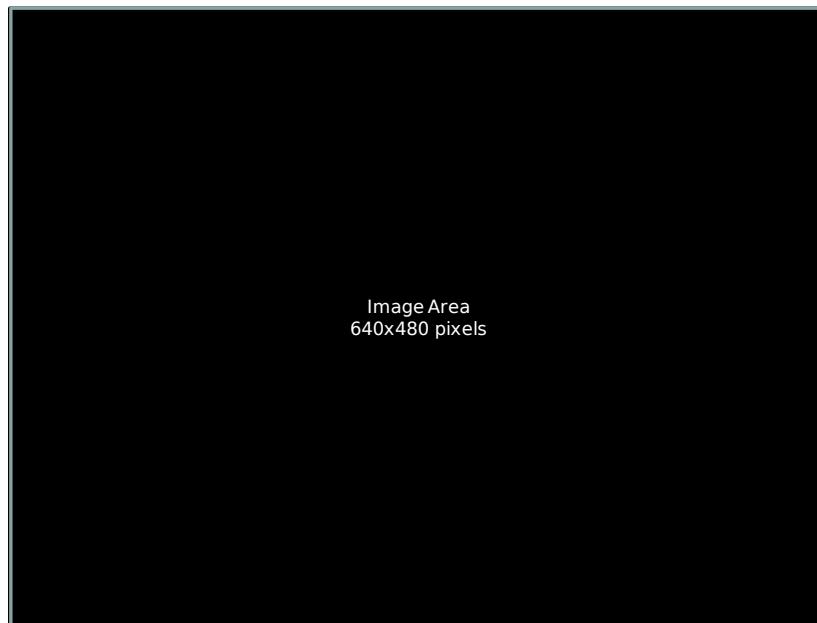


Figure 32: ImageMenu implementation (fullscreen mode)

Also a URI can be programmed to be called when the user presses on the displayed image (imageAction root tag). If this tag is empty, phone will use the URI configured by the doneAction tag (SoftKey:Exit by default).

So by default pressing on the image destroys the current XML object unless an imageAction or a doneAction is configured.

Native Interaction

- “SoftKey:Exit”

3.2.4 XML Description

```

<AastraIPPhoneImageMenu
    destroyOnExit = "yes/no"
    cancelAction = "some URI"
    doneAction = "some URI"
    imageAction = "some URI"
    Beep = "yes/no"
    Timeout = "some integer"
    LockIn = "yes/no"
    GoodbyeLockInURI = "some URI"
    mode = "regular/extended/fullscreen"
    >
    <TopTitle icon="icon index"
        Color="white/black/red/green/brown/blue/magenta
        cyan/lightgray/darkgray/lightred/lightgreen
        yellow/lightblue/lightmagenta/lightcyan"
    >Top Title</TopTitle>
    <Image
        verticalAlign = "top,middle,bottom"
        horizontalAlign = "left,middle,right"
        height = "height in pixels"
        width = "width in pixels"
    >Image as hexadecimal characters or URL</Image>
    <!--Base attribute is optional-->
    <URIList base = "http://someserver/">
        <URI key = "0">link1.php</URI>
        <URI key = "#">link3.php</URI>
        <!--Additional URI entries may be added (0-9, * and #)-->
    </URIList>
    <!--Additional Softkey Items may be added -->
</AastraIPPhoneImageMenu>
  
```

XML Document Objects

Document Object	Position	Type	Comments
AastraIPPhoneImageMenu	Root tag	Mandatory	Root object
destroyOnExit	Root tag	Optional	“yes/no” indicates if the object is kept or not in the phone browser after exit. If not specified, the object is kept in the browser.
cancelAction	Root tag	Optional	Defines the URI to be called when the user cancels the XML object.
doneAction	Root tag	Optional	Defines the URI to be called when the user selects the “Done” softkey or ‘SoftKey:Exit’.
imageAction	Root tag	Optional	Defines the URI to be called when the user presses on the image. <i>6867i and 6739i only.</i>

Document Object	Position	Type	Comments
Beep	Root tag	Optional	"yes" or "no" to indicate if a notification beep must be generated by the phone.
Timeout	Root tag	Optional	Overrides the default 45 seconds timeout of the UI XML object. A Timeout set to "0" will disable the timeout feature. See section 4.10.1 for more details
LockIn	Root tag	Optional	If set to "yes", the phone ignores all events that would cause the screen to exit without using the keys defined by the object. Default value is "no". See section 4.10.3 for more details.
GoodbyeLockInURI	Root tag	Optional	Valid only if LockIn="yes", this tag defines a URI to be called when the "Goodbye" key is pressed during a locked XML session. This URI overrides the native behavior of the "Goodbye" key which is to destroy the current XML object displayed.
mode	Root tag	Optional	Configures the display mode, "regular", "extended" or "fullscreen" <i>6867i and 6739i only</i>
TopTitle	Body	Optional	Text to be used as top title for the object <i>6867i and 6739i only.</i>
Icon	TopTitle tag	Optional	Index of the icon to be used for the top title <i>6739i only.</i>
Color	TopTitle tag	Optional	Label color, the possible values are: <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" If not specified the default value is

Document Object	Position	Type	Comments
			“white”. <i>6867i and 6739i only</i>
Image	Body	Mandatory	Image to be displayed as a series of hexadecimal characters or a URL. See section 4.2.1 for more details.
verticalAlign	Image tag	Optional	Vertical position of the image (“top”, “middle” or “bottom”). If the tag is not specified, the object will use “middle” as a default value.
horizontalAlign	Image tag	Optional	Horizontal position of the image (“left”, “middle” or “right”). If the tag is not specified, the object will use “middle” as a default value.
height	Image tag	Mandatory	Height in pixels. Must match the image height. <i>Optional and Ignored on 6867i</i>
width	Image tag	Mandatory	Width in pixels. Must match the image width. <i>Optional and Ignored on 6867i</i>
URIList	Body	Mandatory	Master tag of the URI list linked to a keypad key (0-9, * and #)
Base	URIList tag	Optional	The value of this attribute is prepended to the value in the URI tags.
URI	URIList body	Mandatory	URI to be used if the user presses the key defined in the “key” tag.
key	URI tag	Mandatory	This tag defines the key that will trigger the selection (0-9, * and #).
SoftKey	Body	Optional	See section 4.1 for details

3.2.5 Examples

XML Example (55i/57i/57iCT)

Resulting Screen



Figure 33: ImageMenu Example (55i/57i/57iCT/6735i/6737i)

XML Example (6739i)

```
<AAstraIPPhoneImageMenu destroyOnExit="yes">
<Image height="300" width="380">tftp://server.com/menu.png</Image>
<URIList>
<URI key="1">http://myserver.com?choice=1</URI>
<URI key="2">http://myserver.com?Choice=2</URI>
</URIList>
<SoftKey index="1" icon="1">
<Label>Label</Label>
```

```
<URI>http://myserver.com/script.php?action=1</URI>
</SoftKey>
<SoftKey index="10">
<Label>Exit</Label>
<URI>SoftKey:Exit</URI>
</SoftKey>
<IconList>
<Icon index="1">Icon:Envelope</Icon>
</IconList>
</AastraIPPhoneImageMenu>
```

Resulting Screen



Figure 34: ImageMenu Example (6739i)

3.3 TextScreen Object (all models)

The TextScreen object can be used to display text. The screen word-wraps appropriately and can scroll to display a message longer than the physical display.

3.3.1 Implementation (softkey and non softkey phones)

The object is displayed on 2 lines. The Up and Down arrow keys allow the user to browse the rest of the text.

Line selected	Label	Keys
Title/Text	vNext	Up and Down Arrow Browse up or down
	>Done	Right Arrow Done
		Left Arrow Exit

Softkey phone keys

The object is displayed on up to 6 lines, the title stays on the top of the display. The Up and Down arrow keys allow the user to browse the rest of the text.

Line selected	Keys
Text	Up and Down Arrow Browse up or down
	Right Arrow Done
	Left Arrow Exit

Note:

- the Left Arrow key default interaction is disabled if the `LockIn` tag is set to "yes".
- the Left Arrow key default interaction can be modified using the `cancelAction` tag on a non-softkey phone.
- If the `LockIn` tag is set to "yes" and the `cancelAction` tag is configured, pressing the Left Arrow key triggers the configured `cancelAction`.
- the Right arrow key default interaction can be modified using the `doneAction` tag on a non-softkey phone.
- The up, down, left and right arrow key default interactions can be overridden using the `scrollUp`, `scrollDown`, `scrollLeft` and `scrollRight` tags.

Object native interaction

- Done** Redisplays the previous XML object present in the phone browser.

Object default Softkeys (softkey phones)

Position	Label	Description	URIs
6	Done	Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

3.3.2 Implementation (6867i)

The title is displayed at the top of the XML area and uses up to 2 lines. The text is displayed after the title area and up to 8 lines can be displayed.



Note: The Text and Title area use the same font (fnt and size) but the Title is displayed in bold.

The **Left** key is mapped to the cancelAction tag, if not specified the XML object is destroyed.

The **Up/Down** keys allow up and down scrolling in order to display the complete text.

The **Right** and **Select** keys are mapped to the doneAction tag, if not specified the previous XML object in the stack is displayed.

Six customizable softkeys are available for this object. If more than 4 softkeys are configured the softkeys are displayed on 2 pages.



Note: the **Left** key interaction is disabled if the LockIn tag is set to "yes".

Object default Softkeys

Six customizable softkeys are available for this object.

Position	Label	Interaction	URIs
4	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

The following figures detail how the AastraIPPhoneTextScreen is implemented on the Aastra6867i. The size of the text zone depends on the presence of the optional title.



Figure 35: TextScreen implementation on 6867i

Native Interaction

- “SoftKey:Exit”

3.3.3 Implementation (6739i)

The title is displayed at the top of the XML area and uses up to 2 lines. The text is displayed after the title area and up to 10 lines can be displayed.



Note: The Text area uses a smaller font than the Title area.

The key is mapped to the cancelAction tag, if not specified the XML object is destroyed.

The keys allow up and down scrolling in order to display the complete text.

Ten customizable softkeys are available for this object.



Note: the key interaction is disabled if the LockIn tag is set to "yes".

Object default Softkeys

Ten customizable softkeys are available for this object.

Position	Label	Interaction	URIs
10	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

The following figure details how the AastraIPPhoneTextScreen is implemented on the Aastra6739i.



Figure 36: TextScreen implementation on 6739i

Native Interaction

- "SoftKey:Exit"

3.3.4 XML Description

"Red" tags indicates that the tag does not apply to all phones, when not supported the tags are just ignored.

```

<AastraIPPhoneTextScreen
    destroyOnExit = "yes/no"
    cancelAction = "some URI"
    doneAction = "some URI"
    Beep = "yes/no"
    Timeout = "some integer"
    allowAnswer = "yes/no"
    allowDrop = "yes/no"
    allowXfer = "yes/no"
    allowConf = "yes/no"
    LockIn = "yes/no"
    GoodbyeLockInURI = "some URI"
    allowDTMF = "yes/no"
    scrollUp = "some URI"
    scrollDown = "some URI"
    scrollLeft = "some URI"
    scrollRight = "some URI"
  >
  <Title      wrap="yes/no"
              Color="white/black/red/green/brown/blue/magenta
                     cyan/lightgray/darkgray/lightred/lightgreen
                     yellow/lightblue/lightmagenta/lightcyan"
  >Screen Title</Title>
  <TopTitle   icon="icon index"
              Color="white/black/red/green/brown/blue/magenta
                     cyan/lightgray/darkgray/lightred/lightgreen
                     yellow/lightblue/lightmagenta/lightcyan"
  >Top Title</TopTitle>
  <Text      Color="white/black/red/green/brown/blue/magenta
                     cyan/lightgray/darkgray/lightred/lightgreen
                     yellow/lightblue/lightmagenta/lightcyan"
  >The screen text goes here</Text>
<!–Additional Softkey Items may be added-->
</AastraIPPhoneTextScreen>

```

XML Document Objects

Document Object	Position	Type	Comments
AastraIPPhoneTextScreen	Root tag	Mandatory	Root object
destroyOnExit	Root tag	Optional	"yes/no" indicates if the object is kept or not in the phone browser after exit. If not specified, the object is kept in the browser.
cancelAction	Root tag	Optional	Defines the URI to be called when the user cancels the XML object.
doneAction	Root tag	Optional	Defines the URI to be called when the user selects the "Done" softkey or 'SoftKey:Exit'.

Document Object	Position	Type	Comments
Beep	Root tag	Optional	"yes" or "no" to indicate if a notification beep must be generated by the phone.
Timeout	Root tag	Optional	Overrides the default 45 seconds timeout of the UI XML object. A Timeout set to "0" will disable the timeout feature. See section 4.10.2 for more details
LockIn	Root tag	Optional	If set to "yes", the phone ignores all events that would cause the screen to exit without using the keys defined by the object. Default value is "no". See section 4.10.3 for more details.
GoodbyeLockInURI	Root tag	Optional	Valid only if LockIn="yes", this tag defines a URI to be called when the "Goodbye" key is pressed during a locked XML session. This URI overrides the native behavior of the "Goodbye" key which is to destroy the current XML object displayed.
allowAnswer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Ignore" and "Answer" if the XML object is displayed when the phone is in the ringing state. Default value is "no". See section 6.3 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowDrop	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Drop" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowXfer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Xfer" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>

Document Object	Position	Type	Comments
allowConf	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Conf" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i and 9143i, 6863i, 6865i</i>
allowDTMF	Root tag	Optional	This tag allows letting keypad strokes as DTMF when the phone is in the connected status.
scrollUp	Root tag	Optional	This tag allows overriding the default behavior of the Up arrow key once the scrolling reaches an end. <i>Not available on 6739i.</i>
scrollDown	Root tag	Optional	This tag allows overriding the default behavior of the Down arrow key once the scrolling reaches an end. <i>Not available on 6739i.</i>
scrollLeft	Root tag	Optional	This tag allows overriding the default behavior of the Left arrow key once the scrolling reaches an end. <i>Not available on 6739i.</i>
scrollRight	Root tag	Optional	This tag allows overriding the default behavior of the Right arrow key once the scrolling reaches an end. <i>Not available on 6739i.</i>
Title	Body	Optional	Label to be used as title for the object
Wrap	Title tag	Optional	If set to "yes" the title of the object will be wrapped on 2 lines. <i>Ignored on 6867i and 6739i, lines are automatically wrapped.</i>
Color	Title tag	Optional	Label color, the possible values are: <ul style="list-style-type: none">• "white",• "black",• "red",• "green",• "brown",• "blue",• "magenta",

Document Object	Position	Type	Comments
			<ul style="list-style-type: none"> • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" <p>If not specified the default value is "white".</p> <p><i>6867i and 6739i only</i></p>
TopTitle	Body	Optional	<p>Text to be used as top title for the object</p> <p><i>6867i and 6739i only.</i></p>
Icon	TopTitle tag	Optional	<p>Index of the icon to be used for the top title</p> <p><i>6739i only.</i></p>
Color	TopTitle tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" <p>If not specified the default value is "white".</p> <p><i>6867i and 6739i only</i></p>
Text	Body	Mandatory	<p>Text to be displayed.</p>
Color	Text tag	Optional	<p>Text color, the possible values are:</p> <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue",

Document Object	Position	Type	Comments
			<ul style="list-style-type: none"> • “magenta”, • “cyan”, • “lightgray”, • “darkgray”, • “lightred”, • “lightgreen”, • “yellow”, • “lightblue”, • “lightmagenta”, • “lightcyan” <p>If not specified the default value is “white”.</p> <p><i>6867i and 6739i only</i></p>
SoftKey	Body	Optional	<p>See section 0 for details</p> <p><i>Softkey and Touchscreen phones only.</i></p>

→ **Note:** the URI configured via the scrollUp and scrollDown tags is triggered only when the scrolling reaches an end. If no scrolling is needed, the URI are immediately triggered otherwise, they are triggered after the scroll reaches its beginning or its end.

3.3.5 Examples

XML Example 1

```
<AastraIPPhoneTextScreen>
  <Title>Screen Object</Title>
  <Text>The screen object can be implemented similar to the
firmware info screen. Note that white space is preserved in XML so
the display should word-wrap appropriately. Only three lines can
display at a time.</Text>
</AastraIPPhoneTextScreen>
```

Resulting Screens (non softkey phones)

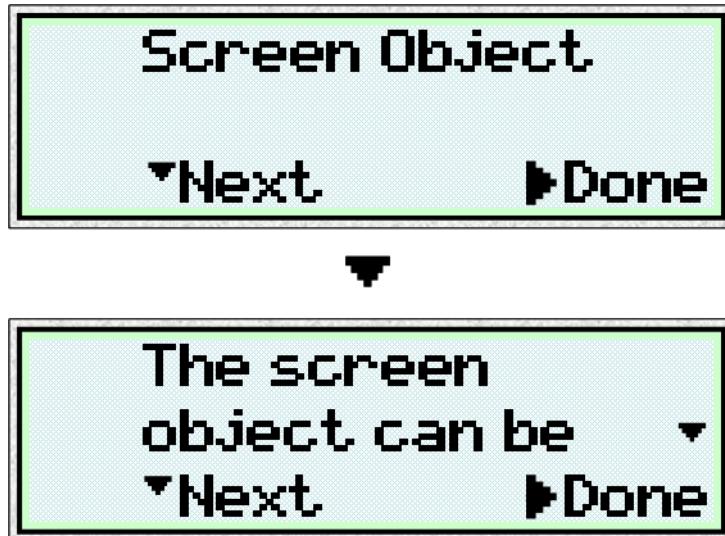


Figure 37: TextScreen Example (non softkey phones)

Resulting Screen (softkey phones)



Figure 38: TextScreen Example (softkey phones)

XML Example 2

```
<AAstraIPPhoneTextScreen>
    <Title>This is a very long title which should be on two lines</Title>
    <Text>Lorem Ipsum is simply dummy text of the printing and typesetting industry. Lorem Ipsum has been the industry's standard dummy text ever since the 1500s, when an unknown printer took a galley of type and scrambled it to make a type specimen book. It has survived not only five centuries, but also the leap into electronic typesetting, remaining essentially unchanged. It was popularised in the 1960s with the release of Letraset sheets containing Lorem Ipsum passages, and more recently with desktop publishing software like Aldus PageMaker including versions of Lorem Ipsum.</Text>
```

```
</AastraIPPhoneTextScreen>
```

Resulting Screen (6739i)

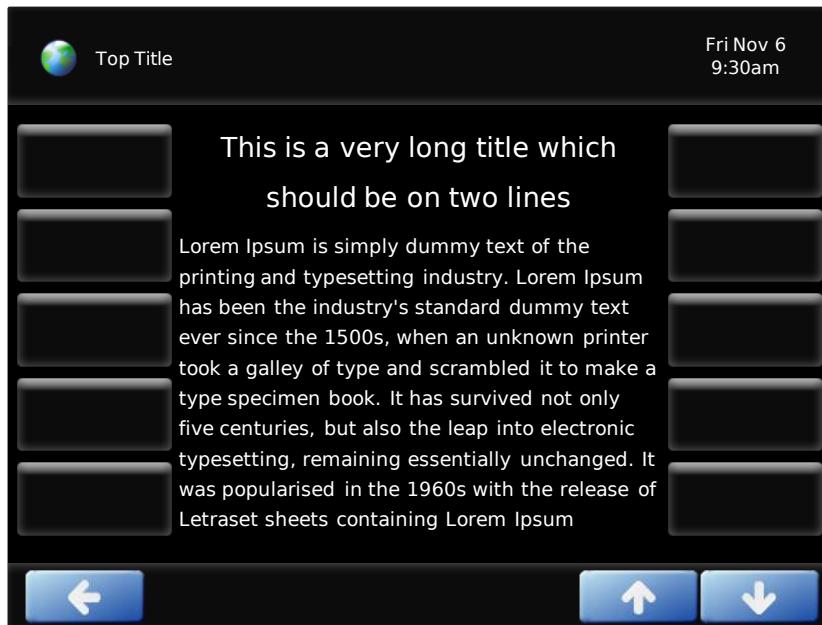


Figure 39: TextScreen Example (6739i)

XML Example 3

```
<AastraIPPhoneTextScreen>
  <Title>This is a very long title which should be on two lines
but 6867i has a large display.</Title>
  <Text>Lorem Ipsum is simply dummy text of the printing and
typesetting industry. Lorem Ipsum has been the industry's standard
dummy text ever since the 1500s, when an unknown printer took a
galley of type and scrambled it to make a type specimen book. It
has survived not only five centuries, but also the leap into
electronic typesetting, remaining essentially unchanged. It was
popularised in the 1960s with the release of Letraset sheets
containing Lorem Ipsum passages, and more recently with desktop
publishing software like Aldus PageMaker including versions of
Lorem Ipsum.</Text>
</AastraIPPhoneTextScreen>
```

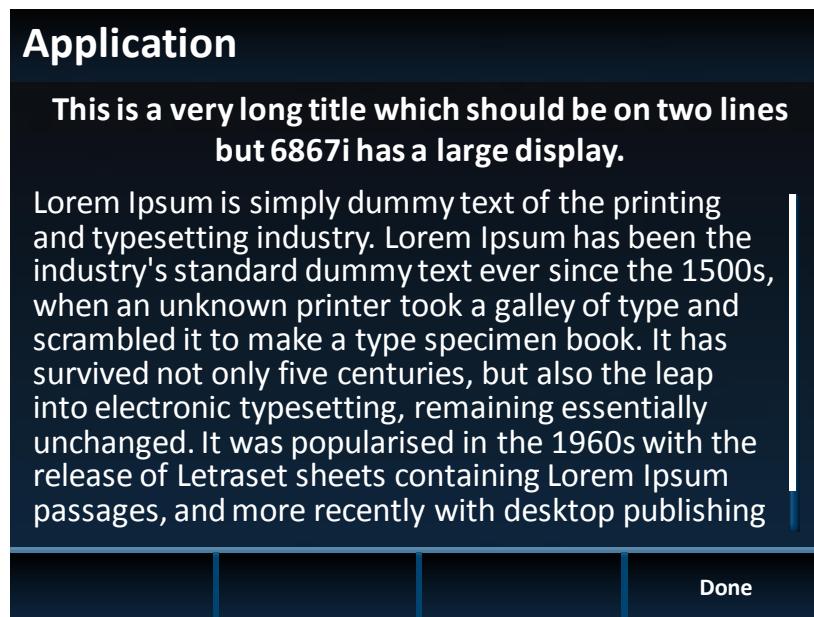
Resulting Screen (6867i)

Figure 40: TextScreen Example (6867i)

3.4 FormattedTextScreen Object (all models)

The FormattedTextScreen object allows the XML designer to display formatted (alignment, size, color and scrolling) text.

3.4.1 Implementation (softkey and non softkey phones)

This text is divided into 3 distinct blocks, any of which can be empty.

- The first block is displayed at the top of the display and contains static text. This block takes up as many lines as the XML object specifies and can range from 0 up to the size of the physical screen.
- The next block, displayed below the first block, displays scrolling text and takes up as many lines as the designer specifies up to the size of the screen.
- The final block of contains static text and will take up whatever lines are left on the screen.

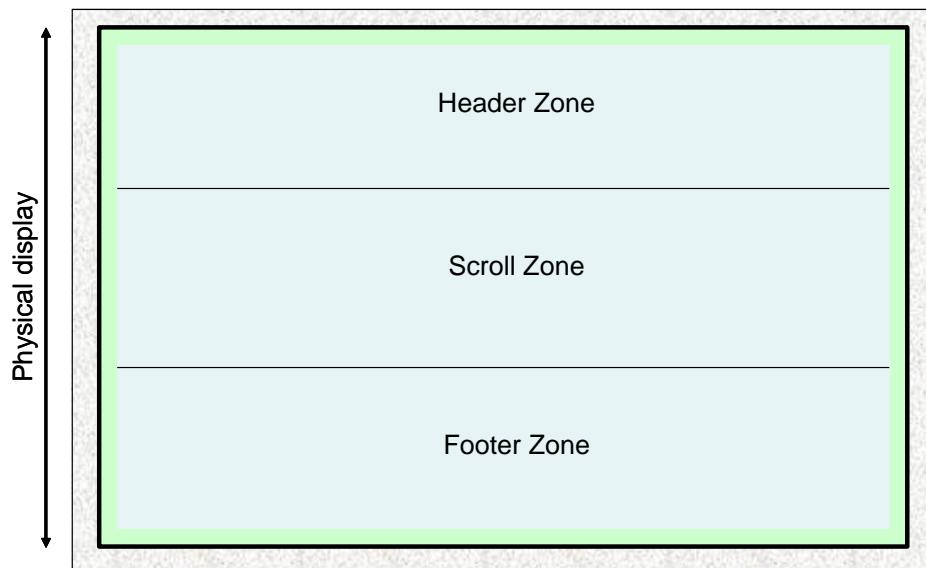


Figure 41: FormattedTextScreen layout

Object native interaction

- **Done** Redisplays the previous XML object present in the phone browser.

Non softkey phone keys

The object is displayed on 2 lines. The Up and Down arrow keys allow the user to browse the rest of the text.

Line selected	Label	Keys
Text		Up and Down Arrow Browse up or down (if scrollable)
	>Done	Right Arrow Done

 Left Arrow ***Exit***

Softkey phone keys

The object is displayed on up to 6 lines, the title stays on the top of the display. The Up and Down arrow keys allow the user to browse the rest of the text.

Line selected	Keys
Text	Up and Down Arrow Browse up or down (if scrollable)
	Right Arrow <i>Done</i>
	Left Arrow <i>Exit</i>

Note:


- the Left Arrow key default interaction is disabled if the `LockIn` tag is set to "yes".
 - the Left Arrow key default interaction can be modified using the `cancelAction` tag on a non-softkey phone..
 - the Right arrow key default interaction can be modified using the `doneAction` tag on a non-softkey phone..
 - The up, down, left and right arrow key default interactions can be overridden using the `scrollUp`, `scrollDown`, `scrollLeft` and `scrollRight` tags.
-

Object default Softkeys (softkey phones)

Position	Label	Description	URIs
6	Done	Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

3.4.2 Implementation (6867i)

The text zone is divided into 3 distinct blocks, any of which can be empty.

- The first block (header zone) is displayed at the top of the display and contains static text. This block takes up as many lines as the XML object specifies and can range from 0 up to the size of the physical screen.
- The next block (scrolling zone), displayed below the first block, displays scrolling text and takes up as many lines as available, the size of the scrolling zone is automatically determined by using what's left of the display between the header zone and the footer zone.
- The final block (footer zone) contains static text and will take up whatever lines are left on the screen starting from the bottom.



Figure 42: FormattedTextScreen layout on 6867i

The *Left* key is mapped to the cancelAction tag, if not specified the XML object is destroyed.

The *Up/Down* keys allow up and down scrolling in order to display the complete text if needed.

Six customizable softkeys are available for this object.



Note: the *Left* key interaction is disabled if the LockIn tag is set to "yes".

Object default Softkeys

Six customizable softkeys are available for this object.

Position	Label	Interaction	URIs
6(4)	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

The following figure details how the `AastraIPPhoneFormattedTextScreen` is implemented on the Aastra6867i.

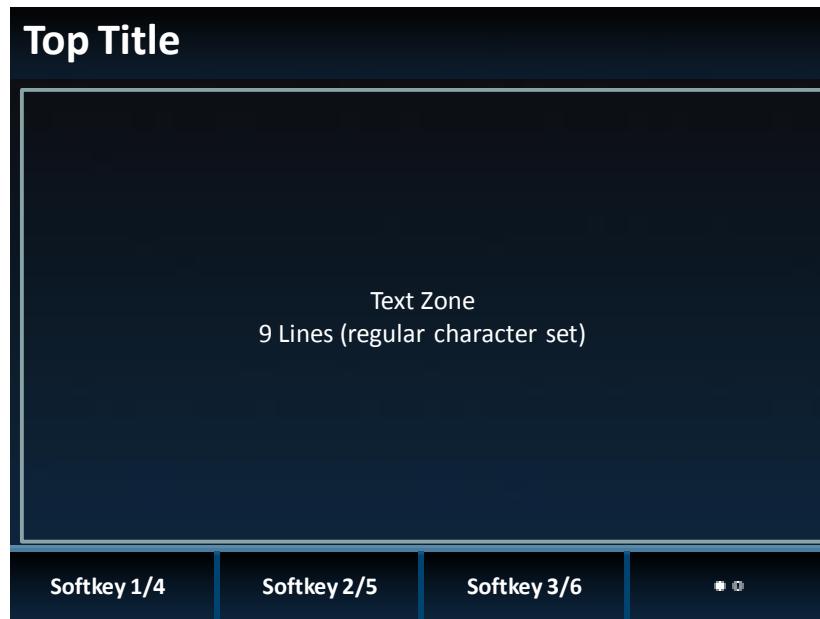


Figure 43: FormattedTextScreen implementation on 6867i

Native Interaction

- “SoftKey:Exit”

3.4.3 Implementation (6739i)

The text zone is divided into 3 distinct blocks, any of which can be empty.

- The first block (header zone) is displayed at the top of the display and contains static text. This block takes up as many lines as the XML object specifies and can range from 0 up to the size of the physical screen.
- The next block (scrolling zone), displayed below the first block, displays scrolling text and takes up as many lines as available, the size of the scrolling zone is automatically determined by using what's left of the display between the header zone and the footer zone.
- The final block (footer zone) contains static text and will take up whatever lines are left on the screen starting from the bottom.



Figure 44: FormattedTextScreen layout on 6739i

The  key is mapped to the cancelAction tag, if not specified the XML object is destroyed.

The   keys allow up and down scrolling in order to display the complete text if needed.

Ten customizable softkeys are available for this object, there is no default softkey.

 **Note:** the  key interaction is disabled if the LockIn tag is set to "yes".

Object default Softkeys

Ten customizable softkeys are available for this object.

Position	Label	Interaction	URIs
10	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

The following figure details how the `AastraIPPhoneFormattedTextScreen` is implemented on the Aastra6739i.



Figure 45: FormattedTextScreen implementation on 6739i

Native Interaction

- “SoftKey:Exit”

3.4.4 XML Description

“Red” tags indicates that the tag does not apply to all phones, when not supported the tags are just ignored.

```
<AastraIPPhoneFormattedTextScreen
    destroyOnExit = "yes/no"
    cancelAction = "some URI"
    doneAction = "some URI"
    Beep = "yes/no"
    Timeout = "some integer"
    allowAnswer = "yes/no"
    allowDrop = "yes/no"
    allowXfer = "yes/no"
    allowConf = "yes/no"
    LockIn = "yes/no"
    GoodbyeLockInURI = "some URI"
    allowDTMF = "yes/no"
    scrollUp = "some URI"
    scrollDown = "some URI"
    scrollLeft = "some URI"
    scrollRight = "some URI"
>
<TopTitle icon="icon index"
    Color="white/black/red/green/brown/blue/magenta
        cyan/lightgray/darkgray/lightred/lightgreen
        yellow/lightblue/lightmagenta/lightcyan"
    >Top Title</TopTitle>
<Line Size="small/normal/double/large"
```

```

Align="left/center/right"
Color="white/black/red/green/brown/blue/magenta
cyan/lightgray/darkgray/lightred/lightgreen
yellow/lightblue/lightmagenta/lightcyan"
>A line of static text</Line>
<!--Additional Lines may be added -->
<Scroll Height="integer">
  <Line Size="small/normal,double/large"
    Align="left/center/right"
    Color="white/black/red/green/brown/blue/magenta
    cyan/lightgray/darkgray/lighter
    lightgreen/yellow/lightblue/lightmagenta
    lightcyan"
  >Scrolling text</Line>
  <!--Additional Lines may be added -->
</Scroll>
<Line Size="small/normal,double/large"
  Align="left/center/right"
  Color="white/black/red/green/brown/blue/magenta
  cyan/lightgray/darkgray/lightred/lightgreen
  yellow/lightblue/lightmagenta/lightcyan"
>Some static footer text</Line>
<!--Additional Lines may be added -->
<!--Additional Softkey Items may be added -->
</AastraIPPhoneFormattedTextScreen>

```

Notes:



- Any lines that would display past the bottom of the screen will be ignored.
 - Text will not display with the top or bottom cut off.
 - Text that extends past the edge of the screen will be cropped to the last fully displayed word.
-

XML Document Objects

Document Object	Position	Type	Comments
AastraIPPhoneFormattedTextScreen	Root tag	Mandatory	Root object
destroyOnExit	Root tag	Optional	"yes/no" indicates if the object is kept or not in the phone browser after exit. If not specified, the object is kept in the browser.
cancelAction	Root tag	Optional	Defines the URI to be called when the user cancels the XML object.
doneAction	Root tag	Optional	Defines the URI to be called when the user selects the "Done" softkey or 'SoftKey:Exit'.
Beep	Root tag	Optional	"yes" or "no" to indicate if a

Document Object	Position	Type	Comments
			notification beep must be generated by the phone.
Timeout	Root tag	Optional	Overrides the default 45 seconds timeout of the UI XML object. A Timeout set to "0" will disable the timeout feature. See section 4.10.2 for more details
LockIn	Root tag	Optional	If set to "yes", the phone ignores all events that would cause the screen to exit without using the keys defined by the object. Default value is "no". See section 4.10.3 for more details.
GoodbyeLockInURI	Root tag	Optional	Valid only if LockIn="yes", this tag defines a URI to be called when the "Goodbye" key is pressed during a locked XML session. This URI overrides the native behavior of the "Goodbye" key which is to destroy the current XML object displayed.
allowAnswer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Ignore" and "Answer" if the XML object is displayed when the phone is in the ringing state. Default value is "no". See section 6.3 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowDrop	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Drop" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>

Document Object	Position	Type	Comments
allowXfer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Xfer" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowConf	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Conf" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowDTMF	Root tag	Optional	This tag allows letting keypad strokes as DTMF when the phone is in the connected status.
scrollUp	Root tag	Optional	This tag allows overriding the default behavior of the Up arrow key once the scrolling reaches an end. <i>Not available on 6739i</i>
scrollDown	Root tag	Optional	This tag allows overriding the default behavior of the Down arrow key once the scrolling reaches an end. <i>Not available on 6739i</i>
scrollLeft	Root tag	Optional	This tag allows overriding the default behavior of the Left arrow key once the scrolling reaches an end. <i>Not available on 6739i</i>
scrollRight	Root tag	Optional	This tag allows overriding the default behavior of the Right arrow key once the scrolling reaches an end. <i>Not available on 6739i</i>
TopTitle	Body	Optional	Text to be used as top title for the object

Document Object	Position	Type	Comments
			6867i and 6739i only.
Icon	TopTitle tag	Optional	Index of the icon to be used for the top title <i>6739i only.</i>
Color	TopTitle tag	Optional	Label color, the possible values are: <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" If not specified the default value is "white". <i>6867i and 6739i only</i>
Line	Body	Optional	Text to be displayed on the line. If the text is larger than the display, line is cropped to the last word.
Size	Line tag	Optional	Size of the font for the line: <ul style="list-style-type: none"> • "small" for the small font • "normal" for the regular font, • "double" for the larger font. • "large" for the largest font. "normal" is the default value if not specified. <i>"small" and "large" are available only on 6739i</i>
Align	Line tag	Optional	Alignment of the line, "left", "right" or "center". If not specified the default value is "left".
Color	Line tag	Optional	Color of the line, the

Document Object	Position	Type	Comments
			<p>possible values are:</p> <ul style="list-style-type: none"> • “white”, • “black”, • “red”, • “green”, • “brown”, • “blue”, • “magenta”, • “cyan”, • “lightgray”, • “darkgray”, • “lightred”, • “lightgreen”, • “yellow”, • “lightblue”, • “lightmagenta”, • “lightcyan” <p>If not specified the default value is “white”.</p> <p>6867i and 6739i only</p>
Scroll	Body	Optional	Defines the scrolling section of the display.
Height	Scroll tag	Optional	Specifies the height of the scroll zone. If not specified, the phone uses the remaining lines of the physical screen and does not allow footer lines.
Line	Scroll Body	Optional	Text to be displayed on the line in the scrolled zone. If the text is larger than the display, line is cropped to the last word.
Size	Line tag	Optional	<p>Size of the font for the line:</p> <ul style="list-style-type: none"> • “small” for the small font • “normal” for the regular font, • “double” for the larger font. • “large” for the largest font. <p>“normal” is the default value if not specified.</p> <p>“small” and “large” are available only on 6739i</p>
Align	Line tag	Optional	Alignment of the scrolled line, “left”, “right” or

Document Object	Position	Type	Comments
Color	Line tag	Optional	"center". If not specified the default value is "left". Color of the line, the possible values are: <ul style="list-style-type: none">• "white",• "black",• "red",• "green",• "brown",• "blue",• "magenta",• "cyan",• "lightgray",• "darkgray",• "lightred",• "lightgreen",• "yellow",• "lightblue",• "lightmagenta",• "lightcyan"
SoftKey	Body	Optional	If not specified the default value is "white". <i>6867i and 6739i only</i> See section 4.1 for details <i>Not available on non softkey phones</i>

Limitations on the non softkey phones

- Custom Softkeys are not supported
- Only 2 lines are available to display the object.
 - A double size line on line 1 does not allow any scrolling
 - The scroll height can not be more than 2.

3.4.5 Examples

XML Example 1 (non softkey phones)

```
<AastraIPPhoneFormattedTextScreen destroyOnExit = "yes">
  <Scroll Height="2">
    <Line>Line 1</Line>
    <Line>Line 2</Line>
    <Line Size="double">Line 3</Line>
    <Line>Line 4</Line>
    <Line>Line 5</Line>
  </Scroll>
  <Line Align="center">Footer</Line>
</AastraIPPhoneFormattedTextScreen>
```

Resulting Screen



Figure 46: FormattedTextScreen Example 1 (non softkey phones)

XML Example 2 (softkey phones)

```
<AAstraIPPhoneFormattedTextScreen destroyOnExit = "yes">
    <Line Size="double" Align="center">Formatted Screen</Line>
    <Scroll Height="2">
        <Line>Scrolling text1</Line>
        <Line>Scrolling text2</Line>
        <Line>Scrolling text3</Line>
        <Line>Scrolling text4</Line>
        <Line>Scrolling text5</Line>
    </Scroll>
    <Line Align="center">Footer</Line>
</AAstraIPPhoneFormattedTextScreen>
```

Resulting Screen

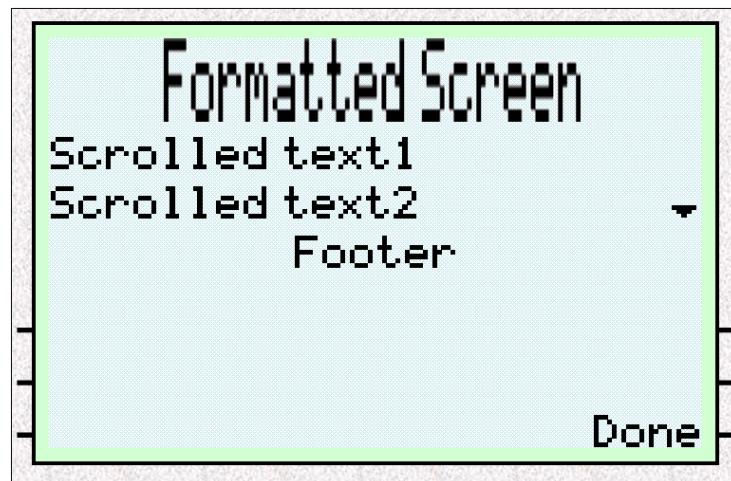


Figure 47: FormattedTextScreen Example 2 (softkey phones)

XML Example 3

In this example, there is no need for scrolling.

```
<AastraIPPhoneFormattedTextScreen destroyOnExit="yes">
    <Line Size="large" Align="center" Color="red">Header Line</Line>
    <Scroll>
        <Line>Scrolled Line 1</Line>
        <Line>Scrolled Line 2</Line>
        <Line>Scrolled Line 3</Line>
        <Line>Scrolled Line 4</Line>
        <Line>Scrolled Line 5</Line>
    </Scroll>
    <Line Size="double" Align="center" Color="blue">Footer Line</Line>
</AastraIPPhoneFormattedTextScreen>
```

Resulting Screen



Figure 48: FormattedTextScreen Example 3 (6739i)

XML Example 4

In this example, scrolling is needed.

```
<AastraIPPhoneFormattedTextScreen destroyOnExit="yes">
    <Line Size="large" Align="center" Color="red">FormattedTextScreen</Line>
    <Line Size="large" Align="center" Color="red">Header Line</Line>
    <Scroll>
        <Line>Scrolled Line 1</Line>
        <Line>Scrolled Line 2</Line>
        <Line>Scrolled Line 3</Line>
        <Line>Scrolled Line 4</Line>
        <Line>Scrolled Line 5</Line>
        <Line>Scrolled Line 6</Line>
        <Line>Scrolled Line 7</Line>
        <Line>Scrolled Line 8</Line>
        <Line>Scrolled Line 9</Line>
        <Line>Scrolled Line 10</Line>
    </Scroll>
    <Line Size="double" Align="center" Color="blue">FormattedTextScreen</Line>
    <Line Size="double" Align="center" Color="blue">Footer Line</Line>
</AastraIPPhoneFormattedTextScreen>
```

Resulting Screen

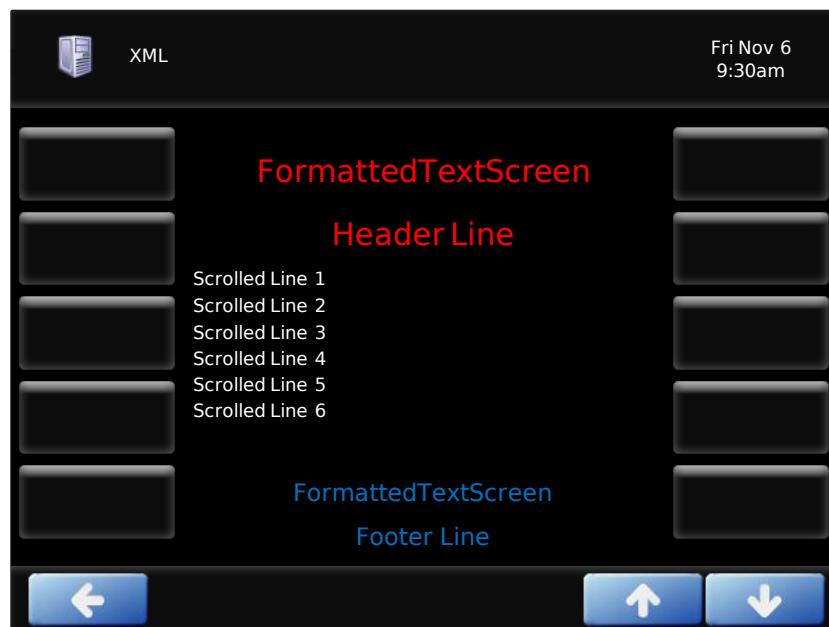


Figure 49: FormattedTextScreen Example 4 (6739i)

3.5 ImageScreen Object (55i/57i/57iCT/6735i/6737i/6867i/6739i)

The ImageScreen object can be used to display single image (bitmap for the 55i/57i/57iCT/6735i/6737i, jpeg or png file for 6867i and 6739i).

The user can specify where the image should be placed by setting horizontal and vertical alignment of the upper left hand corner, along with the height and width of the image.

3.5.1 Implementation (55i/57i/57iCT/6735i/6737i)

The image itself is specified as a series of hexadecimal characters. See chapter 4.2.1.1 for more details.

Note: With firmware 3.3.1 the image size is limited to 144x40 pixels.

Object native interaction

- **Done** Redisplays the previous XML object present in the phone browser.

Object default Softkeys (softkey phones)

Position	Label	Description	URIs
6	Done	Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

Note:

- the Left Arrow key default interaction is disabled if the LockIn tag is set to “yes”.
- the Left Arrow key default interaction can be modified using the cancelAction tag on a non-softkey phone.
- If the LockIn tag is set to “yes” and the cancelAction tag is configured, pressing the Left Arrow key triggers the configured cancelAction.
- the Right arrow key default interaction can be modified using the doneAction tag on a non-softkey phone.
- The up, down, left and right arrow key default interactions can be overridden using the scrollUp, scrollDown, scrollLeft and scrollRight tags.

3.5.2 Implementation (6867i)

For the 6867ii, the image is either a 24/32 bit depth “png” or a “jpeg” file located on a server and which can be downloaded by the phone using TFTP, FTP, HTTP or HTTPS. See chapter 4.2.1.2 for more details.

Three image sizes are supported:

- Up to 320x180 pixels (mode=regular or extended).
- Up to 320x240 pixels (mode=fullscreen). In that case, the softkeys are not displayed.

If the image is bigger than the size supported by the requested mode, the image is clipped based on the requested alignment.

If the image is smaller than the size supported by the requested mode, the image is displayed based on the requested alignment

The **Left** key is mapped to the cancelAction tag, if not specified the XML object is destroyed.

Note:



- the Left Arrow key default interaction is disabled if the `LockIn` tag is set to "yes".
- If the `LockIn` tag is set to "yes" and the `cancelAction` tag is configured, pressing the Left Arrow key triggers the configured `cancelAction`.
- The up, down, left and right arrow key default interactions can be overridden using the `scrollUp`, `scrollDown`, `scrollLeft` and `scrollRight` tags.

Object default Softkeys

Six (four physical) customizable softkeys are available for this object.

Position	Label	Interaction	URIs
4	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

The following figure details how the `AastraIPPhoneImageScreen` is implemented on the Aastra6867i.



Figure 50: ImageScreen 6867i implementation (mode regular/extended)

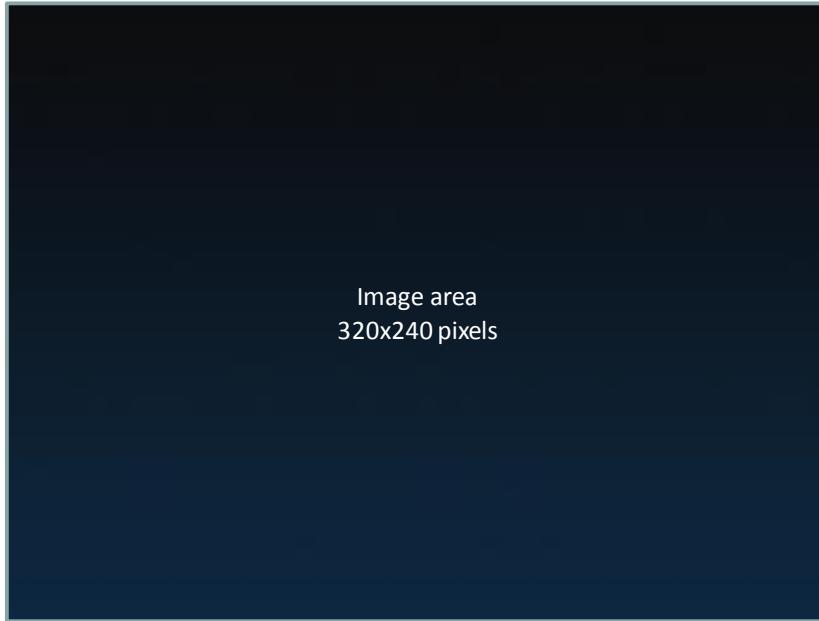


Figure 51: ImageScreen 6867i implementation (fullscreen mode)

Also a URI can be programmed to be called when the user presses the **Select** key (imageAction root tag). If this tag is empty, phone will use the URI configured by the doneAction tag (SoftKey:Exit by default).

So by default pressing the **Select** key destroys the current XML object unless an imageAction or a doneAction is configured.

Native Interaction

- “SoftKey:Exit”

3.5.3 Implementation (6739i)

For the 6739i, the image is either a 24 bit depth “png” or a “jpeg” file located on a server and which can be downloaded by the phone using TFTP, FTP, HTTP or HTTPS. See chapter 4.2.1.2 for more details.

Three image sizes are supported:

- 380x340 pixels (mode=regular).
- 640x340 pixels (mode=extended). In that case, the softkeys are not displayed.
- 640x480 pixels (mode=fullscreen). In that case, the softkeys are not displayed.

The key is mapped to the cancelAction tag, if not specified the XML object is destroyed.

Ten customizable softkeys are available for this object, there is no default softkey.



Note: the key interaction is disabled if the LockIn tag is set to "yes".

Object default Softkeys

Ten customizable softkeys are available for this object.

Position	Label	Interaction	URIs
10	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

The following figure details how the `AastraIPPhoneImageScreen` is implemented on the Aastra6739i.



Figure 52: ImageScreen 6739i implementation (normal mode)

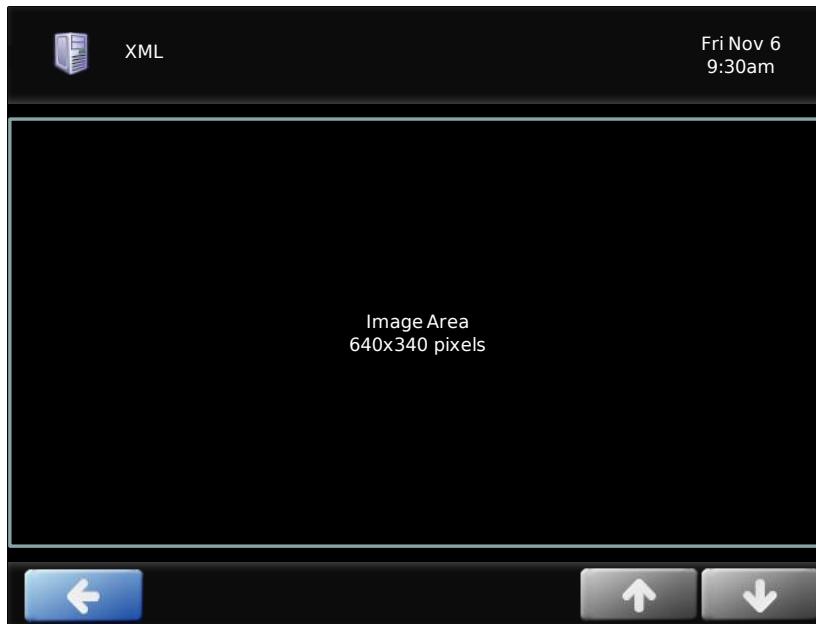


Figure 53: ImageScreen 6739i implementation (extended mode)

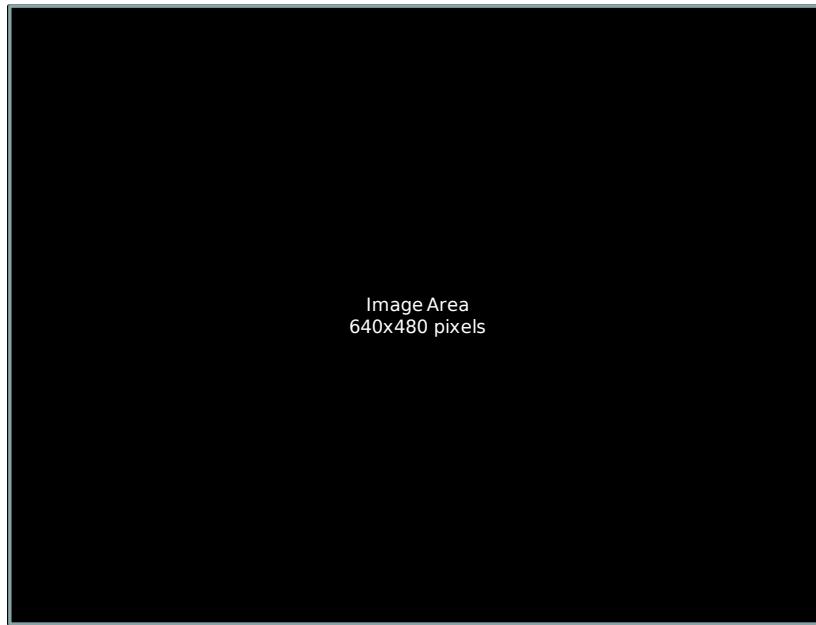


Figure 54: ImageScreen 6739i implementation (fullscreen mode)

Also a URI can be programmed to be called when the user presses on the displayed image (imageAction root tag). If this tag is empty, phone will use the URI configured by the doneAction tag (SoftKey:Exit by default).

So by default pressing on the image destroys the current XML object unless an imageAction or a doneAction is configured.

Native Interaction

- “SoftKey:Exit”

3.5.4 XML Description

“Red” tags indicates that the tag does not apply to all phones, when not supported the tags are just ignored.

```

<AastraIPPhoneImageScreen
    destroyOnExit = "yes/no"
    cancelAction = "some URI"
    doneAction = "some URI"
    imageAction = "some URI"
    Beep = "yes/no"
    Timeout = "some integer"
    LockIn = "yes/no"
    GoodbyeLockInURI = "some URI"
    allowDTMF = "yes/no"
    scrollUp = "some URI"
    scrollDown = "some URI"
    scrollLeft = "some URI"
    scrollRight = "some URI"
    mode = "regular/extended/fullscreen"
    >
    <TopTitle icon="icon index"
        Color="white/black/red/green/brown/blue/magenta
            cyan/lightgray/darkgray/lightred/lightgreen
                yellow/lightblue/lightmagenta/lightcyan"
    >Top Title</TopTitle>
    <Image
        verticalAlign = "top,middle,bottom"
        horizontalAlign = "left,middle,right"
        height = "height in pixels"
        width = "width in pixels"
    >Image as hexadecimal characters or URL</Image

```

XML Document Objects

Document Object	Position	Type	Comments
AastraIPPhoneImageScreen	Root tag	Mandatory	Root object
destroyOnExit	Root tag	Optional	“yes/no” indicates if the object is kept or not in the phone browser after exit. If not specified, the object is kept in the browser.
cancelAction	Root tag	Optional	Defines the URI to be called when the user cancels the XML object.

Document Object	Position	Type	Comments
doneAction	Root tag	Optional	Defines the URI to be called when the user selects the “Done” softkey or ‘SoftKey:Exit’.
imageAction	Root tag	Optional	Defines the URI to be called when the user presses on the image (6739i) or presses Select on 6867i. <i>6867i/6739i only.</i>
Beep	Root tag	Optional	“yes” or “no” to indicate if a notification beep must be generated by the phone.
Timeout	Root tag	Optional	Overrides the default 45 seconds timeout of the UI XML object. A Timeout set to “0” will disable the timeout feature. See section 4.10.2 for more details
LockIn	Root tag	Optional	If set to “yes”, the phone ignores all events that would cause the screen to exit without using the keys defined by the object. Default value is “no”. See section 4.10.3 for more details.
GoodbyeLockInURI	Root tag	Optional	Valid only if LockIn=“yes”, this tag defines a URI to be called when the “Goodbye” key is pressed during a locked XML session. This URI overrides the native behavior of the “Goodbye” key which is to destroy the current XML object displayed.
allowDTMF	Root tag	Optional	This tag allows letting keypad strokes as DTMF when the

Document Object	Position	Type	Comments
			phone is in the connected status.
scrollUp	Root tag	Optional	This tag allows overriding the default behavior of the Up arrow key. <i>Ignored on 6739i</i>
scrollDown	Root tag	Optional	This tag allows overriding the default behavior of the Down arrow key. <i>Ignored on 6739i</i>
scrollLeft	Root tag	Optional	This tag allows overriding the default behavior of the Left arrow key. <i>Ignored on 6739i</i>
scrollRight	Root tag	Optional	This tag allows overriding the default behavior of the Right arrow key. <i>Ignored on 6739i</i>
mode	Root tag	Optional	Configures the display mode, "regular", "extended" or "fullscreen" 6867i/6739i only
TopTitle	Body	Optional	Text to be used as top title for the object 6867i/6739i only.
Icon	TopTitle tag	Optional	Index of the icon to be used for the top title 6739i only.
Color	TopTitle tag	Optional	Label color, the possible values are: <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred",

Document Object	Position	Type	Comments
			<ul style="list-style-type: none"> • “lightgreen”, • “yellow”, • “lightblue”, • “lightmagenta”, • “lightcyan” <p>If not specified the default value is “white”. <i>6867i/6739i only</i></p>
Image	Body	Mandatory	<p>Image to be displayed as a series of hexadecimal characters (55i/57i/57iCT/6735i/6737i) or URL to get the png file. See section 4.2.1 for more details.</p>
verticalAlign	Image tag	Optional	<p>Vertical position of the image (“top”, “middle” or “bottom”). If the tag is not specified, the object will use “middle” as a default value.</p>
horizontalAlign	Image tag	Optional	<p>Horizontal position of the image (“left”, “middle” or “right”). If the tag is not specified, the object will use “middle” as a default value.</p>
Height	Image tag	Mandatory	<p>Height in pixels. Must match the image height. (not on 6867i) Optional and Ignored on 6867i</p>
Width	Image tag	Mandatory	<p>Width in pixels. Must match the image width. (not on 6867i) Optional and Ignored on 6867i</p>
SoftKey	Body	Optional	See section 4.1 for details

3.5.5 Examples

XML Example (55i/57i/57iCT)

```
<AastraIPPhoneImageScreen destroyOnExit="yes">
```

```

<Image height="40"
width="40">fffffffffc02fffffc05fffe7ff7a7fffffff0effe0d
7fffffea6bcfffffe796f3feff6fa289f0a86f4866fa20df42414595dd0134f8037
ed1637f0e2522b2dd003b6eb936f05fffb0d4f4107bba6eb0080e93715000010b754
001281271408c640252081b1b22500013c5c66201368004e04467520dc11067152b
82094d418e100247205805494780105002601530020931400020ac5c91088b0f2b0
8c21c07d0c2006009fdfe81f80efe0107fe0fb1c3ffff8ffc3ffffef8f7febffbf0f
87ffbf64</Image>
<SoftKey index="1" icon="1">
<Label>Mail</Label>
<URI>http://myserver.com/script.php?action=1</URI>
</SoftKey>
<SoftKey index="6">
<Label>Exit</Label>
<URI>SoftKey:Exit</URI>
</SoftKey>
<IconList>
<Icon index="1">Icon:Envelope</Icon>
</IconList>
</AastraIPPhoneImageScreen>

```

Resulting Screen



Figure 55: ImageScreen Example (55i/57i/57iCT/6735i/6737i)

XML Example (6739i)

```

<AastraIPPhoneImageScreen destroyOnExit="yes">
<Image height="64"
width="380">http://myserver.com/images/aastralogo.png</Image>
<SoftKey index="1" icon="1">
<Label>Mail</Label>
<URI>http://myserver.com/script.php?action=1</URI>
</SoftKey>
<SoftKey index="10">
<Label>Exit</Label>
<URI>SoftKey:Exit</URI>
</SoftKey>
<IconList>
<Icon index="1">Icon:Envelope</Icon>
</IconList>

```

</AastraIPPhoneImageScreen>

Resulting Screen



Figure 56: ImageScreen Example (6739i)

3.6 InputScreen Object – Single Input field (all models)

The InputScreen object allows developers to create a screen capable of gathering user input. The Aastra IP phones support seven input types:

- IP Addresses,
- Numbers (integers plus * and #),
- Strings,
- Dates (US and international format)
- Time (US and international format)

Each parameter has a URL tag that is used to send information back to the HTTP server. The label in the parameter tag is appended to the address in the URL tag and sent via HTTP GET.

3.6.1 Implementation (non softkey and softkey phones)

Object native interactions

- **Done/Submit** Completes the user input by submitting the programmed URI and value
- **Cancel** Redisplays the previous XML object present in the phone browser.

Non softkey phone keys

The object is displayed on two lines, one line for the prompt message and one line for the input field, the title is not displayed.

Line selected	Label	Keys
---------------	-------	------

	^Cancel	Up Arrow	Exit
	vDone	Down Arrow	Done
Input field		Right Arrow	Next Character
		Left Arrow	Previous Character
		prgkey2 (Delete)	Backspace

Note:



- the Up Arrow key interaction is disabled if the `LockIn` tag is set to "yes".
- the Up Arrow key interaction can be modified using the `cancelAction` tag.

Softkey phone keys

Line selected	Keys
Input field	Right Arrow Next Character
	Left Arrow Previous Character

55i/57i/57iCT/9480i/9480iCT/6735i/6737i Common default Softkeys

Position	Label	Description	URLs
5	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit
6	Cancel	Redisplays the previous XML object present in the phone browser. Not available if <code>LockIn</code> set to "yes".	SoftKey:Exit

3.6.2 Implementation on the 6867i

On the 6768i, the input is very similar to the softkey phones.

The **Left/Right** keys are used to navigate between characters in the input field.

The **Up/Down** keys allow up and down scrolling in order to display the previous/next input field.

The **Select** key is mapped to the `doneAction` tag (Submit by default).

Object native interaction

- **Submit** (SoftKey:Submit) Completes the user input by submitting the programmed URI and value.
- "SoftKey:Exit"

Common default Softkeys

Position	Label	Description	URLs
5(3)	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit

Position	Label	Description	URIs
6(4)	Cancel	Redisplays the previous XML object present in the phone browser. Not available if LockIn set to "yes".	SoftKey:Exit



Figure 57: InputScreen implementation on 6867i

3.6.3 Implementation (6739i)

On the 6739i, the input for a field is done via a virtual keyboard which is displayed when the user touches the input zone; the keyboard is removed if the user touches outside of the input zone.

The key is mapped to the cancelAction tag, if not specified the XML object is destroyed.

The key on the virtual keyboard resets the content of the input field to its default value.

The key on the virtual keyboard triggers the submission of the entered value.

The key on the virtual keyboard removes the keyboard from the display.

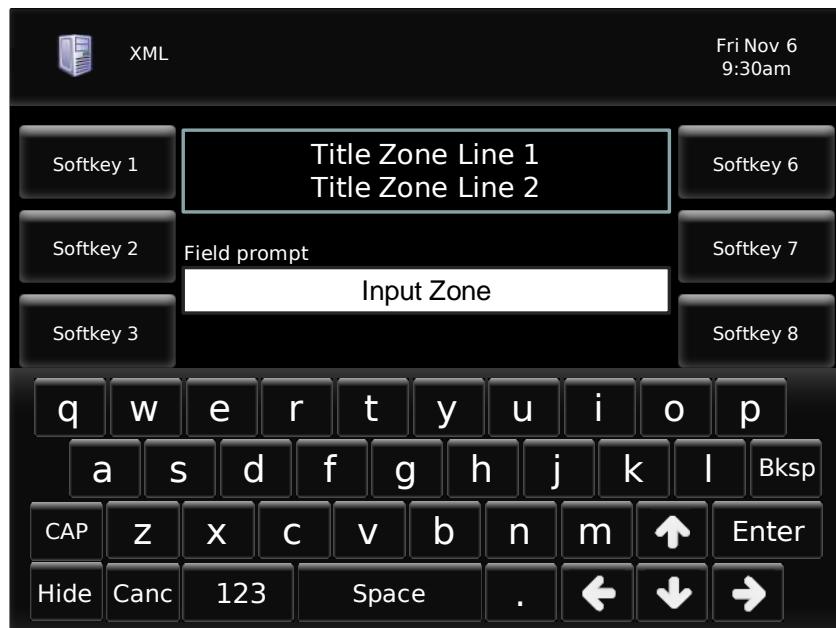


Figure 58: InputScreen implementation on 6739i

Object native interaction

- **Submit** (SoftKey:Submit) Completes the user input by submitting the programmed URI and value.
- “SoftKey:Exit”

Object default Softkeys

Ten customizable softkeys are available for this object.

Position	Label	Interaction	URIs
10	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

3.6.4 XML Description

“Red” tags indicates that the tag does not apply to all phones, when not supported the tags are just ignored.

```
<AastraIPPhoneInputScreen
    type = "IP/string/number/timeUS/timeInt/dateUS/dateInt"
    password = "yes/no"
    editable = "yes/no"
    destroyOnExit = "yes/no"
    cancelAction = "some URI"
    Beep = "yes/no"
    Timeout = "some integer"
    allowAnswer = "yes/no"
    allowDrop = "yes/no"
    allowXfer = "yes/no"
    allowConf = "yes/no"
    defaultFocus = "yes/no"
```

```

LockIn = "yes/no"
GoodbyeLockInURI = "some URI"
inputLanguage = "English / French / German / Italian / Spanish
/ Portuguese/ Russian / Nordic"
>
<Title      wrap="yes/no"
             Color="white/black/red/green/brown/blue/magenta
                     cyan/lightgray/darkgray/lightred/lightgreen
                     yellow/lightblue/lightmagenta/lightcyan"
>Title string</TitleTopTitle   icon="icon index"
             Color="white/black/red/green/brown/blue/magenta
                     cyan/lightgray/darkgray/lightred/lightgreen
                     yellow/lightblue/lightmagenta/lightcyan"
>Top Title</TopTitle>
<Prompt    Color="white/black/red/green/brown/blue/magenta
             cyan/lightgray/darkgray/lightred/lightgreen
             yellow/lightblue/lightmagenta/lightcyan"
>Guidance for the input</Prompt>
<URLURL>
<Parameter  Color="white/black/red/green/brown/blue/magenta
               cyan/lightgray/darkgray/lightred/lightgreen
               yellow/lightblue/lightmagenta/lightcyan"
>name of the parameter added to URL</Parameter>
<DefaultDefault>
<!--Additional Softkey Items may be added -->
<!--Additional Icon Items may be added -->
</AastraIPPhoneInputScreen>

```

XML Document Objects

Document Object	Position	Type	Comments
AastraIPPhoneInputScreen	Root tag	Mandatory	Root object
type	Root tag	Optional	Specifies the type of input, possible values are "IP", "string", "number", "timeUS", "timeInt", "dateUS", "dateInt". Default value is "string"
password	Root tag	Optional	Specifies if the input is masked by "*" characters. Default value is "no"
editable	Root tag	Optional	Specifies if the user is allowed to modify the input. Default value is "yes"
destroyOnExit	Root tag	Optional	"yes/no" indicates if the object is kept or not in the phone browser after exit. If not specified, the object is kept in the browser.
cancelAction	Root tag	Optional	Defines the URI to be called when the user cancels the

Document Object	Position	Type	Comments
			XML object.
Beep	Root tag	Optional	"yes" or "no" to indicate if a notification beep must be generated by the phone.
Timeout	Root tag	Optional	Overrides the default 45 seconds timeout of the UI XML object. A Timeout set to "0" will disable the timeout feature. See section 4.10.2 for more details
LockIn	Root tag	Optional	If set to "yes", the phone ignores all events that would cause the screen to exit without using the keys defined by the object. Default value is "no". See section 4.10.3 for more details.
GoodbyeLockInURI	Root tag	Optional	Valid only if LockIn="yes", this tag defines a URI to be called when the "Goodbye" key is pressed during a locked XML session. This URI overrides the native behavior of the "Goodbye" key which is to destroy the current XML object displayed.
defaultFocus	Root tag	Optional	If set to "yes", the input field automatically goes to edit mode (keyboard displayed). Default value is "no". <i>6739i only</i>
inputLanguage	Root tag	Optional	Defines the language character set used for the input. English by default. See section 15 for the localized key mapping.
allowAnswer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Ignore" and "Answer" if the XML object is displayed when the phone is in the ringing state. Default value is "no". See section 6.3 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i.</i>

Document Object	Position	Type	Comments
allowDrop	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Drop" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowXfer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Xfer" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowConf	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Conf" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
Title	Body	Optional	Text to be used as title for the object
Wrap	Title tag	Optional	If set to "yes" the title of the object will be wrapped on 2 lines. <i>Ignored on 6867i and 6739i</i>
Color	Title tag	Optional	Label color, the possible values are: <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred",

Document Object	Position	Type	Comments
			<ul style="list-style-type: none"> • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" <p>If not specified the default value is "white".</p> <p><i>6867i and 6739i only</i></p>
TopTitle	Body	Optional	<p>Text to be used as top title for the object</p> <p><i>6867i and 6739i only.</i></p>
Icon	TopTitle tag	Optional	<p>Index of the icon to be used for the top title</p> <p><i>6739i only.</i></p>
Color	TopTitle tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" <p>If not specified the default value is "white".</p> <p><i>6867i and 6739i only</i></p>
Prompt	Body	Mandatory	<p>Text to be displayed as guidance for the user input.</p>
Color	Prompt tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan",

Document Object	Position	Type	Comments
			<ul style="list-style-type: none"> • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" <p>If not specified the default value is "yellow" for 6867i and "white" for 6739i. <i>6867i and 6739i only</i></p>
URL	Body	Mandatory	URI called when user completes his input.
Parameter	Body	Mandatory	Name of the parameter to be added to the URL after input is complete.
Color	Parameter tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" <p>If not specified the default value is "white" for 6867i and "black" for 6739i. <i>6867i and 6739i only</i></p>
Default	Body	Mandatory	Default value to be displayed in the input field.
SoftKey	Body	Optional	<p>See section 4.1 for more details</p> <p><i>Only on 6867i, 6739i, 6755i, 6757i, 6757iCT, 6735i and 6737i.</i></p>

3.6.5 Input Type: IP

When the type is set to IP, the user input is restricted to integers only. The phone will validate the user input; if an invalid IP address is entered, nothing will be sent to the server and the user will receive an error message.

Object default Softkeys (softkey phones)

Position	Label	Description	URLs
1	Backspace	Deletes the character before the cursor in the input field.	SoftKey:BackSpace
2	Dot “.”	Inserts a “.” in the user input at the cursor position	SoftKey:Dot
5	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit
6	Cancel	Redisplays the previous XML object present in the phone browser. Does not appear if LockIn set to “yes”.	SoftKey:Exit

XML Example

```
<AastraIPPhoneInputScreen type = "IP">
  <Title>Proxy Server</Title>
  <Prompt>Server IP:</Prompt>
  <URL>http://10.50.10.53/script.pl</URL>
  <Parameter>proxy</Parameter>
  <Default></Default>
<AastraIPPhoneInputScreen>
```

Note: In this example, when the user press “Done” or “Submit” or “Enter” on the phone after entering “192.168.0.100”, the phone will call the following URL
 “<http://10.50.10.53/script.pl?proxy=192.168.0.100>”.

Resulting Screen (non softkey phone)



Figure 59: InputScreen “IP” Example (non softkey phone)

Resulting Screen (softkey phone)

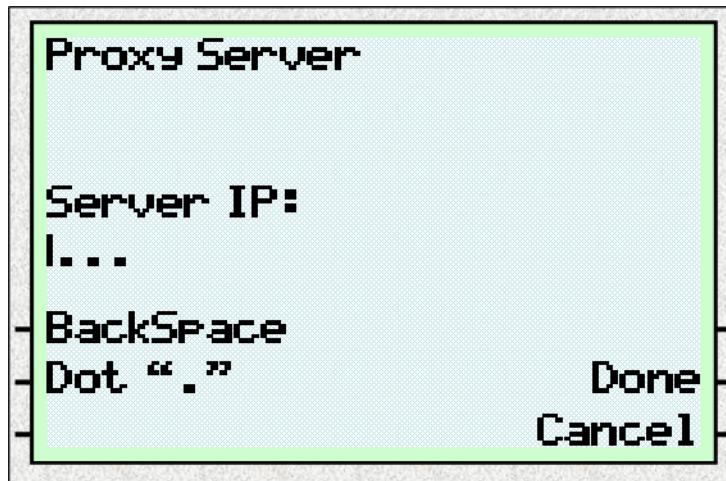


Figure 60: InputScreen “IP” Example (softkey phone)

Resulting Screen (6739i)

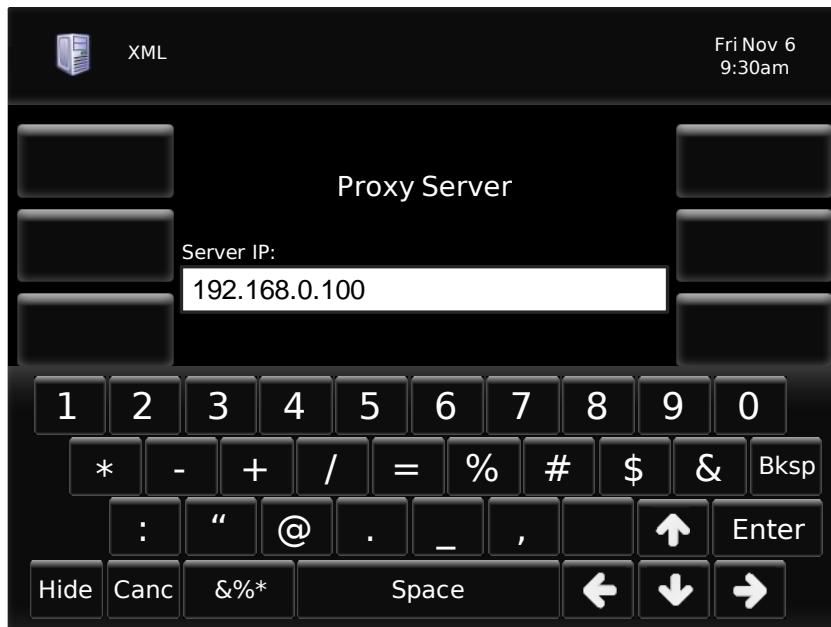


Figure 61: InputScreen “IP” Example (6739i)

3.6.6 Input Type: Number

Like an IP screen, a number input screen restricts the user to numbers only. Field validation is performed on the user input.

Object default Softkeys (softkey phones)

Position	Label	Description	URIs
1	Backspace	Deletes the character before the cursor in the input field.	SoftKey:BackSpace
5	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit

6	Cancel	Redisplays the previous XML object present in the phone browser. Does not appear if LockIn set to "yes".	SoftKey:Exit
---	--------	--	--------------

XML Example

```
<AAstraIPPhoneInputScreen type = "number">
  <Title>Proxy Port</Title>
  <Prompt>Port:</Prompt>
  <URL>http://10.50.10.53/script.pl</URL>
  <Parameter>port</Parameter>
  <Default>5060</Default>
<AAstraIPPhoneInputScreen>
```

Resulting Screen (non softkey phone)

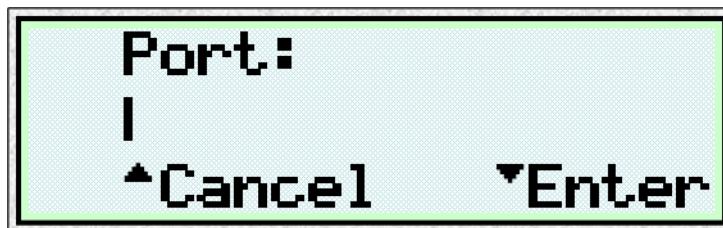


Figure 62: InputScreen “Number” Example (non softkey phone)

Resulting Screen (softkey phone)

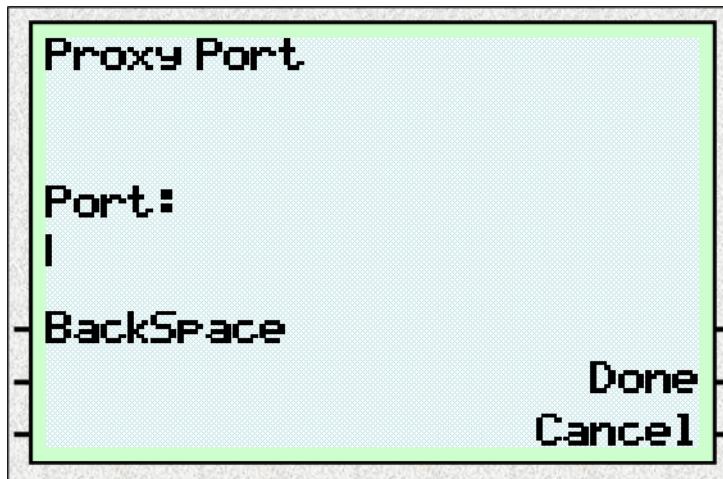


Figure 63: InputScreen “Number” Example (softkey phone)

Resulting Screen (6739i)

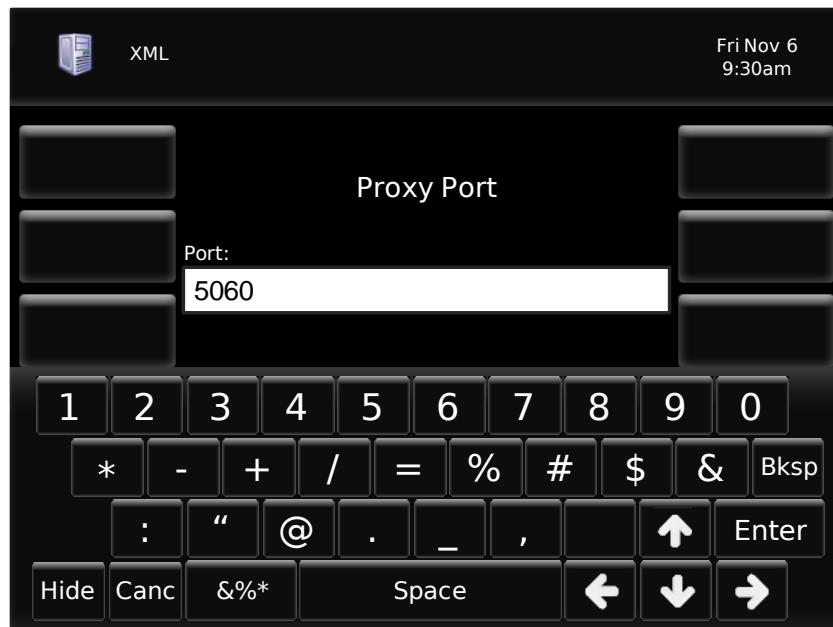


Figure 64: InputScreen “Number” Example (6739i)

Note: In this example, when the user presses “Done” or “Submit” or “Enter” on the phone after entering “5060”, the phone will call the following URL
 → “<http://10.50.10.53/script.pl?port=5060>”.

3.6.7 Input Type: String

When the input type is set to string, the user can enter uppercase letters, lowercase letters, symbols, and numbers.

Non softkey phone input

- The user can scroll through some available input symbols
 - . ; , = _ , - ‘ & () ’ by pressing the 1 key repeatedly.
 - # / \ @ by pressing the # key repeatedly.
 - * Space by pressing the * key repeatedly
- Keys 2-9 scroll through the keypad letters in upper case and lower case (e.g. pressing repeatedly 2 will scroll through ABC2abc or abc2ABC)

Softkey phone input

- The input mode can be switched via the Mode Key (Upper Case, Lower Case and Digits).
- The user can scroll through some available input symbols
 - . ; , = _ , - ‘ & () ’ by pressing the 1 key repeatedly.
 - # / \ @ by pressing the # key repeatedly.
 - * Space by pressing the * key repeatedly

- In Upper Case or Lower Case mode, keys 2-9 scroll through the keypad letters (e.g. pressing repeatedly 2 in Upper case mode will scroll through ABC2)

Object default Softkeys (softkey phones)

Position	Label	Description	URIs
1	Backspace	Deletes the character before the cursor in the input field.	SoftKey:BackSpace
2	Dot “.”	Inserts a “.” in the user input at the cursor position	SoftKey:Dot
3	ABC>	Toggle between input modes, “ABC”, “123”, “abc”.	SoftKey:ChangeMode
4	NextSpace	Inserts a space in the user input at the cursor position	SoftKey:NextSpace
5	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit
6	Cancel	Redisplays the previous XML object present in the phone browser. Does not appear if LockIn set to “yes”.	SoftKey:Exit

XML Example

```
<AastraIPPhoneInputScreen
  type = "string"
  password = "yes">
  <Title>SIP Settings</Title>
  <Prompt>Enter something</Prompt>
  <URL>http://10.50.10.53/script.pl</URL>
  <Parameter>passwd</Parameter>
  <Default></Default>
<AastraIPPhoneInputScreen>
```

Resulting Screen (non softkey phone)



Figure 65: InputScreen “String” Example (non softkey phone)

Resulting Screen (softkey phone)

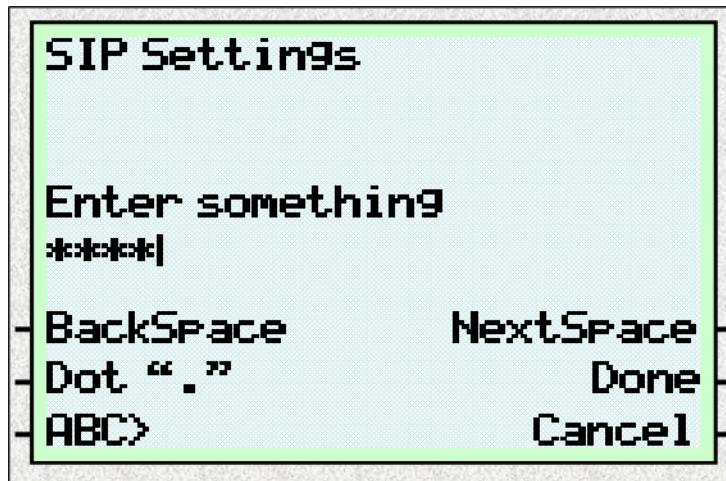


Figure 66: InputScreen “String” Example (softkey phone)

Resulting Screen (6739i)



Figure 67: InputScreen “String” Example (6739i)

Note: In this example, when the user press “Done” or “Submit” or “Enter” on the phone after entering “12345”, the phone will call the following URL
[“http://10.50.10.53/script.pl?passwd=12345”](http://10.50.10.53/script.pl?passwd=12345).

3.6.8 Input Type: timeUS

When the input type is set to “timeUS”, the user can enter a time using the US format with 12 hours cycle (HH:MM:SS AM/PM with HH from 00 to 12).

The user navigates between the various fields using the left and right navigation arrow keys, the toggle between AM and PM is done using the right navigation arrow key with the cursor positioned right before the AM/PM field.

Notes:


- the “password” attribute has no effect on this input type.
 - the format of the “Default” attribute must be HH:MM:SSXX where XX is AM or PM, HH between 00 and 12 and MM/SS between 00 and 59.
 - If the “Default” tag is empty, the phone displays “12:00:00 AM”.
 - On the 6867i, an extra softkey “AM/PM” is also available.
-

Object default Softkeys (softkey phones)

Position	Label	Description	URIs
5	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit
6	Cancel	Redisplays the previous XML object present in the phone browser. Does not appear if LockIn set to “yes”.	SoftKey:Exit

XML Example

```
<AastraIPPhoneInputScreen type = "timeUS">
  <Title>Time US</Title>
  <Prompt>Enter time:</Prompt>
  <URL>http://10.50.10.53/script.pl</URL>
  <Parameter>time</Parameter>
  <Default></Default>
<AastraIPPhoneInputScreen>
```

Resulting Screen (non softkey phone)


Figure 68: InputScreen “TimeUS” Example (non softkey phone)

Resulting Screen (softkey phone)



Figure 69: InputScreen “TimeUS” Example (softkey phone)

Resulting Screen (6739i)

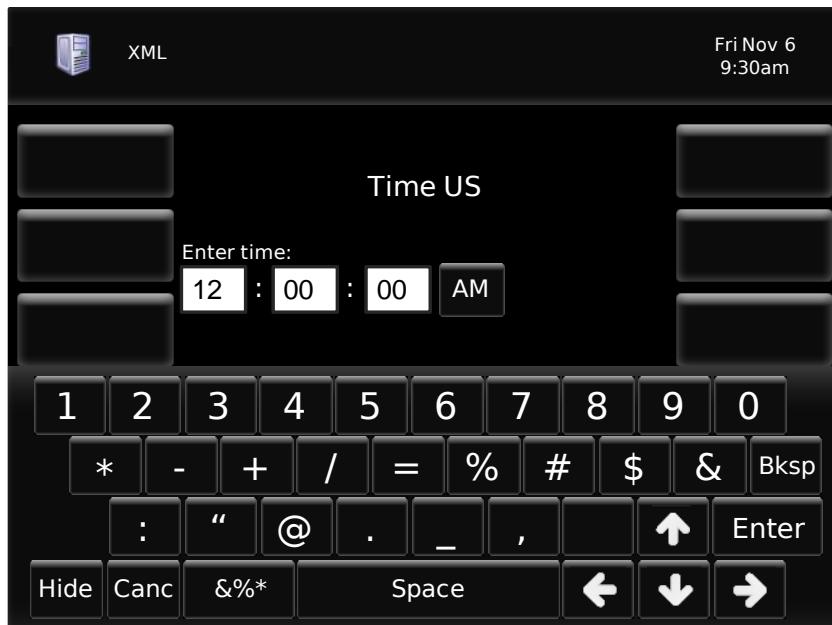


Figure 70: InputScreen “TimeUS” Example (6739i)

Note: In this example, when the user press “Done” or “Submit” or “Enter” on the phone after entering “10:20:00 AM”, the phone will call the following URL
→ “<http://10.50.10.53/script.pl?time=10:20:00AM>” (actually the phone URL encodes the URL so the “.” character is replaced by %3A but transparent to the receiving code)

3.6.9 Input Type: timeInt

When the input type is set to “timeInt”, the user can enter a time using the international format with a 24 hours cycle (HH:MM:SS with HH from 00 to 23).

The user navigates between the various fields using the left and right navigation arrow keys.

Notes:


- the “password” attribute has no effect on this input type.
 - the format of the “Default” attribute must be HH:MM:SS with HH from 00 to 23. If the “Default” tag is empty, the phone displays “00:00:00”.
-

Object default Softkeys (softkey phone)

Position	Label	Description	URIs
5	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit
6	Cancel	Redisplays the previous XML object present in the phone browser. Does not appear if LockIn set to “yes”.	SoftKey:Exit

XML Example

```
<AastraIPPhoneInputScreen type = "timeInt">
  <Title>Time International</Title>
  <Prompt>Enter time:</Prompt>
  <URL>http://10.50.10.53/script.pl</URL>
  <Parameter>time</Parameter>
  <Default></Default>
<AastraIPPhoneInputScreen>
```

Resulting Screen (non softkey phone)


Figure 71: InputScreen “TimeInt” Example (non softkey phone)

Resulting Screen (softkey phone)



Figure 72: InputScreen “Timelnt” Example (softkey phone)

Resulting Screen (6739i)

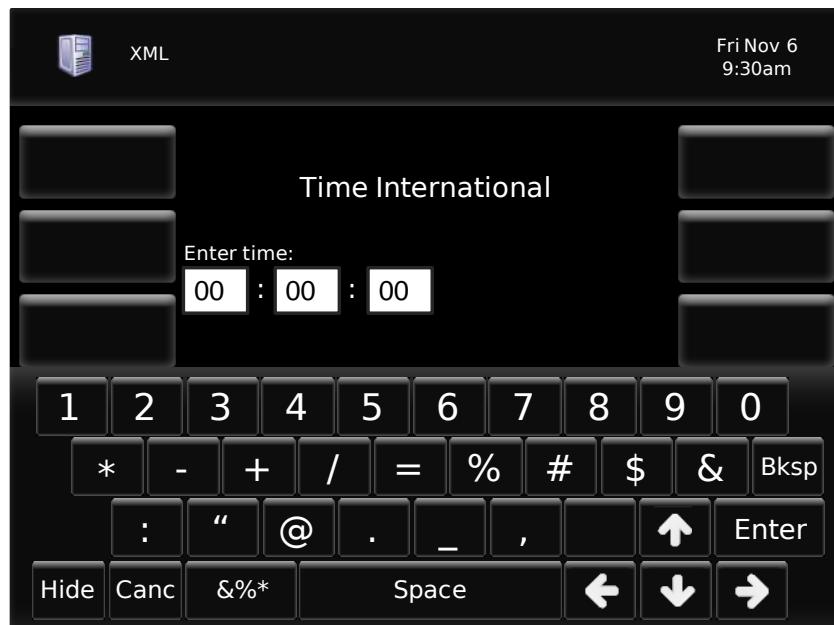


Figure 73: InputScreen “Timelnt” Example (6739i)

Note: In this example, when the user press “Done” or “Submit” or “Enter” on the phone after entering “14:20:00”, the phone will call the following URL
→ <http://10.50.10.53/script.pl?time=14:20:00> (actually the phone URL encodes the URL so the “.” character is replaced by %3A but transparent to the receiving code)

3.6.10 Input Type: dateUS

When the input type is set to “dateUS”, the user can enter a date using the US format (MM/DD/YYYY).

The user navigates between the various editable fields using the left and right navigation arrow keys.

Notes:


- the “password” attribute has no effect on this input type.
- the format of the “Default” attribute must be MM/DD/YYYY. If “Default” tag is empty, today’s date is displayed.

Object default Softkeys (softkey phone)

Position	Label	Description	URIs
5	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit
6	Cancel	Redisplays the previous XML object present in the phone browser. Does not appear if LockIn set to “yes”.	SoftKey:Exit

XML Example

```
<AastraIPPhoneInputScreen type = "dateUS">
  <Title>Date US</Title>
  <Prompt>Enter date</Prompt>
  <URL>http://10.50.10.53/script.pl</URL>
  <Parameter>date</Parameter>
  <Default></Default>
<AastraIPPhoneInputScreen>
```

Resulting Screen (non softkey phone)


Figure 74: InputScreen “DateUS” Example (non softkey phone)

Resulting Screen (softkey phone)



Figure 75: InputScreen “DateUS” Example (softkey phone)

Resulting Screen (6739i)

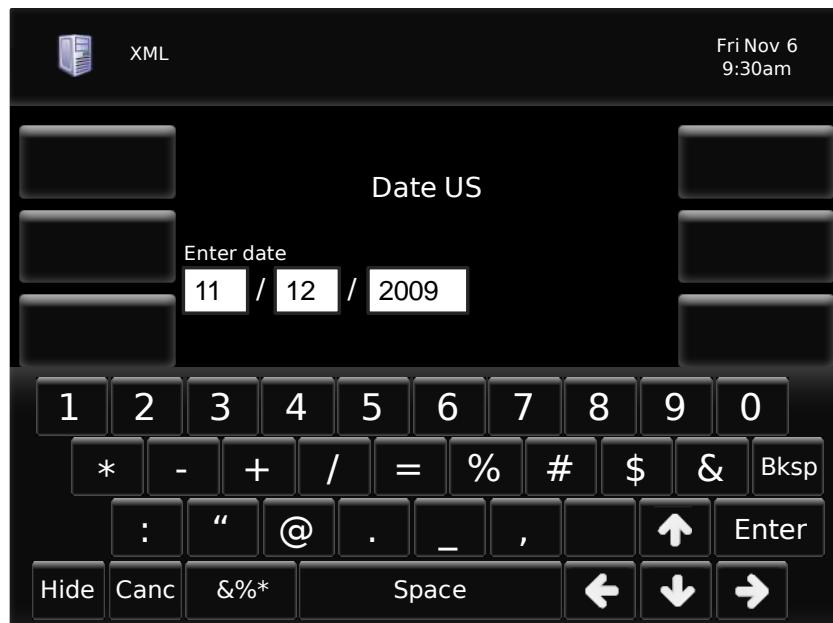


Figure 76: InputScreen “DateUS” Example (6739i)

Notes:

- In this example, when the user press “Done” or “Submit” or “Enter” on the phone after entering “06/14/2009”, the phone will call the following URL
“<http://10.50.10.53/script.pl?date=06/14/2009>”.
- the `InputScreen` object does not perform any control on the validity of the date entered by the user.

3.6.11 Input Type: dateInt

When the input type is set to “dateInt”, the user can enter a date using the international format (DD/MM/YYYY).

The user navigates between the various editable fields using the left and right navigation arrow keys.

Notes:


- the “password” attribute has no effect on this input type.
- the format of the “Default” attribute must be DD/MM/YYYY. If “Default” tag is empty, today’s date is displayed.

Object default Softkeys (softkey phones)

Position	Label	Description	URIs
5	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit
6	Cancel	Redisplays the previous XML object present in the phone browser. Does not appear if LockIn set to “yes”.	SoftKey:Exit

XML Example

```
<AastraIPPhoneInputScreen type = "dateInt">
  <Title>Date International</Title>
  <Prompt>Enter date</Prompt>
  <URL>http://10.50.10.53/script.pl</URL>
  <Parameter>date</Parameter>
  <Default></Default>
<AastraIPPhoneInputScreen>
```

Resulting Screen (non softkey phone)


Figure 77: InputScreen “DateInt” Example (non softkey phone)

Resulting Screen (softkey phone)



Figure 78: InputScreen “DateInt” Example (softkey phone)

Resulting Screen (6739i)



Figure 79: InputScreen “DateInt” Example

Notes:

- In this example, when the user press “Done” or “Submit” or “Enter” on the phone after entering “14/06/2009”, the phone will call the following URL
`“http://10.50.10.53/script.pl?date=14/06/2009”.`
- **Note:** the `InputScreen` object does not perform any control on the validity of the date entered by the user.

3.7 InputScreen Object – Multiple Input fields (55i / 57i / 57iCT / 9480i / 9480iCT / 6735i / 6737i / 6739i)

The InputScreen object can support up to 10 input fields, each of them potentially having different individual attributes.

The supported input types for each field are the same than the ones supported for the single input object plus an 'empty' type.

For each input field, the following attributes can be defined overriding the ones declared in the main object:

- Type
- Editable
- Password
- Prompt
- Default
- Parameter

Of course, only one URL can be defined to be called when the user has completed his inputs; the label in the parameter tags is appended to the address in the URL tag and sent via HTTP GET. If the Selection tag is used the value of the tag is also appended to the URL tag.

Two display modes are available for the Multiple Input AastralPPhoneInputScreen:

- Normal: similar aspect to the single input field with a prompt and the input field on 2 separate lines, two (55i / 57i / 57iCT / 9480i / 9480iCT / 6735i / 6737i) or three (6739i) input fields will be displayed per screen and the user will be able to scroll through them.
- Condensed: the prompt and the input field are on the same line, the prompts being right aligned on the longest prompt. Up to 5 fields are displayed on the same screen.

3.7.1 Implementation (softkey phones)

Object native interactions

- **Done/Submit** Completes the user input by submitting the programmed URI and value.
- **Cancel** Redisplays the previous XML object present in the phone browser

Softkey phone keys

Line selected	Keys
Input field	Right Arrow
	Left Arrow
	Next Character
	Previous Character

55i/57i/57iCT/9480i/9480iCT/6735i/6737i Common default Softkeys

Position	Label	Description	URLs
----------	-------	-------------	------

Position	Label	Description	URIs
5	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit
6	Cancel	Redisplays the previous XML object present in the phone browser. Not available if LockIn set to "yes".	SoftKey:Exit

3.7.2 Implementation on the 6867i

On the 6768i, the input is very similar to the softkey phones.

The **Left/Right** keys are used to navigate between characters in the input field.

The **Up/Down** keys allow up and down scrolling in order to display the previous/next input field.

The **Select** key is mapped to the doneAction tag (Submit by default).



Figure 80: InputScreen implementation on 6768i mode “normal”



Figure 81: InputScreen implementation on 6768i mode “condensed”

The number of fields displayed on a single screen depends on the presence of the optional title.

Object native interaction

- **Submit** Completes the user input by submitting the programmed URI and value.

- “SoftKey:Exit”

Object default Softkeys

Six customizable softkeys are available for this object. If more than 4 softkeys are configured or needed the softkeys are displayed on 2 pages.

Position	Label	Interaction	URIs
5(3)	Done	Completes the user input by submitting the programmed URI and value.	SoftKey:Submit
6(4)	Cancel	Redisplays the previous XML object present in the phone browser. Not available if LockIn set to “yes”.	SoftKey:Exit

3.7.3 Implementation on the 6739i

On the 6739i, the input for a field is done via a virtual keyboard which is displayed when the user touches the input zone; the keyboard is removed if the user touches outside of the input zone.

The  key is mapped to the cancelAction tag, if not specified the XML object is destroyed.

The   keys allow up and down scrolling in order to display all the fields if needed.

The  key on the virtual keyboard resets the content of the input field to its default value.

The  key on the virtual keyboard triggers the submission of the entered value.

The  key on the virtual keyboard removes the keyboard from the display.



Figure 82: InputScreen implementation on 6739i mode “normal”



Figure 83: InputScreen implementation on 6739i mode “condensed”

Object native interaction

- **Submit** Completes the user input by submitting the programmed URI and value.
- **“SoftKey:Exit”**

Object default Softkeys

Ten customizable softkeys are available for this object.

Position	Label	Interaction	URIs
10	Done	Exit: Redisplays the previous XML object present in the phone browser.	SoftKey:Exit

3.7.4 XML Description

“Red” tags indicates that the tag does not apply to all phones, when not supported the tags are just ignored.

```
<AAstraIPPhoneInputScreen
    type = "IP/string/number/timeUS/timeInt/dateUS/dateInt"
    password = "yes/no"
    editable = "yes/no"
    destroyOnExit = "yes/no"
    cancelAction = "some URI"
    Timeout = "some integer"
    LockIn = "yes/no"
    GoodbyeLockInURI = "some URI"
    allowAnswer = "yes/no"
```

```

    allowDrop = "yes/no"
    allowXfer = "yes/no"
    allowConf = "yes/no"
    defaultIndex = "some integer (1 to 10)"
    defaultFocus = "yes/no"
    displayMode = "normal/condensed"
  >
    <Title      wrap="yes/no"
                Color="white/black/red/green/brown/blue/magenta
                           cyan/lightgray/darkgray/lightred/lightgreen
                           yellow/lightblue/lightmagenta/lightcyan"
      >Title string</Title>
    <TopTitle   icon="icon index"
                Color="white/black/red/green/brown/blue/magenta
                           cyan/lightgray/darkgray/lightred/lightgreen
                           yellow/lightblue/lightmagenta/lightcyan"
      >Top Title</TopTitle>
    <Prompt     Color="white/black/red/green/brown/blue/magenta
                           cyan/lightgray/darkgray/lightred/lightgreen
                           yellow/lightblue/lightmagenta/lightcyan"
      >Guidance for the input</Prompt>
    <URL>Target receiving the input</URL>
    <Parameter  Color="white/black/red/green/brown/blue/magenta
                           cyan/lightgray/darkgray/lightred/lightgreen
                           yellow/lightblue/lightmagenta/lightcyan"
      >name of the parameter added to URL</Parameter>
    <Default>Default Value</Default>
    <InputField
      type = "IP/string/number
              timeUS/timeInt/dateUS/dateInt
              empty"
      password = "yes/no"
      editable = "yes/no"
    >
      <Prompt Color="white/black/red/green/brown/blue/magenta
                           cyan/lightgray/darkgray/lightred/lightgreen
                           yellow/lightblue/lightmagenta/lightcyan"
        >Guidance for the input</Prompt>
      <Parameter  Color="white/black/red/green/brown/blue/magenta
                           cyan/lightgray/darkgray/lightred/lightgreen
                           yellow/lightblue/lightmagenta/lightcyan"
        >parameter name added to URL</Parameter>
      <Default>Default Value</Default>
      <Selection>Selection</Selection>
      <!--Additional Softkey Items may be added -->
    </InputField>
  <!--Additional Input fields Items may be added -->
  <!--Additional Softkey Items may be added -->
  <!--Additional Icon Items may be added -->
</AastraIPPhoneInputScreen>

```

XML Document Objects

Document Object	Position	Type	Comments
-----------------	----------	------	----------

Document Object	Position	Type	Comments
AastraIPPhoneInputScreen	Root tag	Mandatory	Root object
Type	Root tag	Optional	Specifies the type of input, possible values are "IP", "string", "number", "timeUS", "timeInt", "dateUS", "dateInt". Default value is "string".
Password	Root tag	Optional	Specifies if the input is masked by "*" characters. Default value is "no"
Editable	Root tag	Optional	Specifies if the user is allowed to modify the input. Default value is "yes"
destroyOnExit	Root tag	Optional	"yes/no" indicates if the object is kept or not in the phone browser after exit. If not specified, the object is kept in the browser.
cancelAction	Root tag	Optional	Defines the URI to be called when the user cancels the XML object.
Timeout	Root tag	Optional	Overrides the default 45 seconds timeout of the UI XML object. A Timeout set to "0" will disable the timeout feature. See section 4.10.2 for more details
LockIn	Root tag	Optional	If set to "yes", the phone ignores all events that would cause the screen to exit without using the keys defined by the object. Default value is "no". See section 4.10.3 for more details.
GoodbyeLockInURI	Root tag	Optional	Valid only if LockIn="yes", this tag defines a URI to be called when the "Goodbye" key is pressed during a locked XML session. This URI overrides the native behavior of the "Goodbye" key which is to destroy the current XML object displayed.
allowAnswer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Ignore" and "Answer" if the

Document Object	Position	Type	Comments
			XML object is displayed when the phone is in the ringing state. Default value is "no". See section 6.4 for more details.
			<i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowDrop	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Drop" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowXfer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Xfer" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
allowConf	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Conf" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details. <i>Only for 6730i, 6731i, 53i, 6739i, 9143i, 6863i, 6865i</i>
defaultFocus	Root tag	Optional	If set to "yes", the first input field defined by defaultIndex automatically goes to edit mode (keyboard displayed). Default value is "no". <i>6739i only</i>
displayMode	Root tag	Optional	If set to "normal" the input fields will be displayed with the prompt and the input field on 2 lines. If set to "condensed" both the prompt and the input field are on the same line.

Document Object	Position	Type	Comments
			Default value is "normal"
defaultIndex	Root tag	Optional	Defines the field where the user will start his input amongst the multiple field inputs. Default 1.
Title	Body	Optional	Text to be used as title for the object
Wrap	Title tag	Optional	If set to "yes" the title of the object will be wrapped on 2 lines. <i>Ignored on 6867i and 6739i</i>
Color	TopTitle tag	Optional	Label color, the possible values are: <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" If not specified the default value is "white". <i>6867i and 6739i only</i>
TopTitle	Body	Optional	Text to be used as top title for the object <i>6867i and 6739i only.</i>
Icon	TopTitle tag	Optional	Index of the icon to be used for the top title <i>6739i only.</i>
Color	TopTitle tag	Optional	Label color, the possible values are: <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta",

Document Object	Position	Type	Comments
			<ul style="list-style-type: none"> • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" <p>If not specified the default value is "white". <i>6867i and 6739i only</i></p>
Prompt	Body	Optional	<p>Text to be displayed as guidance for the user input. Is used as the default value for each input field.</p>
Color	Prompt tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" <p>If not specified the default value is "yellow" for 6867i and "white" for 6739i. <i>6867i and 6739i only</i></p>
URL	Body	Mandatory	URI called when user completes his input.
Parameter	Body	Optional	<p>Name of the parameter to be added to the URL after input is complete. Is used as the default value for each input field.</p>
Color	Parameter tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • "white",

Document Object	Position	Type	Comments
			<ul style="list-style-type: none"> • “black”, • “red”, • “green”, • “brown”, • “blue”, • “magenta”, • “cyan”, • “lightgray”, • “darkgray”, • “lightred”, • “lightgreen”, • “yellow”, • “lightblue”, • “lightmagenta”, • “lightcyan” <p>If not specified the default value is “white”. <i>6867i and 6739i only</i></p>
Default	Body	Optional	Default value to be displayed in the input field. Is used as the default value for each input field.
InputField	Body	Optional	
Type	InputField tag	Optional	Specifies the type of input for the field, possible values are “IP”, “string”, “number”, “timeUS”, “timeInt”, “dateUS”, “dateInt” or “empty”. Overrides the value set in the root tag for the field. An “empty” value will create one blank line in condensed mode and 2 blank lines in normal mode.
Password	InputField tag	Optional	Specifies if the input is masked by “*” characters. Default value is “no”. Overrides the value set in the root tag for the field.
Editable	InputField tag	Optional	Specifies if the user is allowed to modify the input. Default value is “yes”. Overrides the value set in the root tag for the field
Prompt	InputField Body	Optional	Text to be displayed as guidance for the user input. Overrides the value set in the object for the field.

Document Object	Position	Type	Comments
Color	Prompt tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • “white”, • “black”, • “red”, • “green”, • “brown”, • “blue”, • “magenta”, • “cyan”, • “lightgray”, • “darkgray”, • “lightred”, • “lightgreen”, • “yellow”, • “lightblue”, • “lightmagenta”, • “lightcyan” <p>If not specified the default value is “yellow” for 6867i and “white” for 6739i.</p> <p><i>6867i and 6739i only</i></p>
Parameter	InputField Body	Optional	Name of the parameter to be added to the URL after input is complete. Overrides the value set in the object for the field.
Color	Parameter tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • “white”, • “black”, • “red”, • “green”, • “brown”, • “blue”, • “magenta”, • “cyan”, • “lightgray”, • “darkgray”, • “lightred”, • “lightgreen”, • “yellow”, • “lightblue”, • “lightmagenta”, • “lightcyan” <p>If not specified the default value is “white” for 6867i and “black” for 6739i</p> <p><i>6867i and 6739i only</i></p>

Document Object	Position	Type	Comments
Default	InputField Body	Optional	Default value to be displayed in the input field. Overrides the value set in the object for the field.
Selection	InputField Body	Optional	The content of this tag will be added when the "Submit" key is pressed while editing this field.
SoftKey	Body	Optional	See section 4.1 for details. Only on 6867i, 6739i, 6755i, 6757i, 6757iCT, 6735i and 6737i.

Note: when the InputField type is set to 'empty', a non editable blank line replaced the input field on the display when the XML object is in condensed mode, 2 blank lines for the normal mode. Also an empty field is a proper field; the defaultIndex value must consider the empty field as a plain field.

3.7.5 Examples

XML Example 1

```

<AastraIPPhoneInputScreen
    type="string"
    destroyOnExit="yes"
    displayMode="condensed"
>
    <Title>Restricted application</Title>
    <URL>http://myserver.com/script.php</URL>
    <Default/>
    <InputField type="empty">
    </InputField>
    <InputField type="string">
        <Prompt>Username:</Prompt>
        <Parameter>user</Parameter>
        <Selection>1</Selection>
    </InputField>
    <InputField type="number" password="yes">
        <Prompt>Password:</Prompt>
        <Parameter>passwd</Parameter>
        <Selection>2</Selection>
    </InputField>
    <SoftKey index="10">
        <Label>Exit</Label>
        <URI>SoftKey:Exit</URI>
    </SoftKey>
</AastraIPPhoneInputScreen>

```

Note: In this example, when the user press “Submit” on the phone after entering “admin” for the username and “22222” for the password, the phone will call the following URLs:



- <http://myserver.com/script.php?user=admin&passwd=22222&selection=1>, if the “Submit” or “Enter” key is pressed while editing the “User name” field,
- <http://myserver.com/script.php?user=admin&passwd=22222&selection=2>, if the “Submit” key or “Enter” is pressed while editing the “Password” field.

Resulting Screen (55i/57i/57iCT/9480i/9480iCT/6735i/6737i)



Figure 84: InputScreen multiple inputs “condensed” (55i/57i/57iCT/9480i/9480iCT/6735i/6737i)

Resulting Screen (6739i)

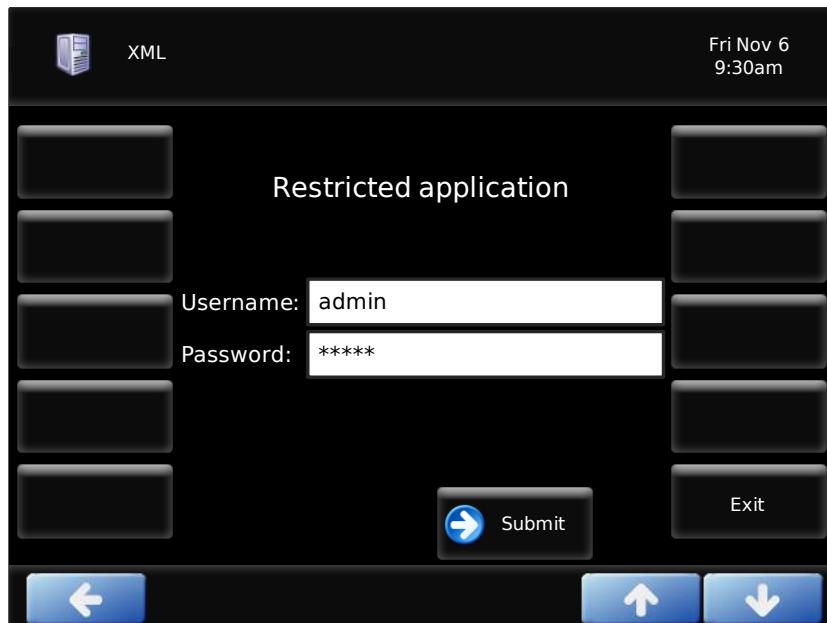


Figure 85: InputScreen multiple inputs “condensed” (6739i)

XML Example 2

```
<AastraIPPhoneInputScreen
    type="string"
```

```
destroyOnExit="yes"
>
<Title>Date and Time</Title>
<URL>http://myserver.com/script.php</URL>
<Default/>
<InputField type="dateUS">
    <Prompt>Enter Date</Prompt>
    <Parameter>date</Parameter>
</InputField>
<InputField type="timeUS">
    <Prompt>Enter Time</Prompt>
    <Parameter>time</Parameter>
</InputField>
<SoftKey index="10">
    <Label>Exit</Label>
    <URI>SoftKey:Exit</URI>
</SoftKey>
</AastraIPPhoneInputScreen>>
```

Note: In this example, when the user press “Done” on the phone after entering “2/21/2010” for the date and “12:00:00 AM” for the time, the phone will call the following URL “<http://myserver.com/script.php?date=02/21/2010&time=12:00:00AM>”.

Resulting Screen (55i/57i/57iCT/9480i/9480iCT/6735i/6737i)

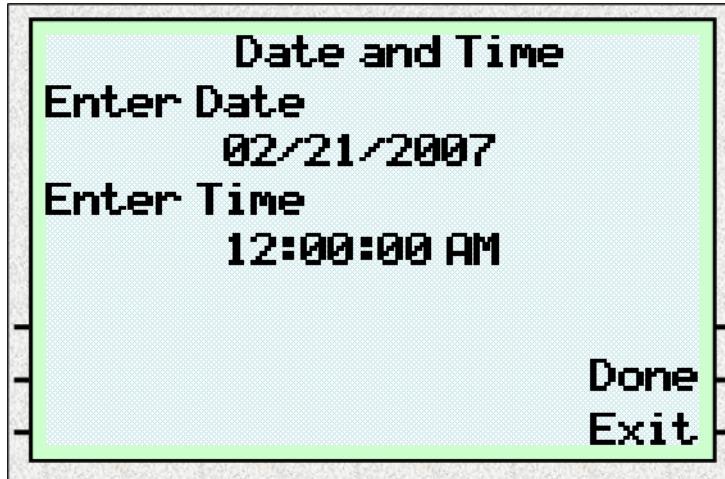


Figure 86: InputScreen multiple inputs “normal” ((55i/57i/57iCT/9480i/9480iCT/6735i/6737))

Resulting Screen (6739i)

XML

Fri Nov 6
9:30am

Date and Time

Enter Date

02 / 21 / 2010

Enter Time

12 : 00 : 00 AM

Submit

Exit

← ↑ ↓

Figure 87: InputScreen multiple inputs "normal" (6739i)

3.8 PhoneCallLog Object (6739i only)

The PhoneCallLog object is an UI XML object which mimics the 6739i native user interface for “Call Logs” and “Redial”.

This object allows displaying a list of calls identified by the following parameters for a call:

- Name,
- Number
- Call Date/Time
- Call duration
- Call type (incoming, outgoing, missed)
- Call terminal type (home, office, mobile)
- Number of calls
- SIP line used

Each individual call is displayed in a selectable list and is detailed on the right side of the display. If the image server is configured on the phone, the object also performs an image lookup on the provided number as long as the `image server uri` parameter is properly configured.

3.8.1 Implementation

This object is only available on the 6739i.

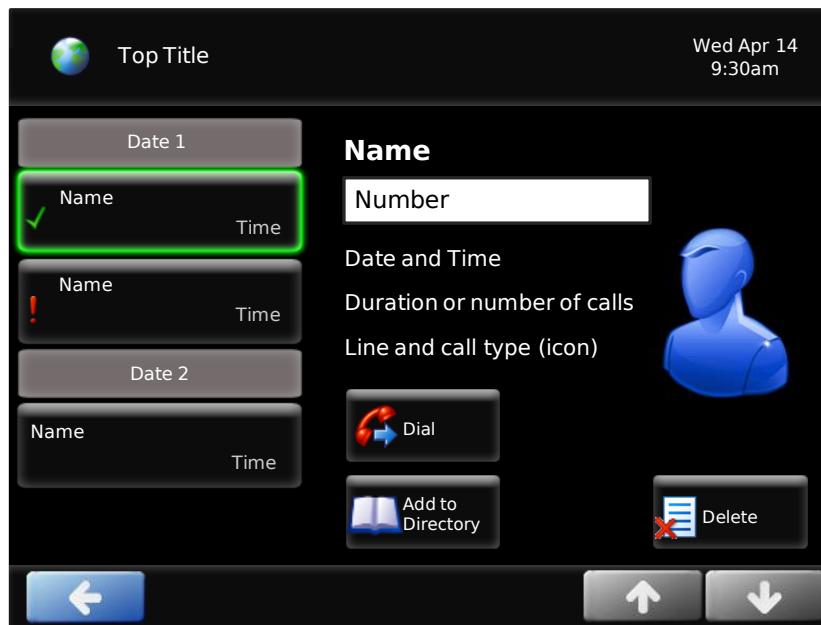


Figure 88: CallLog Implementation

The list of calls is presented as a selectable list sorted by descending date/time on the left side of the screen.

-
-  **Note:** the list is limited to 50 items.
-

The call details of a selected call are displayed on the right side.

-  **Note:** this object has no custom softkey.
-

Object interaction

- The  key is mapped to the `cancelAction` tag, if not specified the XML object is destroyed.
- The   keys allow scrolling up and down the list of calls if needed. When one end is reached they are mapped to `scrollUp` or `scrollDown` tags, if not specified the XML object follows `scrollConstrain` tag.
- The  key is mapped to the `dialUri` tag, if not specified the phone dials the number using the first available line. Selection tag (if set) from the selected log item is added to the HTTP request the same way it would be done for a custom softkey, refer to section 4.2.2 for more details.
- The  key is mapped to the `addUri` tag, if not specified the phone adds the contact name and number in the phone embedded directory. Selection tag (if set) from the selected log item is added to the HTTP request the same way it would be done for a custom softkey, refer to section 4.2.2 for more details.
- The  key is mapped to the `deleteUri` and `deleteAllUri` tag (pressing this key brings a menu with the choice “Delete” or “Delete All”, if not specified the phone deletes the data locally within the object. Selection tag (if set) from the selected log item is added to the HTTP request the same way it would be done for a custom softkey, refer to section 4.2.2 for more details.

-
-  **Note:** the  key interaction is disabled if the `LockIn` tag is set to “yes”.
-

3.8.2 XML Description

```
<AastraIPPhoneCallLog
    destroyOnExit = "yes/no"
    Beep = "yes/no"
    cancelAction = "some URI"
    Timeout = "some integer"
    LockIn = "yes/no"
    GoodbyeLockInURI = "some URI"
    allowAnswer = "yes/no"
    allowDrop = "yes/no"
    allowXfer = "yes/no"
    allowConf = "yes/no"
    scrollUp = "some URI"
    scrollDown = "some URI"
    deleteUri = "some URI"
    deleteAllUri = "some URI"
    dialUri = "some URI"
    addUri = "some URI"
>
<TopTitle  icon="icon index"
           Color="white/black/red/green/brown/blue/magenta
```

```

cyan/lightgray/darkgray/lightred/lightgreen
yellow/lightblue/lightmagenta/lightcyan"
>Top Title</TopTitle>
<LogItem type = "incoming/outgoing/missed"
duration = "call duration in seconds"
callingTerminal = "office/mobile/home"
count = "number of calls"
line = "SIP line used 1-9"
<Name>name</Name>
<Number>number</Number>
<Date>date as MM-DD-YYYY</Date>
<Time>time as HH:MM (24 hours)</Time>
<Selection>selection to be added</Selection>
</LogItem>
<!--Additional Log Items may be added (up to 50)-->
<!--Additional Icon Items may be added -->
</AastraIPPhoneCallLog>

```

XML Document Objects

Document Object	Position	Type	Comments
AastraIPPhoneCallLog	Root tag	Mandatory	Root object
destroyOnExit	Root tag	Optional	"yes/no" indicates if the object is kept or not in the phone browser after exit. If not specified, the object is kept in the browser.
cancelAction	Root tag	Optional	Defines the URI to be called when the user cancels the XML object.
Beep	Root tag	Optional	"yes" or "no" to indicate if a notification beep must be generated by the phone.
Timeout	Root tag	Optional	Overrides the default 45 seconds timeout of the UI XML object. A Timeout set to "0" will disable the timeout feature. See section 4.10.2 for more details
LockIn	Root tag	Optional	If set to "yes", the phone ignores all events that would cause the screen to exit without using the keys defined by the object. Default value is "no". See section 4.10.3 for more details.
GoodbyeLockInURI	Root tag	Optional	Valid only if LockIn="yes", this tag defines a URI to be called when the "Goodbye" key is pressed during a locked XML session. This URI overrides the native behavior of the "Goodbye" key which is to destroy

Document Object	Position	Type	Comments
			the current XML object displayed.
allowAnswer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Ignore" and "Answer" if the XML object is displayed when the phone is in the ringing state. Default value is "no". See section 6.3 for more details.
allowDrop	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Drop" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details.
allowXfer	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Xfer" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details.
allowConf	Root tag	Optional	This tag applies only to the non-softkey phones. If set to "yes", the phone will display "Conf" if the XML object is displayed when the phone is in the connected state. Default value is "no". See section 6.4 for more details.
scrollConstrain	Root tag	Optional	If set to "yes", the phone will not "wrap" the list: scrolling down the last item does not move the cursor to the first item. Default value is "no".
scrollUp	Root tag	Optional	This tag allows overriding the default behavior of the Up arrow key once the scrolling reaches an end.
scrollDown	Root tag	Optional	This tag allows overriding the default behavior of the Down arrow key once the scrolling reaches an end.
dialUri	Root tag	Optional	This tag allows overriding the default behavior of the "Dial" button.
deleteUri	Root tag	Optional	This tag allows overriding the default behavior of the "Delete" button.
deleteAllUri	Root tag	Optional	This tag allows overriding the default behavior of the "Delete All" button.
addUri	Root tag	Optional	This tag allows overriding the default behavior of the "Add to Directory" button.

Document Object	Position	Type	Comments
TopTitle	Body	Optional	Text to be used as top title for the object
Icon	TopTitle tag	Optional	Index of the icon to be used for the top title
Color	TopTitle tag	Optional	<p>Label color, the possible values are:</p> <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown", • "blue", • "magenta", • "cyan", • "lightgray", • "darkgray", • "lightred", • "lightgreen", • "yellow", • "lightblue", • "lightmagenta", • "lightcyan" <p>If not specified the default value is "white".</p>
LogItem	Body	Mandatory	Log Item (up to 50 instances, minimum is 1 instance)
duration	LogItem tag	Optional	Call duration in seconds.
type	LogItem tag	Optional	<p>Call type, possible values are:</p> <ul style="list-style-type: none"> • incoming • outgoing • missed <p>If not provided, "missed" is assumed.</p>
callingTerminal	LogItem tag	Optional	<p>For incoming calls, type of terminal, possible values are:</p> <ul style="list-style-type: none"> • home • office • mobile <p>No default value.</p>
count	LogItem tag	Optional	Number of calls from the caller.
line	LogItem tag	Optional	SIP Line used for the call, 1 to 9.
Name	LogItem tag	Optional	Caller or Callee name.

Document Object	Position	Type	Comments
Number	LogItem body	Mandatory	Caller or Callee number
Date	LogItem body	Mandatory	Call date MM-DD-YYYY
Time	LogItem body	Mandatory	Call time HH:MM (24 hours)
Selection	LogItem body	Optional	This tag must be used in conjunction with custom uris (addUri, deleteUri, deleteAllUri and dialUri). See Section 4.11 for details
IconList	Body	Optional	List of icon definitions
Icon	IconList body	Optional	Icon value, it can be "Icon:Iconname" or the URL to a png file. See section 4.2.2 for more details.
Index	Icon tag	Optional	Index of the icon must be consistent with the 'Icon' used in the object.

3.8.3 Examples

XML Example

Application for a Callers List replacement

```

<?xml version="1.0" encoding="ISO-8859-1"?>
<AastraIPPhoneCallLog
  destroyOnExit="yes"
  addUri="http://myserver/myscript?action=add"
>
  <TopTitle icon="1">Callers List</TopTitle>
  <LogItem duration="60"
    type="incoming"
    callingTerminal="mobile"
    line="1">
    <Name>John Doe</Name>
    <Number>972-555-2345</Number>
    <Date>01-01-2012</Date>
    <Time>15:28</Time>
    <Selection>1</Selection>
  </LogItem>
  <LogItem type="missed"
    callingTerminal="home"
    count="2"
    line="1">
    <Name>Jane Doe</Name>
    <Number>408-555-1234</Number>
    <Date>01-05-2011</Date>
    <Time>10:01</Time>
    <Selection>2</Selection>
  </LogItem>
  <IconList>
    <Icon index="1">Icon:Book</Icon>
  </IconList>
</AastraIPPhoneCallLog>

```

Resulting Screen

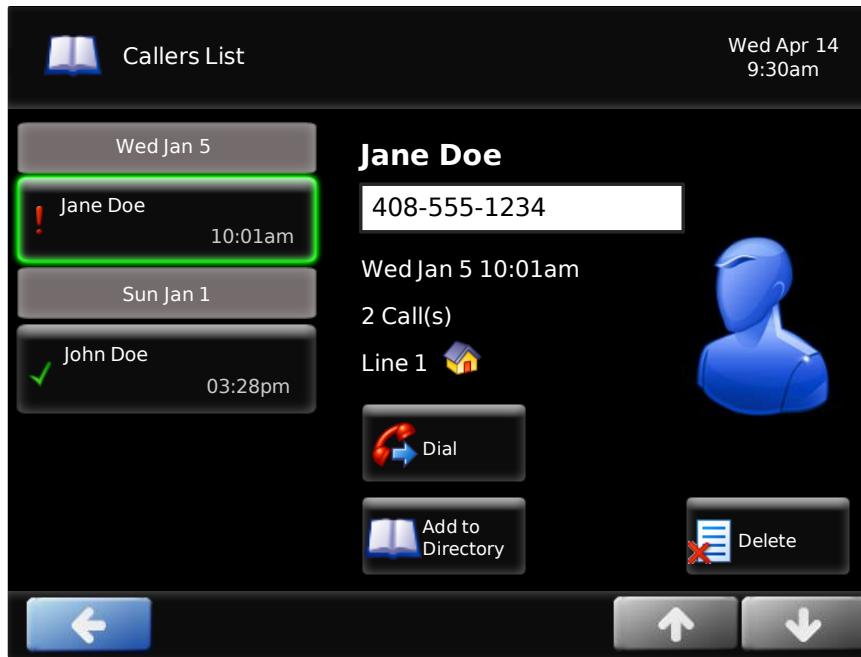


Figure 89: PhoneCallLog Example

If user presses the “Add to directory” button, phone will perform the following HTTP GET.

`http://myserver/myscript?action=add&selection=2`

3.9 PhoneStatus Object

The `AastralIPPhoneStatus` object provides the ability to display a status message or icon on the phone’s idle screen when XML information is pushed from the servers.

If the phone receives multiple messages, the first message received displays first and the remaining messages scroll consecutively one at a time.

The `AastralIPPhoneStatus` object supports 3 modes for the messages to be displayed:

- Normal mode: messages remain displayed until they are removed (by the server) or after a phone reboot.
- Alert mode: messages are displayed on top of the existing messages only for a limited time (3 seconds by default).
- Icon mode (6739i only): icons are displayed on the top line of the display and remain there until they are removed (by the server) or after a phone reboot.

Note: You can set the amount of time, in seconds, that a message displays to the phone before scrolling to the next message (See *Scroll delay* below).

3.9.1 Implementation (non softkey and softkey phones)

The softkey phones display messages on the second line in the phone window (where “No Service” would display if there was no service. If there is no service on the phone, the “No Service” message overrides the XML object message).

The non softkey phones display messages on the second line. Long messages that are wider then the phone screen get truncated.

Default Softkeys

Not Applicable, this object has no predefined softkey as it impacts only the idle screen of the Aastra SIP Phones.



Note: On the 6867i alert messages are displayed in red

3.9.2 Implementation on the 6739i

On the 6739i, the status messages are displayed in a “box” on the idle screen which is also used by the phone to display the missed calls. This “box” can either be flat or a button the user can press if an URI has been sent along with the XML object.

Also on the 6739i, icons can be added to the text. For more details on the 6739i icons please refer to chapter 4.2.2.2.

The user can scroll between messages (if more than one) using the  and  keys on the side of the status “box”.

The XML object also controls the display of icons on the top line of the display with the same mechanism used by the text messages. If a text message is sent along with the icon, it is displayed below the icon as long as the message is between “00” and “99”, which matches the MWI indicator.

The `AastraIPPhoneStatus` object feature is always enabled.



Note: Alert messages are displayed in red (default color) on the 6739i. This can be changed using the “Color” tag.

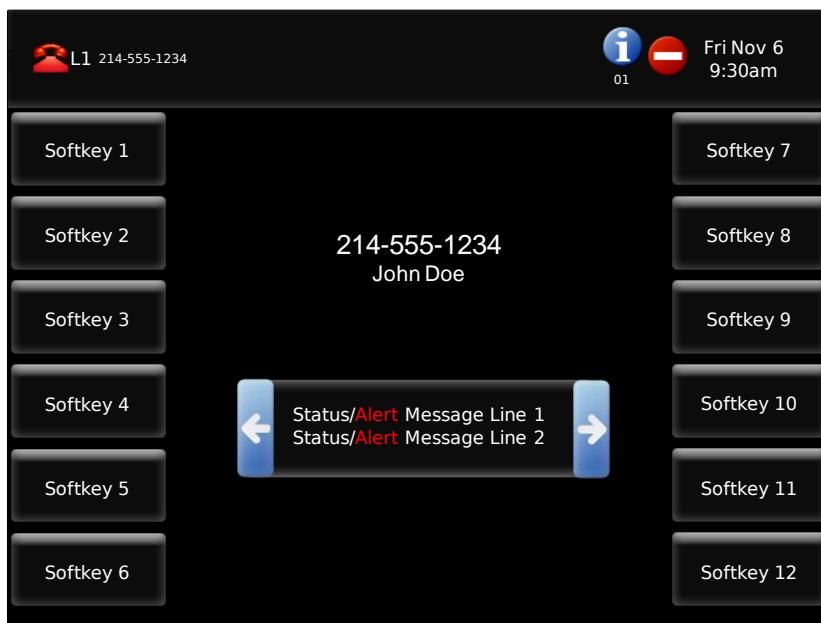


Figure 90: AastralIPPhoneStatus implementation on the 6739i (no URI callback)

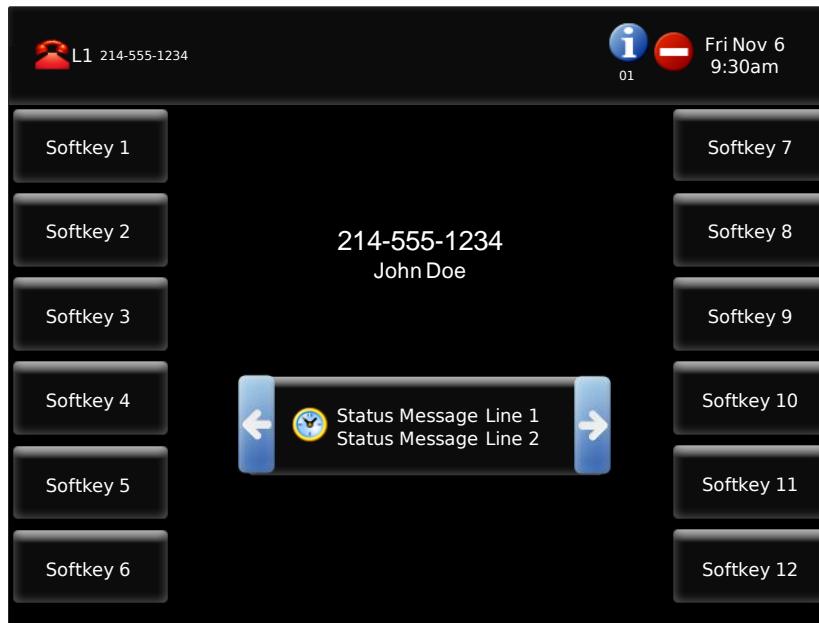


Figure 91: AastralIPPhoneStatus implementation on the 6739i (with URI callback)

3.9.3 XML Description

“Red” tags indicates that the tag does not apply to all phones, when not supported the tags are just ignored.

```
<AastralIPPhoneStatus
    Beep = "yes/no"
    triggerDestroyOnExit = "yes/no"
>
    <Session>Session ID</Session>
    <Message
        Index = "index"
        Color="white/black/red/green/brown/blue/magenta
               cyan/lightgray/darkgray/lightred/lightgreen
               yellow/lightblue/lightmagenta/lightcyan"
        Type = "alert/icon"
        Timeout = "timeout"
        URI = "some URI"
        icon = "icon index"
    >Message</Message>
    <!--Additional Message Items may be added -->
    <!--Additional Icon Items may be added -->
</AastralIPPhoneStatus>
```

Notes:



- The *Session ID* must be unique to the application sending the XML object to the phone. It is up to the application to generate that session ID, which does not have to be limited to just numbers. It could be a combination of letters and numbers. There

could only be one Session tag per PhoneStatusMsg object. If the Session tag is not provided, the phone assumes a default value (0) for it; this can be used if you don't have multiple applications displaying messages on the idle screen.

- The type="alert" tag indicates the alert mode, if not specified, the message is displayed in the normal mode. In this mode a timeout of "0" indicates that the alert message is displayed until a new alert is posted or until the phone is rebooted.
 - The type="icon" indicates the icon mode, if not specified, the message is displayed in the normal mode.
-

Scroll Delay

The Scroll delay can be configured via the configuration files and the Aastra Web UI using the following parameters:

- xml status scroll delay (via configuration files)
- Status Scroll Delay (in seconds) (via the Aastra Web UI see chapter 7.6)

XML Document Objects

Document Object	Position	Type	Comments
AastralPPPhoneStatus	Root tag	Mandatory	Root object
Beep	Root tag	Optional	"yes" or "no" to indicate if a notification beep must be generated by the phone.
triggerDestroyOnExit	Root tag	Optional	If the XML object is sent as an answer to a UI object, setting this parameter to "yes" will trigger the exit of the calling object as if it was a UI object. See section 4.10.4 for more details.
Session	Body	Optional	Session ID used to identify the application displaying message. It allows message change and message reset.
Message	Body	Mandatory	Message to be displayed or empty to reset the message.
index	Message tag	Mandatory	Index of the message for the session, the index starts at 0.
Color	Prompt tag	Optional	Label color, the possible values are: <ul style="list-style-type: none"> • "white", • "black", • "red", • "green", • "brown",

Document Object	Position	Type	Comments
<code>type</code>	Message tag	Optional	<ul style="list-style-type: none"> “blue”, “magenta”, “cyan”, “lightgray”, “darkgray”, “lightred”, “lightgreen”, “yellow”, “lightblue”, “lightmagenta”, “lightcyan” <p>If not specified the default value is “white” for standard messages and “red” for alert messages.</p> <p><i>6739i only</i></p>
<code>Timeout</code>	Message tag	Optional	<p>Type of message,</p> <ul style="list-style-type: none"> “alert” to indicate that the message is displayed for a limited time. “icon” to indicate an update of the top line icons. <p>If not specified the message stays on the screen until it is reset by an empty message or after a phone reboot.</p> <p><i>“icon” value is for 6739i only</i></p>
<code>URI</code>	Message tag	Optional	Timeout of the “alert” message, overrides the 3s default value. If set to “0” the message is displayed indefinitely.
<code>icon</code>	Message tag	Optional	URI to be called when the user presses the message button on the idle screen
<code>IconList</code>	Body	Optional	<p><i>6739i only</i></p> <p>Index of the icon to be used for this message/alert.</p> <p><i>6739i only</i></p>
			List of icons used in the object
			<i>6739i only</i>

3.9.4 Examples

XML Example 1

```
<AAstraIPPhoneStatus Beep="yes">
  <Session>abc12345</Session>
  <Message index="0">Message 1 displayed</Message>
  <Message index="1" type="alert" Timeout="5">Alert
  displayed</Message>
</AAstraIPPhoneStatus>
```

Resulting Screen (non softkey phone)



Figure 92: PhoneStatus Example (non softkey phone)

Resulting Screen (softkey phone)

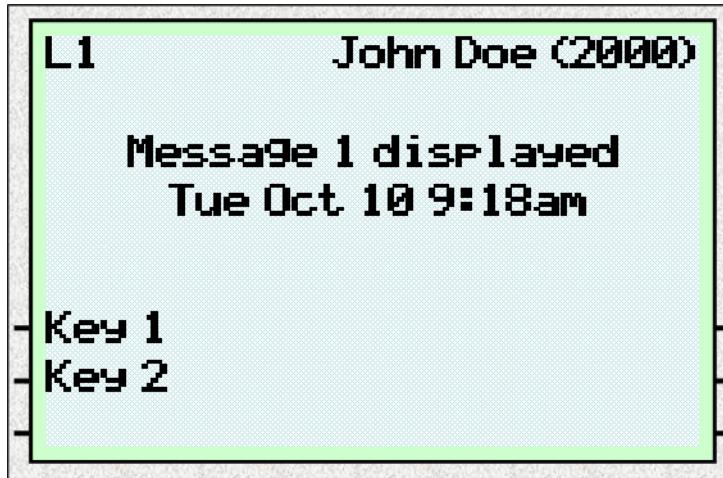


Figure 93: PhoneStatus Example (softkey phone)

XML Example 2

```
<AAstraIPPhoneStatus Beep="yes">
  <Session>abc12345</Session>
  <Message index="0">Message 1 is a very long message</Message>
  <Message index="1">Message 2 is shorter</Message>
  <Message index="2" type="alert" Timeout="5">Alert
  Message</Message>
</AAstraIPPhoneStatus>
```

Resulting Screens (6739i)

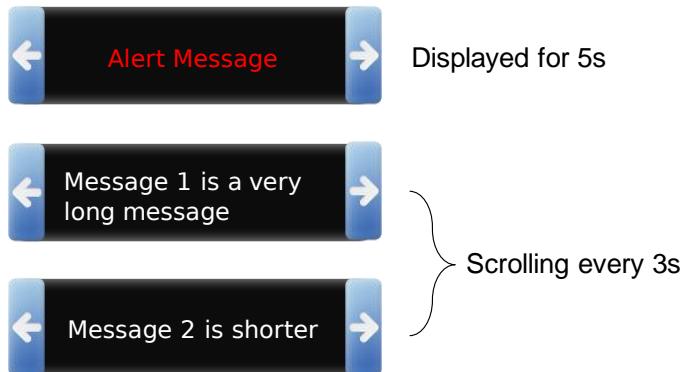


Figure 94: PhoneStatus Example (6739i)

Note: The `PhoneStatusMsg` object can also be used to remove status messages from the display using the same `SessionID` and the same `index`. This can be accomplished by setting an empty tag for the `Message` tag. For example, here is the XML object to remove the previous messages (as the second message was in alert mode it does not remain on the display so no need to remove it).

```
<AastraIPPhoneStatus>
  <Session>abc12345</Session>
  <Message index="0"/>
  <Message index="1"/>
<AastraIPPhoneStatus/>
```

Note (6739i): The `PhoneStatusMsg` object can also be used to remove icons from the display using the same `SessionID`, the same `index` but setting the icon to "Icon:None".

This XML example displays the "information" icon on the top line.

```
<AastraIPPhoneStatus>
  <Session>abc12345</Session>
  <Message index="1" type="icon" icon="1"></Message>
  <IconList>
    <Icon index="1">Icon:Information</Icon>
  </IconList>
</AastraIPPhoneStatus>
```

To remove this icon, the following content must be sent

```
<AastraIPPhoneStatus>
  <Session>abc12345</Session>
  <Message index="1" type="icon" icon="1"></Message>
  <IconList>
    <Icon index="1">Icon:None</Icon>
  </IconList>
</AastraIPPhoneStatus>
```

3.10 PhoneExecute Object (all models)

The PhoneExecute object allows an external application to ask the phone to execute a sequence of local actions using a URI.

3.10.1 Implementation

The actions can be:

- Any supported uri
 - [http\(s\)://myserver.com/myscript.pl](http://myserver.com/myscript.pl), you can now use variables in the URI, variables are parsed by the phone.
 - Dial:XXXXX
 - DialLine:X:YYYYYY (X is the SIP line number, YYYYYY is the number or URI to dial) see chapter 4.7 for more details on this feature.
 - Led: XXXXXX=on/off/slowflash/fastflash see chapter 4.3 for more details on the LED control.
 - Key: XXXXX see chapter 4.5 for more details on the simulated keypress feature.
 - RTPRx:i:p:v:[mix]:[disablelcon] or RTPRx:Stop to control the reception of a Unicast RTP stream, see chapter 4.4 for more details.
 - RTPTx:i:p or RTPTx:Stop to control the transmission of a Unicast RTP stream, see chapter 4.4 for more details.
 - RTPMRx:i:p:v:[mix]:[disablelcon] to control the reception of a Multicast RTP stream, see chapter 4.4 for more details.
 - RTPMTx:i:p:[mix]:[disablelcon] to control the transmission of a Multicast RTP stream, see chapter 4.4 for more details.
 - Stream a wav file, see chapter 4.6 for more details.
 - Download and play a wav file, see chapter 4.7 for more details.
- Phone Reboot (URI="Command: Reset"), the phone will restart (if the phone is idle) and process the complete boot sequence (configuration, language packs, firmware...)
- Phone Fast Reboot (URI="Command: FastReboot"), the phone will restart (if the phone is idle) but will reduce the boot sequence as it will not check for new firmware and will only download language packs if there is a change in supported languages
- Phone Lock (URI="Command: Lock"), this command will lock the phone and will allow only emergency calls.
- Phone Unlock (URI="Command: Unlock"), this command will unlock the phone.
- Clear local configuration and reboot (URI="Command: ClearLocal")
- Clear the callers list and missed calls indicator (URI="Command: ClearCallersList")
- Clear the local directory (URI="Command:ClearDirectory")
- Clear the redial list (URI="Command:ClearRedialList")
- Retrieve crash and configuration file (URI="Command:UploadSystemInfo") , see chapter 4.9 for more details.
- Do nothing (URI="")

More actions will be implemented in future firmware versions.

In order to prevent a pushed dial uri from putting an active call on hold the PhoneExecute object supports an optional tag "interruptCall". By default, the attribute will allow the current call to be interrupted. To prevent this, set the attribute to "no".

3.10.2 XML Description

```
<AastraIPPhoneExecute
  Beep = "yes/no"
  triggerDestroyOnExit="yes/no"
>
  <ExecuteItem URI="URI" interruptCall="yes/no"/>
  <!--Additional ExecuteItems may be added -->
</AastraIPPhoneExecute>
```

XML Document Objects

Document Object	Position	Type	Comments
AastraIPPhoneExecute	Root tag	Mandatory	Root object
Beep	Root tag	Optional	"yes" or "no" to indicate if a notification beep must be generated by the phone.
triggerDestroyOnExit	Root tag	Optional	If the XML object is sent as an answer to a UI object, setting this parameter to "yes" will trigger the exit of the calling object as if it was a UI object. See section 4.10.4 for more details.
ExecuteItem	Body	Optional	Tag for the action to be executed
URI	ExecuteItem tag	Optional	URI describing the action to be executed.
interruptCall	ExecuteItem tag	Optional	When the URI is a dial command, if this tag is set to 'no' an existing call will not be put on hold.

3.10.3 Examples

```
<AastraIPPhoneExecute>
  <ExecuteItem URI=http://myserver.com/myscript.php/>
  <ExecuteItem URI="Dial:12345" interruptCall="no"/>
  <ExecuteItem URI="Command: ClearCallersList"/>
  <ExecuteItem URI="Command: ClearDirectory"/>
  <ExecuteItem URI="Command: ClearRedialList"/>
  <ExecuteItem URI="Command: Reset"/>
</AastraIPPhoneExecute>
```

This example will make the phone execute 6 actions:

- Do an HTTP GET to myserver.com/myscript.php
- Dial 12345 without putting any current call on hold
- Clear the Callers List
- Clear the local directory

- Clear the Redial List
 - Reset the phone
-

Notes:



- the “do nothing” can be used when an application needs to display nothing as an answer to a HTTP GET.
 - you must be careful when you use the “Dial:” URI as the state of phone is unknown at the time of the XML GET.
 - the FastReboot command will speed up the boot process of the phone which may be useful in the self-configuration application.
-

3.11 PhoneConfiguration Object (all models)

The PhoneConfiguration object allows an external application to modify the phone configuration dynamically. The configuration parameters are the ones that are used in the configuration files (aastra.cfg and <MAC>.cfg) and detailed in the administrator guide.

3.11.1 Implementation

The phone parameters have 2 levels of precedence: 'server' where the parameters are coming from the configuration files and 'local' where the parameters are locally set via the TUI or WebUI. The 'local' parameters override the 'server' parameters.

The AastralIPPhoneConfiguration object supports a parameter called 'setType' which allows defining at which level the parameter change will apply.

- `remote` - parameter will be saved with the same precedence as the server settings. This set will not persist through a reboot.
- `local` - parameter will be saved with the same precedence as TUI or WebUI settings. This set will persist through reboots of the phone. The only way to unset this type is via the TUI, WebUI, or another local type set.
- `oneBoot` - parameter will be saved with a precedence above server settings and below local settings. This parameter will persist through a single reboot and be lost after that. Using this value for setType anywhere in the object will cause the phone to reboot when the AastralIPPhoneConfiguration object is done parsing
- `override` - parameter will be saved with the same precedence as server settings. This is different from `remote` because it will also override a conflicting local value. This override will persist through a reboot but the new value will be lost.



Note: Default value is 'remote' as it was the object behavior prior to firmware release 2.4.0.

If `setType` is set in the AastralIPPhoneConfiguration root tag, it affects all of the ConfigurationItem sub-elements but when set in the ConfigurationItem tag it will affect that set only (override the global setting for the object).

The number of parameters to be sent in a single Phoneconfiguration object is only limited by the overall size of the XML object (10000 bytes). Practically 30 parameters can be sent in a single object.



Note: Not all the configuration parameters are dynamic; specifically the network parameters are static and need a reboot.

The list of the dynamic configuration parameters is detailed in section 14.

Default Softkeys

Not Applicable, this object is a non UI XML object and has no predefined softkey.

3.11.2 XML Description

```
<AastralIPPhoneConfiguration  
    Beep = "yes/no"  
    triggerDestroyOnExit = "yes/no"  
    setType = "remote/local/oneBoot/override"  
>
```

```

<ConfigurationItem setType = "remote/local/oneBoot/override">
  <Parameter
    firstItem="first instance"
    lastItem="last instance"
    >parameter#</Parameter>
  Or
  <Parameter>parameter</Parameter>
  <Value>value</Value>
</ConfigurationItem>
<!--Additional ConfigurationItems may be added -->
</AastraIPPhoneConfiguration>
  
```

XML Document Objects

Document Object	Position	Type	Comments
AastraIPPhoneConfiguration	Root tag	Mandatory	Root object
Beep	Root tag	Optional	"yes" or "no" to indicate if a notification beep must be generated by the phone.
triggerDestroyOnExit	Root tag	Optional	In case the XML object is sent as an answer to a UI object, setting this parameter to "yes" will trigger the exit of the calling object as if it was a UI object. See section 4.10.4 for more details.
setType	Root tag	Optional	Tag to define the type of configuration change. It applies to all sub-items.
ConfigurationItem	Body	Optional	Tag for the configuration change
setType	ConfigurationItem tag		Tag to define the type of configuration change. It applies only to this item and overrides global policy.
Parameter	ConfigurationItem tag	Mandatory	Configuration parameter to be changed
firstItem	Parameter tag	Optional	These parameters define the range of the parameter values. The parameter must include the character '#' in the name.
lastItem	Parameter tag	Optional	
value	ConfigurationItem tag	Mandatory	New value of the configuration parameter.

3.11.3 Examples

XML Example 1: 'remote'

```
<AastraIPPhoneConfiguration>
  <ConfigurationItem>
    <Parameter>softkey1 label</Parameter>
    <Value>Test</Value>
  </ConfigurationItem>
</AastraIPPhoneConfiguration>
```

or

```
<AastraIPPhoneConfiguration setType="remote">
  <ConfigurationItem>
    <Parameter>softkey1 label</Parameter>
    <Value>Test</Value>
  </ConfigurationItem>
</AastraIPPhoneConfiguration>
```

If softkey1 label parameter is unset, set via the configuration files, or set via another setType="remote" it will be assigned the value "Test". This value will be lost when the phone reboots. If "softkey1 label" has been set locally, this object will not change it.

XML Example 2: 'local'

```
<AastraIPPhoneConfiguration setType="local">
  <ConfigurationItem>
    <Parameter>softkey1 label</Parameter>
    <Value>Test</Value>
  </ConfigurationItem>
</AastraIPPhoneConfiguration>
```

The softkey1 label parameter will be given the value "Test" whichever way this parameter was set beforeand this value will persist through reboots.

XML Example 3: 'override'

```
<AastraIPPhoneConfiguration setType="override">
  <ConfigurationItem>
    <Parameter>softkey1 label</Parameter>
    <Value>Test</Value>
  </ConfigurationItem>
</AastraIPPhoneConfiguration>
```

The softkey1 label parameter will be set to the value "Test". When the phone reboots, softkey1 label will revert to the server configured value or its default of now server configured value is present.

XML Example 4: 'oneBoot'

```
<AastraIPPhoneConfiguration setType="oneBoot">
  <ConfigurationItem>
    <Parameter>tftp server</Parameter>
    <Value>10.50.103.12</Value>
  </ConfigurationItem>
</AastraIPPhoneConfiguration>
```

If the tftp server parameter is unset, set via the configuration files, or another setType="remote" it will be assigned the value "10.50.103.12". When this object is done parsing

the phone will reboot. Upon booting tftp server will still have the value "10.50.103.12". This value will be lost after configuration files have been downloaded from the server.

XML Example 5: Mixed types

```
<AastraIPPhoneConfiguration setType="local">
  <ConfigurationItem setType="oneBoot">
    <Parameter>softkey1 label</Parameter>
    <Value>Test</Value>
  </ConfigurationItem>
  <ConfigurationItem>
    <Parameter>softkey2 label</Parameter>
    <Value>Test</Value>
  </ConfigurationItem>
  <ConfigurationItem setType="override">
    <Parameter>softkey3 label</Parameter>
    <Value>Test</Value>
  </ConfigurationItem>
</AastraIPPhoneConfiguration>
```

- Parameter softkey1 label will be set using the oneBoot rules (the phone will not reboot yet).
- Parameter softkey2 label will be set using the local rules.
- Parameter softkey3 label will be set using the override rules.

When all three items are done being set, the phone reboots as at least one configuration parameter was using the oneBoot policy.

XML Example 6: Parameter range

```
<AastraIPPhoneConfiguration>
  <ConfigurationItem>
    <Parameter firstItem="1" lastItem="20">
      softkey# type</Parameter>
      <Value></Value>
    </ConfigurationItem>
</AastraIPPhoneConfiguration>
```

This example sets the parameters "softkey1 type" to "softkey20 type" to a blank value. This feature is very useful to limit the number of configuration parameters to be sent.

4 XML extensions

4.1 Customizable Softkeys (softkey phones)

The Softkey object can be used to override the default softkeys in each of the XML objects. It allows developers to link arbitrary URIs to keys in the XML screens and invoke softkey behavior native to each XML screen type.

XML Description (9480i/9480iCT/55i/57i/57iCT/6735i/6737i/6867i)

6 softkeys are available

```
<SoftKey index = "1-6" icon = "iconindex">
  <Label>Text</Label>
  <URI>
    http(s)://someserver/somepage
    OR SoftKey:XXXXXX
    OR Dial:somenumber
  </URI>
</SoftKey>
<IconList>
  <Icon index = "iconindex">Icon:Iconname or Hex Icon</Icon>
  <Icon index = "iconindex">Icon:Iconname or Hex Icon</Icon>
  <!--As many as used in the softkey definition -->
</IconList>
```

Notes:

- Icons are not supported on the 6867i
- Custom softkeys are only available for the UI XML objects.
- If you use custom softkeys, the default softkeys of the XML object are not displayed anymore. This means they have to be recreated as custom softkeys.

XML Description (6739i)

10 softkeys are available

```
<SoftKey index = "1-10">
  <Label Color="white/black/red/green/brown/blue/magenta
         cyan/lightgray/darkgray/lightred/lightgreen
         yellow/lightblue/lightmagenta/lightcyan">
    <Text></Text>
    <URI>
      http(s)://someserver/somepage
      OR SoftKey:Exit
      OR SoftKey:Submit
      OR Dial:somenumber
    </URI>
</SoftKey>
<IconList>
  <Icon index = "iconindex">Icon:Iconname or Hex Icon</Icon>
  <Icon index = "iconindex">Icon:Iconname or Hex Icon</Icon>
  <!--As many as used in the softkey definition -->
</IconList>
```

Notes:


- Custom softkeys are only available for the UI XML objects.
 - Only “SoftKey:Exit” and “SoftKey:Submit” are supported as a special softkey
-

XML Document Objects

Document Object	Position	Type	Comments
SoftKey	Body	Mandatory	Softkey Root object (up to 6 or 10 for 6739i)
Index	SoftKey Root tag	Mandatory	Indicates the softkey number
Icon	SoftKey Root tag	Optional	Index of the icon to be used from the icon list
Label	SoftKey Body	Mandatory	Label of the softkey
URI	SoftKey Body	Mandatory	URI called if the softkey is pressed
IconList	Body	Optional	Icon root object
Icon	Iconlist Body	Optional	Icon definition see chapter 4.2.2 for more details.
index	Icon tag	Optional	Icon index (from 1 to 21)



Note: The phone supports up to 21 different icons in the same XML object, going over this limit will generate a parsing error on the phone.

Available object commands (9480i/9480iCT/55i/57i/57iCT/6735i/6737i/6867i)

The following softkey functionality is available to the developer for the purpose of reordering or preserving the default functionality of the XML screens.

- “SoftKey:Select” is available for AastralIPPhoneTextMenu only and calls the `URI` tag of the selected `MenuItem`.
- “SoftKey:Exit” is available for all UI XML objects and redisplays the previous XML object present in the phone browser.
- “SoftKey:Dial” is available to screens that allow input. The dial string for the “Dial” function is taken from the menu items `URI` on the Menu Screen, and from the editor field `input` on the Input Screen.
- “SoftKey:Dial2” is available only for the AastralIPPhoneTextMenu object and will dial the number set by the “Dial” tag.
- “SoftKey:Submit” is available only for the AastralIPPhoneInputScreen object, it completes the user input by submitting the programmed `URI` (`URL` tag) and value (`Parameter` tag).

- “SoftKey:BackSpace” is available only for the AastralPPhoneInputScreen object, it deletes the character placed before the cursor.
- “SoftKey:NextSpace” is available only for the AastralPPhoneInputScreen object, it inserts a “space” character at the cursor position.
- “SoftKey:Dot” is available only for the AastralPPhoneInputScreen object, it inserts a “.” character at the cursor position.
- “SoftKey:ChangeMode” is available only for the AastralPPhoneInputScreen object, it allows a toggle between lower case, upper case and digit inputs.
- “SoftKey:Answer” is available for all UI XML objects and allows the user to answer an incoming call. This softkey will only be displayed if it is created while the phone is in an incoming state and disappears when the call is answered or ignored.
- “SoftKey:Ignore” is available for all UI XML objects and allows the user to ignore an incoming call. This softkey will only be displayed if it is created while the phone is in an incoming state and disappears when the call is answered or ignored.
- “Softkey: Drop” is available for all UI XML objects and allows the user to drop the current call. This softkey will only be displayed if it is created while the phone is in connected state and disappears when the call is dropped.



Note: Dropping the call using the drop softkey will maintain the current XML display.

- “Softkey:Conf” is available for all UI XML objects and allows the user to start a 3-way conference. This softkey will only be displayed if it is created while the phone is in connected state and disappears when the call is dropped or the conference started.



Note: Using this softkey will destroy the current XML display.

- “Softkey:Xfer” is available for all UI XML objects and allows the user to transfer the current call. This softkey will only be displayed if it is created while the phone is in connected state and disappears when the call is transferred or dropped.



Note: Using this softkey will destroy the current XML display.

- “SoftKey:SymbolList=”XYZ”” is available only for the AastralPPhoneInputScreen object, it allows an input of a custom list of characters at the cursor position.

The format is:

```
<SoftKey index="1">
    <Label>Symbols</Label>
    <URI>SoftKey:SymbolList="@."</URI>
</SoftKey>
```

The content of the Symbol List must be encapsulated with quotes.



Note: SymbolList supports only standard ASCII characters.

Note that there can be multiple SymbolList softkeys with different list of symbols. There are some special characters that need to be encoded due to XML limitations (see chapter 2.6 for the encoded value).

Available object commands (6739i)

- “SoftKey:Exit” is available for all UI XML objects and redisplay the previous XML object present in the phone browser.
- “SoftKey:Submit” is available for AastralPPhoneInputScreen.

Softkey availability per object

SoftKey	TextScreen	TextMenu	InputScreen
Select		X	
Exit	X	X	X
Dial		X	X
Dial2		X	
Submit			X
BackSpace			X
NextSpace			X
Dot			X
ChangeMode			X
Answer ¹	X	X	X
Ignore ¹	X	X	X
Drop ²	X	X	X
Xfer ²	X	X	X
Conf ²	X	X	X
SymbolList			X

SoftKey	Formatted TextScreen	ImageScreen	ImageMenu
Select			
Exit	X	X	X
Dial			
Dial2			
Submit			
BackSpace			
NextSpace			
Dot			
ChangeMode			
Answer ¹	X	X	X
Ignore ¹	X	X	X
Drop ²	X	X	X
Xfer ²	X	X	X

¹ This softkey will only be displayed if it is created while the phone is in an incoming state.

² This softkey will only be displayed if it is created while the phone is in a connected state.

SoftKey	Formatted TextScreen	ImageScreen	ImageMenu
Conf ²	X	X	X
SoftKey List			

You can define up to six or ten softkeys depending on the phone model before the closing tag of any object. The following example illustrates the use of the softkey XML element used with the Text Menu object, and the resulting screen output.


XML Example 1

```

<AastraIPPhoneTextMenu>
  <Title> My Directory </Title>
  <MenuItem>
    <Prompt>John Doe 1</Prompt>
    <URI>10.50.10.49</URI>
  </MenuItem>
  <MenuItem>
    <Prompt>John Doe 2</Prompt>
    <URI>Dial:200</URI>
  </MenuItem>
  <MenuItem>
    <Prompt>John Doe 3</Prompt>
    <URI>Dial:201</URI>
    <Dial>201</Dial>
  </MenuItem>
  <SoftKey index = "3">
    <Label>Previous</Label>
    <URI>http://someserver/somepage.xml</URI>
  </SoftKey>
  <SoftKey index = "8">
    <Label>Next</Label>
    <URI>http://someserver/somepage.xml</URI>
  </SoftKey>
  <SoftKey index = "10">
    <Label>Exit</Label>
    <URI>SoftKey:Exit</URI>
  </SoftKey>
</AastraIPPhoneTextMenu>

```

Resulting Screen (9480i/9480iCT/55i/57i/57iCT/6735i/6737i)

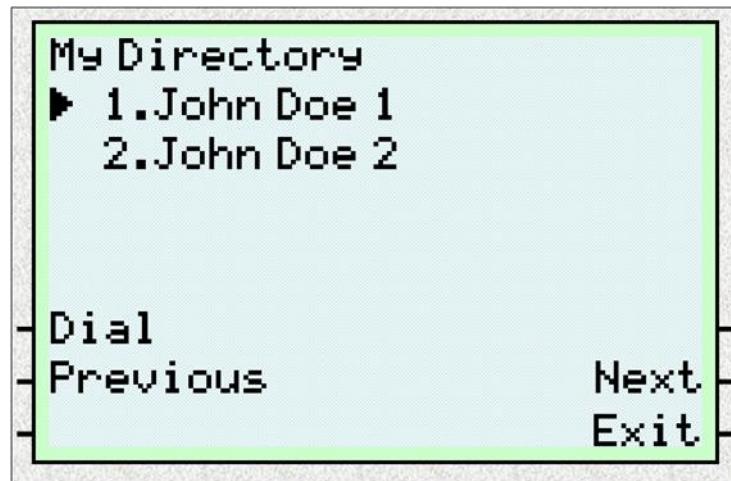

Resulting Screen (6739i)



XML Example 2 (9480i/9480iCT/55i/57i/57iCT/6735i/6737i)

```
<AAstraIPPhoneInputScreen type="string">
    <Title>Title</Title>
    <Prompt>Enter email address</Prompt>
    <URL>http://myserver.com/script.php</URL>
    <Parameter>email</Parameter>
    <Default></Default>
    <SoftKey index="1">
        <Label>Backspace</Label>
```

```
<URI>SoftKey:BackSpace</URI>
</SoftKey>
<SoftKey index="2">
    <Label>Symbols</Label>
    <URI>SoftKey:SymbolList="@."</URI>
</SoftKey>
<SoftKey index="5">
    <Label>Done</Label>
    <URI>SoftKey:Submit</URI>
</SoftKey>
<SoftKey index="6">
    <Label>Exit</Label>
    <URI>SoftKey:Exit</URI>
</SoftKey>
</AastraIPPhoneInputScreen>
```

Resulting Screen



4.2 Graphics (55i/57i/57iCT/6735i/6737i/6867i/6739i)

4.2.1 Images

4.2.1.1 Implementation on the 55i/57i/57iCT/6735i/6737i

The `image` tag is used by the `ImageScreen` and `ImageMenu` XML objects.

Format

Two hex characters map to one byte of pixel data, where each bit represents a pixel. The image data describes the bitmap from left to right and top to bottom. The data is padded on an 8-bit boundary, so if the height and width do not match the pixel information, then the image will not display correctly.

The entire LCD on the 5 series IP phones can be used to display images.

Notes:

-
- with firmware 3.3.1, the size of the images to be displayed is limited to 144x40 pixels.
 - Aastra provides a Microsoft Windows tool called “bitmapconverter” able to convert

any black and white Windows bitmap to the hexadecimal string to be used with Aastra graphical XML objects. The syntax under Windows command line interface is "bitmapconverter XXXXX.bmp", the output is the result.

Screen resolution

The 55i/6735i screen has a resolution of 144 by 75 pixels.



Figure 95: Aastra 6755i screen.

Similarly, the 57i/57iCT/6737i has a resolution of 144 by 128 pixels. The center of this display is at (72, 64).

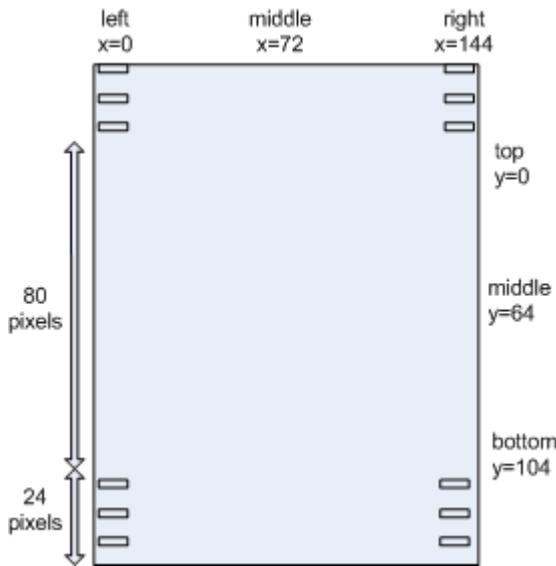


Figure 96: Aastra 6757i/6757i CT screen

4.2.1.2 Implementation on the 6867i

The `image` tag is used by the `ImageScreen` and `ImageMenu` XML objects.

Format

The 6867i supports 24/32 bits depth png or jpeg files, the `image` tag must include the URL to retrieve the png or jpeg file. The supported protocols are:

- TFTP
- FTP

- HTTP
- HTTPS

The area available to display the picture is 320x240 pixels, the phone uses the provided width and height tags as the display zone, if the image sent is bigger than the display zone, the picture is clipped using the top left corner as the origin of the clipping area.

Same thing if the width or height is larger than the supported resolution, the phone will use the minimum value and will clip if needed.

If the phone cannot retrieve the picture using the provided URL, the “unknown” image is displayed.

4.2.1.3 Implementation on the 6739i

The `image` tag is used by the `ImageScreen` and `ImageMenu` XML objects.

Format

The 6739i supports 24 bits depth png or jpeg files, the `image` tag must include the URL to retrieve the png or jpegfile. The supported protocols are:

- TFTP
- FTP
- HTTP
- HTTPS

The area available to display the picture is 380x340 pixels, the phone uses the provided width and height tags as the display zone, if the image sent is bigger than the display zone, the picture is clipped using the top left corner as the origin of the clipping area.

Same thing if the width or height is larger than the supported resolution, the phone will use the minimum value and will clip if needed.

If the phone cannot retrieve the picture using the provided URL, the “unknown” image is displayed.

4.2.2 Icons

4.2.2.1 Implementation on the 55i/57i/57iCT/6735i/6737i

On top of images, the 6755i, 6757i, 6757i CT, 6735i and 6737i support icons in some XML objects:

- `TextMenu`
- `Custom softkeys`

Format

The icons use the same encoding format than the images: two hex characters map to one byte of pixel data, where each bit represents a pixel, the icon data describes the icon from left to right.

Icons are 8 pixels high and a multiple of 6 pixels wide.

As the font used by the phone is 7 pixels high, in order to align the icons with the labels, it is recommended to use icons with the first row of pixel (from the bottom) empty. Also it is recommended to leave the last column empty to leave a space between the icon and the label.

In the following example which is a single cell icon, it is recommended to use 5x7 icons.

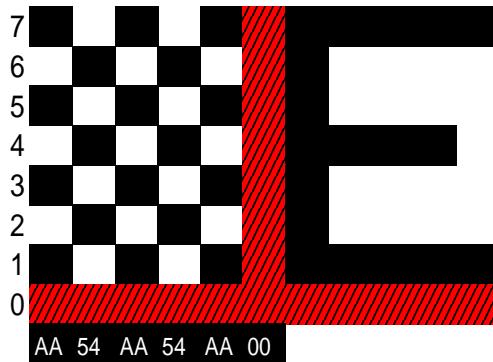


Figure 97: One cell icon

For a two cell icon, the recommended size is 11x7.

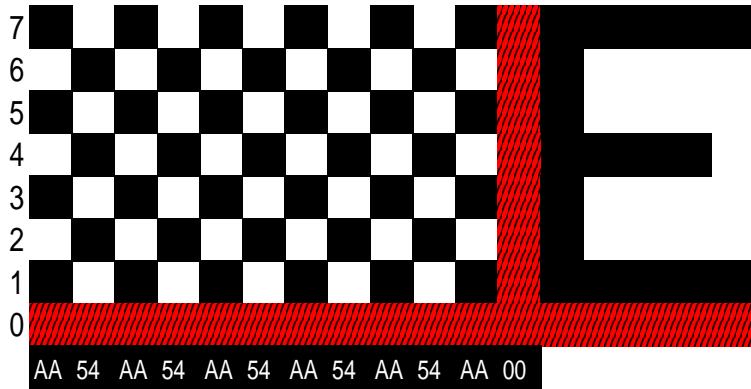


Figure 98: Two cell icon















3 cells: 17x7...

Predefined icons

Some predefined icons are available in the phone. To use the predefined icons you must set the `Icon` tag to `Icon:IconName` where `IconName` is the name of the predefined icon.

Here is the list of the available icons.

Name	Icon	Name	Icon
PhoneOnHook		ArrowDown	
PhoneOffHook		ArrowsUpAndDown	

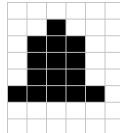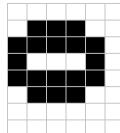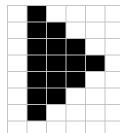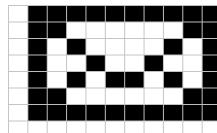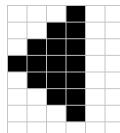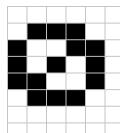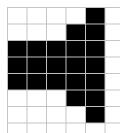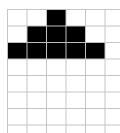Name	Icon	Name	Icon
PhoneRinging		FilledCircle	
DND		EmptyCircle	
ArrowRight		Envelope	
ArrowLeft		Square	
Prohibit		Ellipse	
Speaker		TailArrowUp	
ArrowUp		TailArrowDown	

Icons declaration

Icons are identified by an index in the XML objects; this index refers to the `IconList` tag which must be present each an icon is used.

```





<IconList>
  <Icon index = "iconindex">Icon:Iconname or Hex Icon</Icon>
  <Icon index = "iconindex">Icon:Iconname or Hex Icon</Icon>
  <!--As many as used in the object definition -->
</IconList>
  
```



Note: in the `TextMenu` object which can have icons in the `MenuItem`s and in the custom

Softkeys, all the icons must be defined in a single `IconList` tag.

Other useful icons

Icon	Hex Value	Icon	Hex Value
	000000007E565AFE00000000		000000FEAEFAAEFE00000000
	000000664E5A4E6600000000		000000103E7A3E1000000000

4.2.2.2 Implementation on the 6867i

The 6867i also support icons in some XML objects:

- AastralIPPhoneTextMenu

But not in the Custom softkeys for the UI XML objects.

Only predefined icons residing in the 6867i identified by a unique name are available.

Predefined icons

Some predefined icons are available in the phone. To use the predefined icons you must set the `Icon` tag to `Icon:IconName` where `IconName` is the name of the predefined icon.

Here is the list of the available icons.

Name	Icon	Name	Icon
Icon:Add	+	Icon:Lock	🔒
Icon:ArrowDown	↓	Icon:MissedCall	❗
Icon:ArrowLeft	⬅	Icon:Mute	🔇
Icon:ArrowRight	➡	Icon:Office	🏢
Icon:ArrowUp	↑	Icon:Outgoing	📞
Icon:ArrowUpAndDown	↕	Icon:OutgoingMissed	📞❗

Name	Icon	Name	Icon
Icon:BLF_Busy		Icon:PhoneDial	
Icon:BLF_Hold		Icon:PhoneOffHook	
Icon:BLF_Ringing		Icon:PhoneOnHold	
Icon:BLF_Unknown		Icon:PhoneOnHook	
Icon:Book		Icon:PhoneRinging	
Icon:Calendar		Icon:PresenceAbsent	
Icon:CallFailed		Icon:PresenceAvailable	
Icon:CallFwd		Icon:PresenceBusy	
Icon:CellPhone		Icon:PresenceMeeting	
Icon:CheckBoxCheck		Icon:PresenceNotAvailable	
Icon:CheckBoxUnCheck		Icon:PresenceSignedOut	
Icon:CircleBlue		Icon:PresenceUnknown	
Icon:CircleGreen		Icon:Prohibit	
Icon:CircleRed		Icon:RingTone	
Icon:CircleYellow		Icon:Save	
Icon:Delete		Icon:Search	
Icon:DND		Icon:Settings	

Name	Icon	Name	Icon
Icon>Edit		Icon:Speaker	
Icon:Envelope		Icon:StarBlue	
Icon:EnvelopeOpen		Icon:StarYellow	
Icon:Home		Icon:TailArrowDown	
Icon:Incoming		Icon:TailArrowUp	
Icon:IncomingMissed		Icon:UnLock	
Icon:Information		Icon:Warning	
Icon:Key		Icon:World	

Icons declaration

Icons are identified by an index in the XML objects; this index refers to the `IconList` tag which must be present each an icon is used.

```
<IconList>
  <Icon index = "iconindex">Icon:Iconname</Icon>
  <Icon index = "iconindex">Icon:Iconname</Icon>
  <!--As many as used in the object definition -->
</IconList>
```

4.2.2.3 Implementation on the 6739i

The 6739i also support icons in some XML objects:

- AastralIPPhoneTextMenu
- AastralIPPhoneStatus

And also Custom softkeys for the UI XML objects.

Two types of icons are supported:

- Predefined icons residing in the 6739i identified by a unique name
- Dynamic icons identified by a URI, the icon files are downloaded by the 6739i

Predefined icons

Some predefined icons are available in the phone. To use the predefined icons you must set the Icon tag to Icon:IconName where IconName is the name of the predefined icon.

Here is the list of the available icons.

Name	Icon	Name	Icon
Icon:PhoneOnHook		Icon:Mute	
Icon:PhoneOffHook		Icon:Settings	
Icon:PhoneRinging		Icon:Key	
Icon:DND		Icon:PhoneDial	
Icon:ArrowRight		Icon:PhoneOnHold	
Icon:ArrowLeft		Icon:CallFailed	
Icon:Prohibit		Icon:Calendar	
Icon:Speaker		Icon:Search	
Icon:ArrowUp		Icon:BLF_Busy	
Icon:ArrowDown		Icon:BLF_Hold	
Icon:ArrowUpAndDown		Icon:BLF_Ringing	
Icon:Envelope		Icon:BLF_Unknown	
Icon:CheckBoxUnCheck		Icon:CellPhone	
Icon:TailArrowUp		Icon:Add	
Icon:TailArrowDown		Icon:Delete	

Name	Icon	Name	Icon
Icon:CheckBoxCheck		Icon>Edit	
Icon:Lock		Icon:Information	
Icon:UnLock		Icon:CircleBlue	
Icon:EnvelopeOpen		Icon:CircleRed	
Icon:Home		Icon:CircleGreen	
Icon:Book		Icon:CircleYellow	
Icon:Warning		Icon:World	
Icon:Office		Icon:StarBlue	
Icon:Save		Icon:StarYellow	
Icon:PresenceAvailable		Icon:PresenceMeeting	
Icon:PresenceAbsent		Icon:PresenceNotAvailable	
Icon:PresenceBusy		Icon:CallFwd	
Icon:MissedCall			

Dynamic icons

Dynamic icons are identified by an URI which is the location of the graphical file on a server.

Icon files must be:

- png files
- resolution 32x32 pixels
- 24 bits depth

Supported protocols are:

- TFTP
- FTP

- HTTP
- HTTPS



Note: dynamic icons are not yet supported in the AastralPPhoneStatus phone object.

Example

```
<IconList>
  <Icon index="1">http://myserver/icons/icon.png</Icon>
</IconList>
```

Icons declaration

Icons are identified by an index in the XML objects; this index refers to the `IconList` tag which must be present each an icon is used.

```
<IconList>
  <Icon index = "iconindex">Icon:Iconname or URI</Icon>
  <Icon index = "iconindex">Icon:Iconname or URI</Icon>
  <!--As many as used in the object definition -->
</IconList>
```



Note: in the `TextMenu` object which can have icons for the `MenuItem`s and for the custom Softkeys, all the icons must be defined in a single `IconList` tag.

4.3 LED control

You can control the status of the LED associated to a phone key **as long as the key is configured as an XML key**. This can be done using the universal URI

“Led: XXXXX=on/off/fastflash/slowflash”

Even if the 6739i does not have LED attached to the softkeys on its main display, an equivalent feature has been developed to mimic the LED behavior still available on the expansion modules.

Where XXXXX represents the key you want to modify the LED or “all” for all the keys.



Note: the LED state is lost after a phone reboot.

The supported LED states are:

- on, the LED is steady on
- off, the LED is steady off
- slowflash, the LED blinks at a slow pace
- fastflash, the LED blinks at a fast pace

Keys supported on a 6730i/6731i

- prgkey1 to prgkey8

Keys supported on a 9143i

- prgkey1 to prgkey7

Keys supported on a 9480i/9480iCT

- None

Keys supported on a 53i

- prgkey1 to prgkey6

Keys supported on a 55i/6735i

- prgkey1 to prgkey6
- softkey1 to softkey20

Keys supported on a 57i/57i CT/6737i

- topsoftkey1 to topsoftkey10
- softkey1 to softkey20

Keys supported on a 6865i

- prgkey1 to prgkey8

Keys supported on a 6867i

- topsoftkey1 to topsoftkey20

Keys supported on a 6739i

- softkey1 to softkey55

Keys supported on an expansion module (53i/55i/57i/57iCT/6735i/6737i)

- 536M: expmodX key1 to expmodX key36
- 560M: expmodX key1 to expmodX key60
- M680i expmodX key1 to expmodX key16
- Where X is the expansion module number (1 to 3)

Implementation on the 6867i

Though the 6867i has physical LEDs for the topsoftkeys, the LED status is also indicated on the screen.



 **Note:** the bottom softkeys do not support ELD control.

Implementation on the 6739i

As the 6739i has no physical LEDs, the LEDs are replaced by colored/blinking softkeys.



XML Example

```
<AastraIPPhoneExecute>
  <ExecuteItem URI="Led: softkey1=on"/>
  <ExecuteItem URI="Led: softkey1=off"/>
  <ExecuteItem URI="Led: prgkey2=fastflash"/>
  <ExecuteItem URI="Led: expmod2 key20=slowflash"/>
  <ExecuteItem URI="Led: all=off"/>
</AastraIPPhoneExecute>
```

4.4 RTP streaming

The Aastra SIP Phones have XML commands to use with the `AastraIPPhoneExecute` object, these commands allow the phone to send/receive an RTP stream to/from any given multicast/unicast addresses (without involving any SIP signaling).

The XML commands to use with the `AastraIPPhoneExecute` object in an XML application are:

- **RTPRx** (Receive (Rx) a Unicast RTP stream or stop receiving a Unicast/Multicast RTP streams)
- **RPTTx** (Transmit (Tx) a Unicast RTP stream or stop transmitting a Unicast/Multicast RTP streams)
- **RTPMRx** (Receive (Rx) a Multicast RTP stream)
- **RTPMTx** (Transmit (Tx) a Multicast RTP stream)

 **Note:** Though the RTP commands could be considered as URIs they can not be used directly as a URI, they must be launch using a `AastraIPPhoneExecute` command..

The phones support **only** the following RTP stream format:

- G.711 µ-law Codec
- 20 ms packet size

 **Note:** If one of the previous commands is sent to phone which is already in a communication, current call is placed on hold and the RTP streaming commands are performed using a new audio path.

Each RTP streaming command supports 2 modes:

- With audio path mixing
- Without audio path mixing

When the RTP streaming command is sent to the phone with an existing audio path (the phone is in the “connected” state), depending on the mixing parameter, the phone will behave differently.

- With the audio mixing set to on, the command will apply on the existing audio path, for instance, sending a RTPTx will “add” the RTP streaming to the audio path. The typical use is for “agent whisper” in a contact center environment, “page whisper”, call recording...
- With the audio mixing set to off, the command will create a new audio path putting the initial call on hold, for instance sending a RTPTx will create a new audio path. The typical use is for paging.

Notes: Mixing is not supported:



- when both the cordless handset (57iCT/9480iCT) and the base are connected. 57i/9480iCT.
- when the phone is already in a 3-way conference.

4.4.1 RTPRx

The RTPRx URI instructs the phone to receive a Unicast RTP stream or stop receiving Unicast or Multicast RTP streams. The RTPRx formats to use with the `AastraIPPhoneExecute` XML object in the URI are:

```
RTPRx:i:p:[v]:[mix]:[disableIcon]
RTPRx:Stop
```

Where:

- i specifies the IP Address from which the stream is coming.
- p specifies the UDP port on which to receive the RTP stream. You must ensure that this is a number greater than 3100 to make sure not to use a port already bound to the phone.
- v (optional) indicates the optional volume setting that controls the volume of the stream playout. The supplied value is an offset to the current volume setting. After the initial volume level gets set and the stream starts, you can manually change the volume level as required using this “v” option. If you do not specify the optional volume parameter, the phone uses the current volume setting on the phone as the default.
- mix (optional) specifies that the incoming RTP stream will be added to the existing audio stream if it exists.
- disableIcon (optional) specifies that the “mix” icon is not displayed (if “mix” is configured in the command).
- Stop specifies to stop any active custom RTP stream from being received.

Scenarios for “mix” RTP

Phone State	Action
Phone is in “idle” state	Phone initiates a new RTP session on the paging line and the paging line is displayed.
Phone is in “connected” state	Phone starts playing the incoming RTP stream on top of the existing call. Paging line is not displayed.
Phone is in a 3-way conference.	Request for receiving RTP is declined.
57iCT/9480iCT, base and handsets are in a “connected” state.	Request for receiving RTP is declined.
57iCT/9480iCT, handset is in “connected” state.	Phone starts playing the incoming RTP stream

Phone State	Action
	on top of the existing call. Paging line is not displayed.
The active voice call is dropped (RTP stream was being played on top of this voice call).	RTP stream is dropped as well.
A new call comes in while the active voice call (RTP stream was being played on top of this voice call) is put on hold.	RTP mixed stream is played on top of the currently active call.

Example1:

This example orders the phone to receive a unicast RTP stream from 10.30.100.20 at UDP port 21000 with the voice settings at 3 levels more than the current offset.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPRx:10.30.100.20:21000:3"/>
</AastraIPPhoneExecute>
```

Example 2:

This example orders the phone to receive a unicast RTP stream from 10.30.100.20 at UDP port 21000 using the current voice settings.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPRx:10.30.100.20:21000"/>
</AastraIPPhoneExecute>
```

Example 3:

This example orders the phone to receive a unicast RTP stream from 10.30.100.20 at UDP port 21000 using the current voice settings and audio mixing.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPRx:10.30.100.20:21000:mix"/>
</AastraIPPhoneExecute>
```

Example4:

This example orders the phone to receive a unicast RTP stream from 10.30.100.20 at UDP port 21000 with the voice settings at 3 levels more than the current offset, audio mixing and disabling the mixing icon.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPRx:10.30.100.20:21000:3:mix:disableIcon"/>
</AastraIPPhoneExecute>
```

Example 5:

This example orders the phone to stop an incoming active multicast/unicast RTP stream.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI="RTPRx:Stop"/>
</AastraIPPhoneExecute>
```

 **Note:** Once the RTPRx command in the URI is sent to the phone, it stops the phone from listening to any previous RTPRx or RTPMRx commands. The phone starts listening based on the most recent RTPRx command received. This behavior also applies to the RTPRx:Stop

and RTPMRx:Stop commands as well but does not enable any further listening.

4.4.2 RTPTx

The RTPTx URI instructs the phone to transmit a Unicast RTP stream or to stop transmitting Unicast or Multicast RTP streams. The RTPTx formats to use with the `AastralIPPhoneExecute` object in the URI are:

```
RTPTx:i:p:[mix]:[disableIcon]
RTPTx:Stop
```

Where

- i specifies the IP Address to which an RTP stream is transmitted.
- p specifies the UDP port on which to transmit the RTP stream. You must ensure that this is a number greater than 3100 to make sure not to use a port already bound to the phone.
- mix (optional) specifies that the RTP stream sent will be the existing audio stream if it exists.
- disableIcon (optional) specifies that the “mix” icon is not displayed (if “mix” is configured in the command).
- Stop specifies to stop any active custom RTP stream from being received.

Scenarios for “mix” RTP

Phone State	Action
Phone is in “idle” state	Phone initiates a new RTP session on the paging line and the paging line is displayed.
Phone is in “connected” state	Phone starts sending the mixed RTP stream. Paging line is not displayed.
Phone is in a 3-way conference.	Request for sending RTP is declined.
57iCT/9480iCT, base and handsets are in a “connected” state.	Request for sending RTP is declined.
57iCT/9480iCT, handset is in “connected” state.	Paging call is initiated using the voice stream with the mixed audio from the conference stream, paging line is not displayed.
The active voice call is dropped (RTP stream was being played on top of this voice call).	RTP stream is dropped as well.
A new call comes in while the active voice call (RTP stream was being played on top of this voice call) is put on hold.	RTP mixed stream is sent for the current active call.

Example 1:

This example orders the phone to send a unicast RTP stream to 10.30.100.20 on UDP port 21000.

```
<AastralIPPhoneExecute>
  <ExecuteItem URI = "RTPTx:10.30.100.20:21000"/>
</AastralIPPhoneExecute>
```

Example 2:

This example orders the phone to send a unicast RTP stream to 10.30.100.20 on UDP port 21000 with audio mixing.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPTx:10.30.100.20:21000:mix"/>
</AastraIPPhoneExecute>
```

Example 3:

This example orders the phone to send a unicast RTP stream to 10.30.100.20 on UDP port 21000 with audio mixing and “mix” icon disabled.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPTx:10.30.100.20:21000:mix:disableIcon"/>
</AastraIPPhoneExecute>
```

Example 4:

This example orders the phone to stop an outgoing active multicast/unicast RTP stream.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI="RTPTx:Stop"/>
</AastraIPPhoneExecute>
```

4.4.3 RTPMRx

The RTPMRx URI instructs the phone to receive a Multicast RTP stream. The RTPMRx format to use with the AastraIPPhoneExecute object in the URI is:

```
RTPMRx:i:p:[v]:[mix]:[disableIcon]
```

Where

- i specifies the multicast IP Address from which to receive an RTP stream.
- p specifies the UDP port on which to receive the RTP stream. You must ensure that this is a number greater than 3100 to make sure not to use a port already bound to the phone.
- v (optional) indicates the optional volume setting that controls the volume of the stream playout. The supplied value is an offset to the current volume setting. After the initial volume level gets set and the stream starts, you can manually change the volume level as required using this “v” option. If you do not specify the optional volume parameter, the phone uses the current volume setting on the phone as the default.
- mix (optional) specifies that the incoming RTP stream will be added to the existing audio stream if it exists.
- disableIcon (optional) specifies that the “mix” icon is not displayed (if “mix” is configured in the command).

Scenarios for “mix” RTP

Phone State	Action
Phone is in “idle” state	Phone initiates a new RTP session on the paging line and the paging line is displayed.
Phone is in “connected” state	Phone starts playing the incoming RTP stream on top of the existing call. Paging line is not displayed.
Phone is in a 3-way conference.	Request for receiving RTP is declined.

Phone State	Action
57iCT/9480iCT, base and handsets are in a “connected” state.	Request for receiving RTP is declined.
57iCT/9480iCT, handset is in “connected” state.	Phone starts playing the incoming RTP stream on top of the existing call. Paging line is not displayed.
The active voice call is dropped (RTP stream was being played on top of this voice call).	RTP stream is dropped as well.
A new call comes in while the active voice call (RTP stream was being played on top of this voice call) is put on hold.	RTP mixed stream is played on top of the currently active call.

Example 1:

This example orders the phone to receive a multicast RTP stream from 239.0.1.20 on UDP port 21000 with the voice settings at -3 levels less than the current offset.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPMRx:239.0.1.20:21000:-3"/>
</AastraIPPhoneExecute>
```

Example 2:

This example orders the phone to receive a multicast RTP stream from 239.0.1.20 at UDP port 21000 with the current voice settings.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPMRx:239.0.1.20:21000"/>
</AastraIPPhoneExecute>
```

Example 3:

This example orders the phone to receive a multicast RTP stream from 239.0.1.20 at UDP port 21000 with the current voice settings and audio mixing.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPMRx:239.0.1.20:21000:mix"/>
</AastraIPPhoneExecute>
```

Example 4:

This example orders the phone to receive a multicast RTP stream from 239.0.1.20 at UDP port 21000 with the current voice settings and audio mixing with the “mix” icon disabled.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPMRx:239.0.1.20:21000:mix:disableIcon"/>
</AastraIPPhoneExecute>
```

-
- Note:** Once the RTPMRx command in the URI is sent to the phone, it stops the phone from listening to any previous RTPRx or RTPMRx commands. The phone starts listening based on the most recent RTPMRx command received. This behavior also applies to the RTPRx:Stop and RTPMRx:Stop commands as well, but the “Stop” command does not enable any further listening.

4.4.4 RTPMTx

The RTPMTx URI instructs the phone to transmit a Multicast RTP stream. The RTPMTx format to use with the AastralIPPhoneExecute object in the URI is:

RTPMTx:i:p:[mix]:[disableIcon]

Where

- i specifies the Multicast IP Address to which an RTP stream is transmitted.
- p specifies the UDP port on which to transmit the RTP stream. You must ensure that this is a number greater than 3100 to make sure not to use a port already bound to the phone.
- mix (optional) specifies that the RTP stream sent will be the existing audio stream if it exists.
- disableIcon (optional) specifies that the “mix” icon is not displayed (if “mix” is configured in the command).

Scenarios for “mix” RTP

Phone State	Action
Phone is in “idle” state	Phone initiates a new RTP session on the paging line and the paging line is displayed.
Phone is in “connected” state	Phone starts sending the mixed RTP stream. Paging line is not displayed.
Phone is in a 3-way conference.	Request for sending RTP is declined.
57iCT/9480iCT, base and handsets are in a “connected” state.	Request for sending RTP is declined.
57iCT/9480iCT, handset is in “connected” state.	Paging call is initiated using the voice stream with the mixed audio from the conference stream, paging line is not displayed.
The active voice call is dropped (RTP stream was being played on top of this voice call).	RTP stream is dropped as well.
A new call comes in while the active voice call (RTP stream was being played on top of this voice call) is put on hold.	RTP mixed stream is sent for the current active call.

Example 1:

This example orders the phone to send a multicast RTP stream to 239.0.1.20 from UDP port 21000.

```
<AastralIPPhoneExecute>
  <ExecuteItem URI = "RTPMTx:239.0.1.20:21000"/>
</AastralIPPhoneExecute>
```

Example 2:

This example orders the phone to send a multicast RTP stream to 239.0.1.20 from UDP port 21000 with audio mixing.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPMTx:239.0.1.20:21000:mix"/>
</AastraIPPhoneExecute>
```

Example 3:

This example orders the phone to send a multicast RTP stream to 239.0.1.20 from UDP port 21000 with audio mixing and “mix” icon disabled.

```
<AastraIPPhoneExecute>
  <ExecuteItem URI = "RTPMTx:239.0.1.20:21000:mix:disableIcon"/>
</AastraIPPhoneExecute>
```

4.4.5 Interaction with action uris

action uri incoming

The action uri incoming is not triggered when the phone starts streaming RTP. This is a known issue which will be fixed in a future firmware release.

action uri connected

The action uri connected is not triggered when the phone starts streaming RTP. This is a known issue which will be fixed in a future firmware release.

action uri onhook

The action uri onhook is triggered at the end of the RTP streaming but the URL variables are not bound. This is a known issue which will be fixed in a future firmware release.

action uri disconnected

The action uri disconnected is not triggered at the end of the RTP streaming. This is a known issue which will be fixed in a future firmware release.

4.5 Keypress emulation

The Aastra SIP Phones support a “Key” URI to allow the XML application to send an event that a key has been pressed on the phone. The system initiates the event as if the button was physically pressed.

The phone maps key events to the phone physical keys and not to their mapped logical keys.

The exceptions to this rule are

- Xfer,
- Icom,
- Conf

as they can be dynamically mapped on the phone.

Notes:



- If the key is a valid key, the phone executes the key regardless of the current phone status.

-
- Phone does not send a response detailing the success or failure of a simulated key.
-

Lines

- Key:Line1 to Key:Line4 Line 1 to 4
-



Note: Since no Aastra phone has Line 5 to 9 physical keys, Line5 to Line9 are not supported.

Keypad

- Key:KeyPad0 to Key:KeyPad9 Numeric Keypad buttons 0-9
- Key:KeyPadStar *Star button
- Key:KeyPadPound # Hash button

Programmable keys (depending on model)

- Key:SoftKey1 to Key:SoftKey55 soft keys 1-55
 - Key:PrgKey1 to Key:PrgKey11 programmable keys 1-11
 - Key:TopSoftKey1 to Key:TopSoftKey10 top softkeys 1-10
 - Key:ExpMod1SoftKey1 to Key:ExpMod1SoftKey60 exp. module 1 keys 1 to 60
 - Key:ExpMod2SoftKey1 to Key:ExpMod2SoftKey60 exp. module 2 keys 1 to 60
 - Key:ExpMod3SoftKey1 to Key:ExpMod3SoftKey60 exp. module 3 keys 1 to 60
-



Note: The phone ignores expansion module keys that are not present on the expansion module such as key 40 on a 536M.

Volume and Voice path control

- Key:VolDwn Decrease button
 - Key:VolUp Increase button
 - Key:Headset Headset
 - Key:Speaker Speaker
 - Key:Mute Mute
-



Note: for both keys (headset and speaker) the behaviour is as if the "speaker/headset" button is pressed, and it does not switch to headset for "Headset" key event or to speaker for "Speaker" key event.

Telephony

- Key:Xfer Transfer
- Key:Conf Conference
- Key:Hold Hold
- Key:Redial Redial
- Key:Callers Callers List
- Key:Services Services

- | | |
|-----------------|-----------|
| • Key:Intercom | Intercom |
| • Key:Directory | Directory |
| • Key:Options | Options |
| • Key:Save | Save |
| • Key:Delete | Delete |
| • Key:Goodbye | GoodBye |
| • Key:Voicemail | Voicemail |
-

 **Note:** Since the phones do not have physical keys for Pickup and Park, those features will be only available if they are mapped to a programmable or soft key

Navigation (not available on 6739i)

- | | |
|----------------|----------------------|
| • Key:NavUp | Navigation up key |
| • Key:NavDwn | Navigation down key |
| • Key:NavLeft | Navigation left key |
| • Key:NavRight | Navigation right key |

Example:

This example asks the phone to display the phone directory.

```
<AastraIPPhoneExecute>
<ExecuteItem URI = "Key:Directory"/>
</AastraIPPhoneExecute>
```

4.6 Wav file streaming

The phone has the capability to stream a wav file from a TFTP or a HTTP server. In order to limit bandwidth fluctuations, the phone buffers 4 seconds of audio data (or the complete file) before playing the audio.

The Wav command follows the configured phone behavior for the audio path (speaker, headset and handset) and supports volume adjustments.

 **Note:** The wav file is played only if the phone is idle.

The user can abort the streaming with:

- Goodbye key
- Soft 'Drop' key
- On hook (when handset active)
- Selecting a line

The beginning and the end of the streaming trigger the following action uris:

- action uri incoming/connected at the beginning of the streaming
- action uri onhook/disconnected at the end of the streaming (end of the file or aborted by the user)

As the phone displays a "Wav streaming" screen, the beginning of the streaming destroys the current XML display so diverting the action uri incoming and onhook is the only way to regain control for the XML application.

The typical use for this feature is a voicemail application or podcasts.



Note: Paging will not interrupt the streaming unless barge-in is set.

4.6.1 XML Commands

The phone supports 2 AastralIPPhoneExecute commands. 'Wav.Play' and 'Wav.Stop'.

- XML Command: Wav.Play

This command initiates the streaming of a WAV file to the phone.

Syntax:

```
Wav.Play:[v]:[tftp://|http://][username[:password]@]<host>[:port][/<path>]/file
```

Where v is the volume level of the audio path from 0 (lowest level) to 9 (highest level), this volume level overrides the current configured volume level of the phone.

Notes:



- The default mode is HTTP and the default port for HTTP is 80
- HTTPS is not supported.

Examples:

```
<ExecuteItem URI="Wav.Play:tftp://10.30.101.26/example.wav"/>
<ExecuteItem URI="Wav.Play:5:http://10.30.101.26/example.wav"/>
<ExecuteItem URI="Wav.Play:http://10.30.101.26:8080/example.wav"/>
<ExecuteItem URI="Wav.Play:2:http://user:password@10.30.101.26/sample.wav"/>
<ExecuteItem URI="Wav.Play:7:10.30.101.26/example.wav"/>
```

The last example is equivalent to

```
<ExecuteItem URI="Wav.Play:7:http://10.30.101.26/example.wav"/>
```

As HTTP is the default protocol.

- XML Command: Wav.Stop

This command will abort WAV streaming.

Syntax:

```
Wav.Stop:
```

Example:

```
<ExecuteItem URI="Wav.Stop:"/>
```

4.6.2 File format

The phones support **only** the following file format:

- Wav file
- G.711 µ-law and a-law Codec
- 20 ms packet size
- Mono 8KHz

If the format is not supported by the phone, the request is declined.

4.6.3 Interaction with action uris

action uri incoming/connected

When the phone starts streaming the wav file, the action uri incoming as well as action uri connected are triggered and the XML variables get the following values.

Variable Name	Value
\$\$SIPUSERNAME\$\$	“Streaming”
\$\$DISPLAYNAME\$\$	“Streaming”
\$\$SIPAUTHNAME\$\$	“Streaming”
\$\$PROXYURL\$\$	“Streaming”
\$\$ACTIVEPROXY\$\$	“Streaming”
\$\$INCOMINGNAME\$\$	Name of the wav file
\$\$REMOTENUMBER\$\$	“”
\$\$LOCALIP\$\$	Local IP address of the phone
\$\$CALLDURATION\$\$	0
\$\$CALLDIRECTION\$\$	Empty

action uri onhook/disconnected

At the end of the streaming (end of file or aborted by user), the action uri onhook is triggered as well as the action uri disconnected and the XML variables get the following values.

Variable Name	Value
\$\$SIPUSERNAME\$\$	“Streaming”
\$\$DISPLAYNAME\$\$	“Streaming”
\$\$SIPAUTHNAME\$\$	“Streaming”
\$\$PROXYURL\$\$	“Streaming”
\$\$ACTIVEPROXY\$\$	“Streaming”
\$\$INCOMINGNAME\$\$	Name of the wav file
\$\$REMOTENUMBER\$\$	“”
\$\$LOCALIP\$\$	Local IP address of the phone
\$\$CALLDURATION\$\$	Duration of streaming
\$\$CALLDIRECTION\$\$	Empty

4.7 Wav file loop playback (melody)

The phone also has the capability to download a wav file from a TFTP / FTP / HTTP server and play it continuously until it is stopped by a stop command or a user intervention.

Unlike the "Wav" streaming commands the file is first downloaded from the server and then played in loop locally on the phone.

For performance reasons, up to 8 wav files can be cached on the phone to allow a faster playback for following commands. The cache is limited to 400k and lost at reboot.

This command follows the configured phone behavior for the audio path (speaker, headset and handset) and supports volume adjustments.

Notes:

- The wav file is locally played only if the phone is idle.
 - The wav file size is limited to 200K
-

The user can abort the playback with:

- Goodbye key
- Soft 'Drop' key
- On hook (when handset active)
- Selecting a line

Unlike the streaming capability, the beginning and the end of a playback does not trigger any following action uri and the phone display is not changed.



Note: Paging will not interrupt the streaming unless barge-in is set.

4.7.1 XML Commands

The phone supports 2 AastraIPPhoneExecute commands. 'Melody.Play' and 'Melody.Stop'.

- XML Command: Melody.Play

This command initiates the download then playback of a WAV file to the phone.

Syntax:

```
melody.Play:[tftp://|ftp://|http://[username[:password]@]<host>[:port][/<path>]/file:[v]
```

Where v is the volume level of the audio path from 0 (lowest level) to 9 (highest level), this volume level overrides the current configured volume level of the phone.

Examples:

```
<ExecuteItem URI="Melody.Play:tftp://10.30.101.26/example.wav"/>
<ExecuteItem URI="Melody.Play:ftp://user:password@10.30.101.26/example.wav:5"/>
<ExecuteItem URI="Melody.Play:http://10.30.101.26:8080/example.wav"/>
<ExecuteItem URI="Melody.Play:http://user:password@10.30.101.26/sample.wav:2"/>
```

- XML Command: Melody.Stop

This command will abort the wav file playback.

Syntax:

Melody.Stop:

Example:

```
<ExecuteItem URI="Melody.Stop:"/>
```

4.7.2 File format

The phones support **only** the following file format:

- Wav file
- G.711 µ-law and a-law Codec
- 20 ms packet size
- Mono 8KHz
- 200 kb

If the format is not supported by the phone, the request is declined.

4.8 Dial and DialLine URIs

The phone supports 2 URI commands to launch an outgoing call from XML.

- Dial:XXXXX
- DialLine:Y:XXXXX

Where XXXXX is the number/URI to dial and Y is the SIP line number.



Note: The AastralIPPhoneDirectory object does not support the “Dial” and “DialLine” commands.

The difference between Dial and DialLine is that with the DialLine command you can specify which SIP line to use, Dial will use the first available SIP line on the phone.

Dial and DialLine are generic URI and can be used anywhere a URI is requested by an XML object, this can be a custom softkey, an item in a TextMenu.

Although the line range is defined as 1 to 9, you must have a SIP account configured on the line to use the dial tag.

For example, if you configure lines 1 to 4 on a phone using a line value of 5 results in undefined behavior. The range of lines you can use for values is limited to the number of lines that the phone supports.

The following table identifies the number of lines supported on each phone type.

Phone model	Max Line
6730i, 6731i	6
6735i, 6737i, 6739i, 6753i, 6755i, 6757i, 6757iCT, 9143i, 9480i, 9480iCT	9
6863i	2
6865i/6867i	9

4.9 Crash and configuration files retrieval

The phone has the capability to upload the last crash file as well as the configuration files to a pre-configured location. This operation can be triggered manually via the Web UI or via the phone (if configured) but also via an XML command.

Example

In the configuration file (aastra.cfg or MAC.cfg)

```
upload system info server: tftp://myserver/path
```

Command

```
<AastraIPPhoneExecute>
<ExecuteItem URI="Command: UploadSystemInfo"/>
</AastraIPPhoneExecute>
```

Sending this command to the phone make the phone uploads the last crash file as well as the configuration files (server.cfg and local.cfg) to the configured server (using TFTP in this example). Uploaded files are indexed by the MAC address, date and time.

TFTP, FTP, HTTP and HTTPS are supported for the upload protocol.

4.10 Special attributes

4.10.1 Beep

You can enable or disable a `Beep` option in all the Aastra XML objects via the `Beep` attribute in the root tag. When the phone receives an XML object, the `Beep` notifies the user that an object is being displayed.

This attribute is optional. If the `Beep` attribute is set to "yes" (i.e. `Beep="yes"`) then it is an indication to the phone to sound a beep when it receives the object. If the `Beep` attribute is set to "no" (i.e. `Beep="no"`) or not present, then the default behavior is no beep is heard when the object arrives to the phone.

The `Beep` option can also be enabled or disabled via the configuration files and the Aastra Web UI using the following parameters:

- `xml beep notification (via configuration files)`
- `XML Beep Support (via the Aastra Web UI see chapter 7.5)`

The value set in the configuration files and Aastra Web UI override the attribute you specify in the XML object.

For example, if an `AastraIPPhoneStatus` object has the attribute of `Beep="yes"`, and you uncheck (disable) the “XML Beep Support” in the Aastra Web UI, the phone does not beep when it receives an `AastraIPPhoneStatus` object.

4.10.2 Timeout

The `Timeout` attribute is an optional root tag attribute for all of the current UI XML objects. When the phone receives an XML object with this attribute set it will override the default 45 seconds timeout specified for custom applications.

Setting `Timeout` to “0” will disable the timeout feature.

This timeout is reset by button presses.

4.10.3 LockIn

The `LockIn` attribute is an optional root tag attribute for all of the current UI XML objects. This attribute allows the XML designer to specify that a screen can not be cancelled.

When a phone receives an UI XML object with the attribute set to “yes” it ignores all events that would cause the screen to exit without using the keys defined by the object.



Note: An incoming call still cancels the “locked” screen as telephony events have priority over XML applications.

Setting `LockIn` will disable the default timeout feature (45 seconds) unless the `Timeout` attribute is also set in the root tag.

4.10.4 triggerDestroyOnExit

The `triggerDestroyOnExit` is an optional root tag attribute for all of the current non-UI XML objects (`PhoneStatus`, `PhoneExecute` and `PhoneConfiguration`). Its default value is “no”.

By default, if a UI XML object gets a non-UI XML object as an answer to an exit URI (“Select” on a `TextMenu` or “Done” on a `InputScreen`...) the UI XML object is not destroyed and stays on the phone display even if its `destroyOnExit` tag is set to “yes”.

By setting `triggerDestroyOnExit` to “yes”, the previous UI XML object is destroyed if its `destroyOnExit` tag is set to “yes”.

4.11 TextMenu user selection (6735i/6737i/6739i/55i/57i/57iCT/9480i/9480iCT,6867i)

It is also possible to send information related to a user’s choice in a Text Menu.

“Select” and “Dial” system keys use the URI passed in the `MenuItem` attribute, a custom key might need to know the user selection in the `TextMenu`, and this is the purpose of the `Selection` attribute.

When a user accesses an arbitrary URI via a custom softkey, the Text Menu will send along a bit of information regarding the user’s currently selected option using an optional XML attribute `Selection`.

XML Example

```
<AastraIPPhoneTextMenu destroyOnExit = "yes">
  <Title>Parameter Tester</Title>
  <MenuItem>
    <Prompt>First Selection</Prompt>
```

```

<URI>http://someserver/somepage.xml</URI>
    <Selection>dataToAppend</Selection>
</MenuItem>
<SoftKey index = "1">
    <Label>Custom Key</Label>
    <URI>http://someotherserver/someotherpage.xml</URI>
</SoftKey>
</AastraIPPhoneTextMenu>

```

When the user selects item 1 and presses softkey 1, the URI requested is
http://someotherserver/someotherpage.xml?selection=dataToAppend

Notes:

- If a “?” already exists in the URI, then a “&” is used to separate the parameters. Note the parameter name “selection” is automatic. If the Selection attribute is omitted, then nothing extra is appended to the URI.
 - the Selection attribute can be more than one parameter, for instance, the following Selection attribute is valid <Selection>200&action=set</Selection> (don’t forget to escape encode the attribute for the “&”).
-

4.12 TextMenu item formatting on 2 lines (55i/57i/57iCT/9480i/9480iCT/6735i/6737i)

As XML does not allow formatting characters such as TAB or CR or multiple spaces, it is difficult to create an AastralPPhoneTextMenu with a controlled formatting.

This paragraph describes ways to achieve some advanced formatting using the unbreakable space character.

php function format_line()

```

function format_line($line1,$line2,$style,$offset,$char,$mode='left')
{
# Retrieve phone model
$user_agent=$_SERVER['HTTP_USER_AGENT'];
$value=preg_split("/ MAC:/",$user_agent);

# Get screen size
switch($value[0])
{
    case 'Aastra51i':
    case 'Aastra53i':
    case 'Aastra9143i':
    case 'Aastra6730i':
    case 'Aastra6731i':
        $length='16';
        break;
    case 'Aastra9480i':
    case 'Aastra9480iCT':
        $length='21';
        break;
    case 'Aastra55i':
    case 'Aastra57i':
    case 'Aastra57iCT':
    case 'Aastra6735i':
    case 'Aastra6737i':
        $length='24';
        break;
    default:
        $length='24';
        break;
}

```

```

# Adjust with the style
switch($style)
{
  case 'none':
  case 'radio':
    $length--;
    break;
  default:
    $length-=4;
    break;
}

# Unbreakable space
$nbsp=chr(0xa0);

# Pad the the first line with regular spaces
switch($mode)
{
  case 'center':
    $line=str pad($line1,$length-1-$offset,$char,STR PAD BOTH);
    break;
  case 'right':
    $line=str_pad($line1,$length-1-$offset,$char,STR_PAD_LEFT);
    break;
  default:
    $line=str pad($line1,$length-1-$offset,$char,STR PAD RIGHT);
    break;
}

# Crop the line to the correct length (-1 for wrap-space)
$line=substr($line,0,($length-1-$offset));

# Append a space so it can wrap to line two, and two non-break spaces to pad below
the icon
if($line2!='')
{
  $line.=' '.str_repeat($nbsp,$offset);
  switch($mode)
  {
    case 'center':
      if($char==chr(0xa0))           $line.=str repeat($char,($length-
$offset-strlen($line2))/2).$line2;
      else                          $line.=str pad($line2,$length-$offset-
1,$char,STR_PAD_BOTH);
      break;
    case 'right':
      $line.=str repeat($char,$length-$offset-
strlen($line2)+1).$line2;
      break;
    default:
      $line.=$line2;
      break;
  }
}

# Return formatted prompt
return($line);
}

```

Parameters

- **line1** string to be displayed on line 1
- **line2** string to be displayed on line 2 (can be empty)
- **style** TextMenu style (none/numbered/radio)
- **offset** Integer represents the offset for the second line (size of the icon)
- **char** Character to use for the padding, space is supported.

- mode Optional padding mode ("left", "right", "center"), "left" is the default value.

Examples

- 2 lines left justified with double size icon

```
format_line('Line 1','Line 2','none',2,'');
```

generated with the 'envelope' icon.



- 1 line centered with '-' padding

```
format_line('Line 1','','none',0,'-','center');
```



PHP SDK

This function has been embedded in the XML SDK (fully described in chapter 13) within the AastralIPPhoneTextMenu constructor.


The method addEntry now supports an array for the menu item prompt parameter with

- 0=>Line1
- 1=>Line2
- 2=>Offset
- 3=>Padding character
- 4=>Mode

Example with the PHP SDK

```
require once('AastralIPPhoneTextMenu.class.php');
$menu = new AastralIPPhoneTextMenu();
$menu->setTitle('Title');
$menu->setDestroyOnExit();
$menu->setWrapList();
$menu->setStyle('none');
$menu->addEntry(
    array( 'John Doe',
           '12/22/09 at 2:23 PM',
           2,
           '',
           'left'),
    'http://myserver.com/script.php?choice=1',
    '',
    '1');
$menu->addEntry(
    array( 'John Doe',
           '11/22/09 at 1:23 PM',
           2,
           '',
           'left'),
    'http://myserver.com/script.php?choice=2',
    '',
    '1');
$menu->addSoftkey('1', 'Select', 'SoftKey:Select');
$menu->addSoftkey('6', 'Exit', 'SoftKey:Exit');
$menu->addIcon('1', 'Icon:Envelope');
```

```
$menu->output();
```

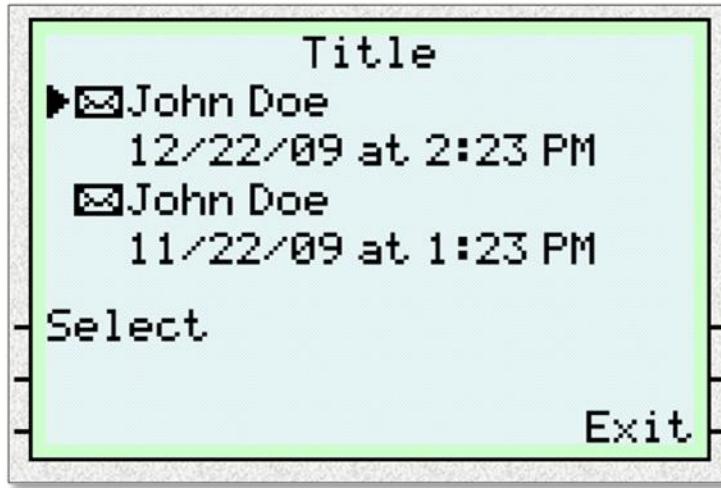

4.13 “Select” and “Dial” in the same TextMenu object

The only way to have a “Select” and “Dial” keys in the same text menu, the only option is to use “Dial” as a system command and mimic “Select” with a custom key.

```
<AastraIPPhoneTextMenu destroyOnExit = "yes">
  <Title>Dial and Select</Title>
  <MenuItem>
    <Prompt>First Selection</Prompt>
    <URI>200</URI>
    <Selection>200</Selection>
  </MenuItem>
  <MenuItem>
    <Prompt>Second Selection</Prompt>
    <URI>201</URI>
    <Selection>201</Selection>
  </MenuItem>
  <SoftKey index = "1">
    <Label>Dial</Label>
    <URI>SoftKey:Dial</URI>
  </SoftKey>
  <SoftKey index = "2">
    <Label>Select</Label>
    <URI>http://myserver.com/script.php</URI>
  </SoftKey>
</AastraIPPhoneTextMenu>
```

When the user selects item 1 and presses

- Softkey 1, the phone dials 200
- Softkey 2, the requested URI requested is <http://myserver.com/script.php?selection=200>

4.14 “Select”, “Dial” and “Dial2” behavior in a TextMenuItem object

The following table describes what actions will be performed for each possible combination of items and actions in a <MenuItem>.

MenuItem Content	Select Softkey	Offhook	Dial2 Softkey	Dial Softkey
<URI>http://XYZ.</URI>	GET(http://XYZ)	-	-	Dial(http://XYZ)
<Dial>123</Dial>	-	Dial(123)	Dial(123)	-
<URI>http://XYZ</URI> <Dial>123</Dial>	GET(http://XYZ)	Dial(123)	Dial(123)	Dial(http://XYZ)
<URI>Dial:456</URI> <Dial>123</Dial>	Dial(456)	Dial(123)	Dial(123)	Dial(Dial:456)



Note: the main purpose of the “Dial” tag in the TextMenu is to allow the Aastra SIP phones which do not support custom softkeys to dial a number going off-hook.

4.15 Refresh of an XML page

All XML UI objects have the ability to be refreshed. This is accomplished by adding a Refresh setting to the HTTP header. This setting comprises two parameters:

- a time in seconds
- a URL.

The Refresh setting is set by the XML application and it is up to the application to decide which objects they want to refresh. So, it is an optional setting.

If the setting appears, then both parameters must be set for the Refresh to work.

The format of the HTTP header is:

```
Refresh: timeout; url=page to load
```

Example

```
Refresh: 3; url=http://10.50.10.140/update.xml
```

All of the parameters are mandatory.

With php you will have to use the `header` command in your script.

```
header ("Refresh: 1; url= http://10.50.10.140/update.xml");
```

4.16 HTTP headers format for a phone HTTP GET

When the Aastra SIP performs a GET to an HTTP server, it sets multiple variables in the HTTP header:

- ‘User-Agent’ providing information on the characteristics of the phone (type, MAC address, firmware),
- ‘X-Aastra-ExpMod1’ providing information on the expansion module 1 if present,
- ‘X-Aastra-ExpMod2’ providing information on the expansion module 2 if present,
- ‘X-Aastra-ExpMod3’ providing information on the expansion module 3 if present,
- ‘Accept-Language’ providing information on the language used on the phone.

Example:

```
User-Agent: Aastra57i MAC:00-08-5D-19-94-B7 V:2.3.1.26-SIP
Accept-Language: en
X-Aastra-ExpMod1: 560M
X-Aastra-ExpMod2: 536M
```

4.16.1 User-Agent

The User-Agent header includes:

- The type of phone
- The MAC address of the phone
- The firmware version of the phone

Usually, the HTTP server is able to retrieve the User Agent parameters. The Aastra SIP phones send the following string for the User-Agent.

Phone_Model [space]MAC:-XX-XX-XX-XX-XX-XX [space]V:Version

This allows the application to adapt to the type of phone it is dealing with but also allows to design a single application to provide XML (for the phones) and HTML (for a web browser).

The following source code is a php example that can be used to decode the User-Agent header sent by an Aastra phone.

```
function Aastra_decode_HTTP_header()
{
$user_agent=$_SERVER["HTTP_USER_AGENT"];
if(stristr($user_agent,"Aastra"))
{
$value=preg_split("/ MAC:/",$user_agent);
$end=preg_split("/ /",$value[1]);
$value[1]=preg_replace("/\-/","", $end[0]);
$value[2]=preg_replace("/V:/","", $end[1]);
}
else
{
$value[0]="Unknown";
$value[1]="NA";
$value[2]="NA";
}
$header['model']=$value[0];
```

```
$header['mac']=$value[1];
$header['firmware']=$value[2];

return($header);
}
```

This function returns an array with

- Array['model'] is the phone model
 - “Aastra9143i”,
 - “Aastra9480i”,
 - “Aastra9480iCT”,
 - “Aastra6730i”,
 - “Aastra6731i”,
 - “Aastra6735i”
 - “Aastra6737i”
 - “Aastra6739i”
 - “Aastra53i”,
 - “Aastra55i”,
 - “Aastra57i”
 - “Aastra57iCT”
 - “Aastra6863i”
 - “Aastra6865i”
 - “Aastra6867i”
- Array['mac'] is the MAC address
- Array['firmware'] is the firmware version

Example of execution

- Array['model'] => Aastra57i
- Array['mac'] => 00085D031C81
- Array['firmware'] => 3.1.0.190-SIP

4.16.2 X-Aaastra-ExpModi

If the phone has expansion modules (6735i, 6737i, 6739i, 6753i, 6755i, 6757i or 6757i CT) connected, the phone sends this information in proprietary http headers:

- **X-Aastra-ExpMod1**
- **X-Aastra-ExpMod2**
- **X-Aastra-ExpMod3**

The header is sent only if an expansion module is present at the given position, the possible values are:

- 536M for the 36 keys paper labeled expansion module (6735i, 6737i, 6739i, 53i, 55i, 57i, 57i CT)

- 560M for the 60 keys self labeled expansion module (6735i, 6737i, 6739i, 55i, 57i, 57i CT)
- M680i for the 16 keys paper labeled expansion module (6867i)

The following source code is a php example that can be used to decode the X-Aastra_ExpmMod header sent by an Aastra phone.

```
function Aastra_decode_HTTP_X_Aastra()
{
$header[ 'module1' ]=$_SERVER["HTTP_X_AASTRA_EXPMOD1"];
$header[ 'module2' ]=$_SERVER["HTTP_X_AASTRA_EXPMOD2"];
$header[ 'module3' ]=$_SERVER["HTTP_X_AASTRA_EXPMOD3"];

return ($header);
}
```

Example of execution

An Aastra 57i with one 560M in position 1 and a 536M in position 2.

- Array['module1'] => 560M
- Array['module2'] => 536M
- Array['module3'] => Empty string

4.16.3 Accept-Language

The phone also sends the standard **Accept-Language** in the headers request which describes the language of the phone using 2 characters.

To access it using php the syntax is `$_SERVER["HTTP_ACCEPT_LANGUAGE"]`)

Example

- `echo $_SERVER["HTTP_ACCEPT_LANGUAGE"]`
- returns "en"

4.17 Some development guidelines

There are some simple rules that you should follow when you develop XML applications for the Aastra SIP phones.

- Don't forget the "Exit" key when you use custom softkeys
- Place custom softkeys as they are for the standard objects, also it is better to use the same labels. The Exit key should preferably be placed in position 6.
- Setting `destroyOnExit` attribute to "yes" is always preferable when you write complex applications as it is the only way to properly control the pages that are stacked in the phone.
- Avoid using the Directory Object; TextMenu object with custom keys is much more flexible.
- If you want to access data from the internet, it is preferable to use a RSS feed or a SOAP interface than Web scraping as Web sites frequently change their layout interface.

- For XML applications using data from the Internet, if they are not real time you might consider to “cache” the data on the server and update them on a regular basis (a weekly update is necessary for Movie schedules but a 10 minutes update might be necessary for a weather application for severe conditions).
- As the XML objects are limited to 10000 bytes, you might sometime hit this limit for a complex `TextMenu` with a lot of custom keys and custom icons. Don't forget to use the `base` attribute in the `MenuItem` object as it is a good way to reduce the size of the object.

5 URL Format and Variables

5.1 URL format

To access to an XML application the phone performs a HTTP (or HTTPS) GET on a URL. The supported syntax is:

`http://host[:port]/dir/file`

or

`https://host[:port]/dir/file`

where:

- host is the hostname or IP address of the Web server supporting the XML application
- port is the port number the phones is using for the HTTP request.



Note: If the port is not specified, the phone uses port 80.

The phone also supports the following URLs:

- Dial: XXXXX to have the phone dial XXXXX
- DialLine:X:YYYYY to have the phone dial YYYYY (phone number or URI) using SIP line X see chapter 4.7 for more details on this feature..
- Led:XXXXX=on/off/slowflash/fastflash to change the status the LED associated to the XXXXX key if the key is configured as an XML key. See chapter 4.2 for more details on the LED control.
- Key:XXXXX to simulate a keypress on the phone. See chapter 4.5 for more details on keypress emulation.

5.2 URL Variables

The phones support system variables in the HTTP URL to pass dynamic data to the XML applications.

The variables are in the form `$$VARIABLENAME$$` and the following variables are supported:

Variable Name	Value
SIPUSERNAME	Active line user name
DISPLAYNAME	Active line display name
SIPAUTHNAME	Active line SIP authentication name
PROXYURL	Active line SIP proxy
ACTIVEPROXY	Active line active SIP proxy
INCOMINGNAME	Caller-ID name of the current incoming call
REMOTENUMBER	Remote party phone number (incoming or outgoing)
LOCALIP	Phone local IP address
CALLDURATION	Duration of the current call in seconds

Variable Name	Value
CALLDIRECTION	Direction of the current call ("Incoming" or "Outgoing")
REGISTRATIONCODE	3 digits registration code for the registration coming from the SIP Proxy server.
REGISTRATIONSTATE	Registration state available from the Registration event, values are: <ul style="list-style-type: none"> • "REGISTERED", • "UNREGISTERED", • "EXPIRED", • "REFUSED", • "TIMEOUT".
LINESTATE	Information on Disconnect event, values are <ul style="list-style-type: none"> • "IDLE" • "DIALING" • "CALLING" • "OUTGOING" • "INCOMING" • "CONNECTED" • "CLEARING"

At the time of the HTTP call, the variables are replaced with the value of the appropriate variable.

The variables are available in all the HTTP URL for programmable/soft keys as well as for the action URI. They can also be used in the XML objects themselves (TextMenu, InputScreen...) but not in a PhoneExecute command.

Example

For example, if the administrator specifies an XML softkey with the value:

```
http://10.50.10.140/script.pl?name=$$SIPUSERNAME$$
```

This softkey executes a GET on:

```
http://10.50.10.140/script.pl?name=42512
```

Assuming that the SIP username of the specific line is 42512.

The variables can be used, for instance, in a context where the phone has multiple SIP registrations and the XML application need to know which SIP registration the phone is currently using.

 **Note:** the value of a variable depends on the status of the phone, if the variable has no meaning in the current status; the phone sends an empty string. For example, if the URL is "http://myserver.com/script.pl?number=\$\$REMOTENUMBER\$\$&key=5", the phone will call "http://myserver.com/script.pl?number=&key=5" if the phone is idle.

5.2.1 Variables related to the active line

The following variables are related to the active line

- \$\$SIPUSERNAME\$\$ Active line user name
- \$\$DISPLAYNAME\$\$ Active line display name

- \$\$SIPAUTHNAME\$\$ Active line SIP authentication name
- \$\$PROXYURL\$\$ Active line SIP proxy
- \$\$ACTIVEPROXY\$\$ Active line active SIP proxy

They can be used anywhere where the active line is meaningful for your XML application but they should not be used with outside event action uris such as action uri poll or action uri xml sip notify as the active line can be anything when the event is processed.

5.2.2 Variables related to the current call

The following variables are related to the current call.

- \$\$INCOMINGNAME\$\$ Caller-ID name of the current incoming call
- \$\$REMOTENUMBER\$\$ Remote party phone number (incoming or outgoing)
- \$\$CALLEDDURATION\$\$ Duration of the current call in seconds
- \$\$CALLEDDIRECTION\$\$ Direction of the current call ("Incoming" or "Outgoing")
- \$\$LINESTATE\$\$ Information on Disconnect event

List of values for the LINESTATE variable

LINESTATE VALUE	Meaning	Disconnected uri
IDLE	The phone is idle	N/A
DIALING	The phone is offhook and ready to dial	N/A
CALLING	A SIP INVITE has been sent but no response has been received.	An error occurred during the call.
OUTGOING	Remote party is ringing.	The call was canceled.
INCOMING	Local phone is ringing.	The call was missed or canceled.
CONNECTED	The parties are talking.	Call was successful
CLEARING	Call has been released but not acknowledged.	N/A

These variables are initialized at the beginning and at the end of the call which means for instance that the call duration variable is reset to '0' after the phone goes on-hook, the last moment to retrieve the value is when you use the action uri onhook or action uri disconnected.

5.2.3 Usage with action uris

The following table details when the variables are meaningful with an action URI.

	startup	registered	registration	onhook	offhook	incoming	outgoing	disc.	poll	notify
SIPUSERNAME	X	X	X	X	X	X	X	X		
DISPLAYNAME	X	X	X	X	X	X	X	X		
SIPAUTHNAME	X	X	X	X	X	X	X	X		
PROXYURL	X	X	X	X	X	X	X	X		
INCOMINGNAME				X ¹		X			X ¹	X ²

¹ only if the previous call was an incoming call

	startup	registered	registration	onhook	offhook	incoming	outgoing	disc.	poll	notify
REMOTENUMBER				X		X	X		X ²	X ³
LINESTATE				X				X	X	X
LOCALIP	X	X	X	X	X	X	X		X	X
CALLDURATION				X	X				X	X
CALLDIRECTION				X	X	X	X	X	X	X
REGISTRATIONSTATE		X	X						X	
REGISTRATIONCODE		X	X						X	

5.2.4 Phone State

The following table details when the variables are meaningful for a programmable/soft key depending on the phone state.

	idle	connected	incoming	outgoing
SIPUSERNAME	X	X	X	X
DISPLAYNAME	X	X	X	X
SIPAUTHNAME	X	X	X	X
PROXYURL	X	X	X	X
ACTIVEPROXY	X	X	X	X
INCOMINGNAME		X ³	X	
REMOTENUMBER		X	X	X
LINESTATE	X			
LOCALIP	X	X	X	X
CALLDURATION		X		
CALLDIRECTION		X		
REGISTRATIONSTATE				
REGISTRATIONCODE				

5.3 HTTPS

If you want to secure the communication between the Aastra SIP Phone and your HTTP server hosting the XML applications, you can use HTTPS instead of HTTP.

 **Note:** HTTPS provides a reasonable level of security to your XML applications for man-in-the-middle attacks but you must still make sure that the HTTP server itself is secure, only the data transport is protected by HTTPS.

¹ only if the phone is in the “connected” state answering an incoming call

² only if the phone is in the “connected” state

³ only if the user has answered the current call.

To allow HTTPS connections, the web server must have a root certificate; this certificate must be signed by a certificate authority of one form or another, which certifies that the certificate holder is indeed the entity it claims to be. The certificate can also be self-signed.

Aastra SIP phones come with the signing certificates of

- Verisign
- GeoTrust
- Thwate

So, only certificates signed by these Certification Authorities can be verified by the phone. Certificates that are signed by other providers will not verify on the phone but to overcome this problem, the phone can be loaded with user certificates.

The following parameters allow HTTPS validation configuration.

```
https validate certificates
https validate expires
https validate hostname
https user certificates
```

→ **Note:** if you have http validate expires enabled, you must make sure that the phone clock is yet prior to using HTTPS.

When a certificate is rejected the phone displays "Bad Certificate" on the fifth line of the display for large screen phones (6735i/6737i/6739i/55i/57i/57iCT/9480i/9480iCT) and on the third line for small screen phones (6730i/6731i/6753i/9143i).

→ **Note:** For more information regarding HTTPS and associated certificates please refer to the x.509 standard at <http://www.ietf.org/html.charters/pkix-charter.html>.

5.3.1 User Certificates

The user has the option to upload its own certificates onto the phone. These certificates must be uploaded in a single file in the PEM format.

The user certificates are persistent between firmware upgrades but are deleted during a factory default.

User provided certificates are downloaded as part of the boot time configuration downloads and be based on a filename specified in http user certificates. The certificate file must be located in the configuration server directory.

→ **Note:** In order to install a root certificate using HTTPS, the user must first disable verification, since the certificate will not be in the validation chain yet.

Example

Here is an example of a self-signed certificate; it is stored in a file called "mycertificate.pem" located in the configuration server directory.

```
-----BEGIN CERTIFICATE-----
MIIDyjCCAzOgAwIBAgIBADANBgkqhkiG9w0BAQQFADCByTELMAkGA1UEBhMCLSOx
EjAQBgNVBAgTCVNvbWVTdGF0ZTERMA8GA1UEBxMIU29tZUNpdHkxGTAXBgNVBAoT
EFNvbWVPcmdhbml6YXRpb24xHzAdBgNVBAsTF1NvbWVPcmdhbml6YXRpb25hbFVu
aXQxEzARBgNVBAMUCm15X3RyaXhib3gxHjAcBgkqhkiG9w0BCQEWD3Jvb3RAbX1f
```

```

dHJpeGJveDAeFw0wODA2MTAxOTM4MzZaFw0wOTA2MTAxOTM4MzZaMIG1MQswCQYD
VQQGEwItLTESMBAGA1UECBMJU29tZVN0YXR1MREwDwYDVQQHEwhTb211Q210eTEZ
MBcGA1UEChMQU29tZU9yZ2FuaXphdGlvbjEfMB0GA1UECxMWU29tZU9yZ2FuaXph
dGlvbmFsVW5pdDETMBEGA1UEAxQKbX1fdHJpeGJveDEeMBwGCSqGSIB3DQEJARYP
cm9vdEBteV90cm14Ym94MIGfMA0GCSqGSIB3DQEBAQUAA4GNADCBiQKBgQDUZa1m
3ienPcP1zmgp2jT7oGnVoSfKmOs7n7kLpWTUyWpmEfrleetVoRoaGL5j+zTwaAjO
lp9apC17nwe0qRC2BuPDyzkVE4f30Vn2pm1u5yYDoi+yRE1NFyVLbQwLFTffUGwQ
kfC7YabPdbojQ87/XU6/AhuqueT0n3nNE9NwQHwIDAQABo4IBBjCCAQIwHQYDVR0O
BBYFE6XN1xAlZxfYbmucEN2VUYOTIfNMIHSBgNVHSMEgcowgceAFE6XN1xAlZxf
YbmucEN2VUYOTIfNoYGrpIGoMIG1MQswCQYDVQQGEwItLTESMBAGA1UECBMJU29t
ZVN0YXR1MREwDwYDVQQHEwhTb211Q210eTEZMBCGA1UEChMQU29tZU9yZ2FuaXph
dGlvbjEfMB0GA1UECxMWU29tZU9yZ2FuaXphdGlvbmFsVW5pdDETMBEGA1UEAxQK
bX1fdHJpeGJveDEeMBwGCSqGSIB3DQEJARYPcm9vdEBteV90cm14Ym94ggEAMAwG
A1UdEwQFMAMBAf8wDQYJKoZIhvcNAQEEBQADgYEANdtuygpPobd7ICWnlor+UEJ5
3Tei51HDN2oKp6SaF3uQCUJUMMJwB9/i/rVa/c8010qf06/MMCU6/VWS9uZspBvm
IJWaFpU8+VcbGH63KA61FSqKHSN+8ZR10E58FgmHzEXwJr4P4Hb59FrpkUwjDRF
86UP/ZyBYhh7EWtiJhA=
-----END CERTIFICATE-----
  
```

The following lines must be added to the phone configuration files ('aastra.cfg' or 'MAC.cfg') in order to use HTTPS for XML requests.

https user certificates: mycertificate.pem

5.3.2 Configuration

Using configuration files

Parameter – https validate certificates	Configuration Files aastra.cfg, <mac>.cfg
Description	When this parameter is set to 1 the https client will perform validation on SSL certificates before they are accepted.
Format	Boolean (0=disabled, 1=enabled)
Default Value	1 (enabled)
Range	0 or 1
Example	https validate certificates : 1

Parameter – https validate expires	Configuration Files aastra.cfg, <mac>.cfg
Description	When this parameter is set to 1 the https client will verify that a certificate has not expired prior to accepting it.
Format	Boolean (0=disabled, 1=enabled)
Default Value	1 (enabled)

Range	0 or 1
Example	https validate expires : 1


Parameter – https validate hostname	Configuration Files aastr.cfg, <mac>.cfg
Description	When this parameter is set to 1 the https client will verify the commonName of a certificate matches the server it is connecting to prior to accepting the certificate
Format	Boolean (0=disabled, 1=enabled)
Default Value	1 (enabled)
Range	0 or 1
Example	https validate hostname : 1

Parameter – https user certificates	Configuration Files aastr.cfg, <mac>.cfg
Description	This parameter is a file name on the configuration server that contains user provided certificates in PEM format. These certificates will be used to validate peer certificates.
Format	String
Default Value	Empty
Range	N/A
Example	https user certificates : mycertificate.pem

Web UI configuration

The HTTPS parameters can also be configured using the WebUI.

1. Select Network.
2. Enter the parameters.
3. Click .

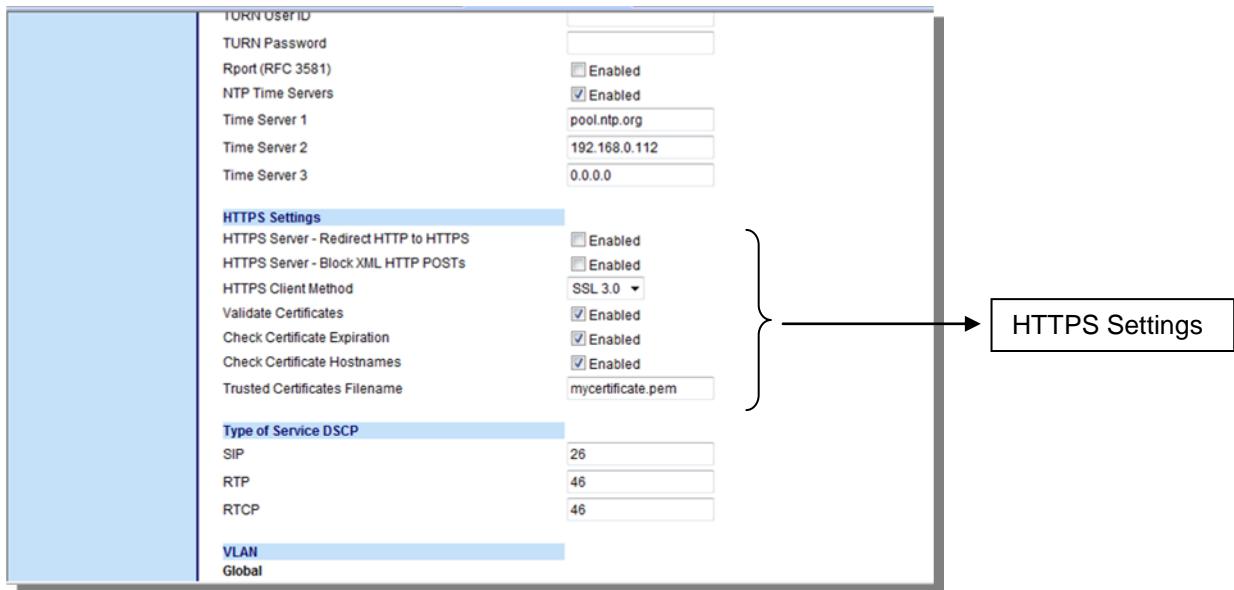

→ Note: Depending on the changes performed, you might have to reboot the phone to apply them.

5.4 XML Objects Pushed to the Phone

The phone can request an XML object via HTTP GET, or an object can be pushed to the phone via a POST. The phone parses this object immediately upon receipt and displays the information to the screen.

The HTTP POST packet must contain an “xml=” line in the message body. The string to parse is located after the equals sign in the message. HTML forms that post objects to the phone must use a field named “xml” to send their data. Any applications that construct HTTP packets on the fly must also specify this line.

→ Note: the content of the HTTP POST is not url-encoded.

Sample php source code

Below is a sample php source code that sends an XML object to an Aastra phone. In this example, the phone is located at 192.168.0.150 and the server pushing the XML object at 192.168.0.112.

```
<?php
#
function push2phone ($server,$phone,$data)
{
$xml = "xml=".$data;

$post = "POST / HTTP/1.1\r\n";
$post .= "Host: $phone\r\n";
$post .= "Referer: $server\r\n";
$post .= "Connection: Keep-Alive\r\n";
```

```

$post .= "Content-Type: text/xml\r\n";
$post .= "Content-Length: ".strlen($xml)."\r\n\r\n";

$fp = @fsockopen ( $phone, 80, $errno, $errstr, 5 );
if($fp)
{
    fputs($fp, $post.$xml);
    flush();
    fclose($fp);
}
}

#####
$xml = "<AastraIPPhoneTextScreen>\n";
$xml .= "<Title>Push test</Title>\n";
$xml .= "<Text>This is a test for pushing a screen to a phone. It
is a way to demonstrate that we can push XML objects to an Aastra
Phone.</Text>\n";
$xml .= "</AastraIPPhoneTextScreen>\n";
push2phone("192.168.0.112","192.168.0.150",$xml);
?>

```

Sample perl source code

Below is a sample perl source code that sends an XML object to an Aastra phone. In this example, the phone is located at 192.168.0.150.

```

#!c:/perl/bin/Perl.exe
# Create a user agent object
  use LWP::UserAgent;
  use LWP::ConnCache;
  use HTTP::Request::Common;
my $ua = LWP::UserAgent->new(agent => 'Mozilla/4.0 (compatible;
MSIE 5.5; Windows 98)');
$ua->conn_cache(LWP::ConnCache->new());
$ua->request(
  POST 'http://192.168.0.150'
    ,Content_Type => 'application/x-www-form-urlencoded'
    ,Content      => 'xml=<AastraIPPhoneTextScreen><Title>Push
test</Title><Text>This is a test for pushing a screen to a phone.
It is a way to demonstrate that we can push XML objects to an
Aastra Phone.</Text></AastraIPPhoneTextScreen>');

```

Notes:



- To accept a pushed page the “XML Push Server List” phone parameter must be configured with the list of the HTTP servers allowed pushing a page.
- When a page is pushed to the phone the MWI lamp blinks to indicate a new message to the phone.

When a XML object is pushed to the phone, the phone acts like a Web server listening to TCP port 80, which means that if the phone is behind a NAT and the server on the other side of the NAT, which is a typical configuration for a remote user, the port 80 must be forwarded to the IP phone at the router level.

6 Action URIs

Configuration parameters have been introduced to configure the phone to make an HTTP GET based on events, these events are:

- End of the boot sequence action uri startup
- Successful registration action uri registered
- On-hook action uri onhook
- Off-hook action uri offhook
- Incoming call action uri incoming
- Outgoing call action uri outgoing
- Time based action uri poll
- SIP Notify action uri xml sip notify
- Connect action uri connected
- Disconnect action uri disconnected
- Registration event action uri registration event

6.1 Configuration

A URI can be configured for each type of events; the configuration can be made using:

- The configuration files (aastra.cfg and/or MAC.cfg)
- The Web UI.

See chapter 7.4 for more details on the Web UI Configuration.

Configuration description

These URIs will be configurable via the configuration files using the following parameters.

```

action uri startup: <URI to GET on startup>
action uri registered: <URI to GET on successful registration>
action uri incoming: <URI to GET on an incoming call>
action uri outgoing: <URI to GET on outgoing call>
action uri offhook: <URI to GET on an off-hook event>
action uri onhook: <URI to get on an on-hook event>
action uri connected: <URI to get on a connect event>
action uri disconnected: <URI to get on a disconnect event>
action uri poll: <URI to get when configured timer expires>
action uri poll interval: <polling interval in seconds for action uri poll>
action uri registration event: <URI to GET on any registration event>
action uri xml sip notify: <URI to get when a aastra-xml SIP notify without content is received by the phone>
sip xml notify event: <Enables or disables the phone to accept an Aastra-xml SIP Notify event>

```

As described in chapter 5.2 the action URI support variables in their configuration.

Example

```
action uri startup: http://myserver.com/startup.php
action uri incoming:
http://myserver.com/incoming.php?number=##REMOTENUMBER##
sip xml notify event: 1
action uri xml sip notify: http://myserver.com/notify.php
```

6.2 Action uri detailed behavior

Action uris are available on all the lines and line appearance of the phone so passing the system variables `$$SIPUSERNAME$$` or `$$SIPAUTHNAME$$` and `$$PROXYURL$$` or `$$ACTIVEPROXY$$` will define which line has triggered the action uri.

Notes:



- The action uri GET requests are non blocking.
 - If the GET request triggered by an action uri fails, the phone does not display any error message.
-

6.2.1 Action uri offhook

The offhook uri is triggered only when the user performs one of the following actions:

- Release the handset
- Press a line key
- Press the Speaker/Headset key

This means that the offhook uri is not triggered when the user presses a speeddial key even if the phone goes off-hook and dials a number. Also if the user directly dials a number and press the “dial” key the action uri is not triggered (but the outgoing uri is)

6.2.2 Action uri onhook

The *action uri onhook* is triggered at the end of any active call:

- The user presses the ‘**Goodbye**’ key
- The user hangs up the handset after a connected call
- The user drops an established call pressing the “drop” softkey
- After a completed transfer (blind or monitored)
- The other party hangs up.



Note: The *onhook* event is a subset of the *disconnect* event, you should avoid to configure both action uri as most of the time they will both be called at the same time.

6.2.3 Action uri incoming

The *action uri incoming* is triggered each time there is an incoming call presented to the phone and processed to make the phone ring. If the incoming call includes an auto-answer info message (intercom mode), the action uri incoming is triggered as well.



Note: the action uri incoming is not triggered if the phone is call forwarded or is in DND mode or if call waiting is disabled (and the phone in a non idle mode).

6.2.4 Action uri outgoing

The *action uri outgoing* is triggered each time an outgoing call is performed by the phone (SIP INVITE message sent).

-  **Note:** the action uri outgoing is also triggered when the user makes a second call to perform a transfer or a conference.

6.2.5 Action uri connected

The *action uri connected* is triggered each time the phone transitions to a connected state. This includes regular phone calls but also Intercom, Paging, RTP streaming or Play Wav.

Notes:

- The action uri connected is also triggered when the second leg of a 3-way conference is established.
-  • During SLA calls, the phone uses the Action URI Connected parameter when the line is seized before the caller dials out
- SCA and BLA calls on hold trigger the action uri connected, since the retrieval is a second call performed by the phone and the phone cannot link the retrieved call with the earlier held call.

6.2.6 Action uri disconnected

The *action uri disconnected* is triggered when the phone transitions from any active (non idle) call state to idle. This includes regular calls but also Intercom, Paging, RTP streaming or Play Wav.

The difference between action uri disconnected and action uri onhook is that the disconnect event is generated even when the call fails or if a call is not answered.

The action uri disconnect is triggered every time the phone comes back to the idle state where the action uri onhook is triggered only when the phone was on an active call.

The \$\$LINESTATE\$\$ variable provides more information on the reason of the disconnect event.

LINESTATE VALUE	Meaning	Disconnected uri
IDLE	The phone is idle	N/A
DIALING	The phone is offhook and ready to dial	N/A
CALLING	A SIP INVITE has been sent but no response has been received.	An error occurred during the call.
OUTGOING	Remote party is ringing.	The call was canceled.
INCOMING	Local phone is ringing.	The call was missed or canceled.
CONNECTED	The parties are talking.	Call was successful
CLEARING	Call has been released but not acknowledged.	N/A

-  **Note:** the action uri disconnected is not triggered if the phone is call forwarded or is in DND mode or if call waiting is disabled (and the phone in a non idle mode).

6.2.7 Action uri startup

The *action uri startup* is triggered at the end of the phone boot sequence.

6.2.8 Action uri registered

The *action uri registered* is triggered the first time the phone registers successfully a line to its SIP proxy/registrar.

If the phone has multiple SIP registration, the action uri registered is triggered for each line.

6.2.9 Action uri registration event

The *action uri registration* event is triggered every time there is a registration state change, the registration states are:

- Registered
- Unregistered
- Registration timed out
- Registration refused
- Registration expired

The action uri registration event is not triggered when the same event is repeated.

Two URI variables have also been added to complement this feature

- \$\$REGISTRATIONSTATE\$\$
- \$\$REGISTRATIONCODE\$\$

See chapter 5.2 for more details on these variables.

6.2.10 Action uri poll

The *action uri poll* is called each time the configured timer (*action uri poll interval* parameter) expires.

The first timer starts at the end of the phone boot sequence.

6.2.11 Action uri xml sip notify

The *action uri xml sip notify* is triggered when the phone receives an authorized SIP Notify aastraxml event with an empty content. The XML call is triggered only if the *sip xml notify* event parameter is set to 1 (enabled). See chapter 6.2.11 for more details on the configuration.

- If a XML content is provided in the SIP NOTIFY, it is processed directly by the phone as it is done for a XML PUSH
- If the content is empty in the SIP NOTIFY, the phone automatically triggers a new pre-configured action uri (**action uri xml sip notify**).

Example of a SIP NOTIFY with XML content

```

NOTIFY sip:200@10.30.100.103:5060 SIP/2.0
Via: SIP/2.0/UDP 10.30.100.103:5060;branch=z9hG4bK7bbc1fac;rport
From: <sip:201@10.30.100.103:5060>;tag=81be2861f3
To: Jacky200 <sip:200@10.30.100.103:5060>
Contact: <sip:201@10.30.100.103>
Call-ID: 59638f5d95c9d301
CSeq: 4 NOTIFY
  
```

```
Max-Forwards: 70
Event: aastraxml
Content-Type: application/xml
Content-Length: 115
<AastraIPPhoneExecute><ExecuteItem
URI="http://10.30.100.39/XMLtests/SampleTextScreen.xml"/></AastraIPPhoneExecute>
```

When the phone receives the SIP NOTIFY, the XML content is processed as any XML object; in this example, the phone will call <http://10.30.100.39/XMLtests/SampleTextScreen.xml> after reception of the SIP NOTIFY.

 **Note:** The phone supports all the current XML objects with all the existing limitations. For example if an AastraIPPhoneExecute is used, the embedded uri(s) cannot be HTTPS based.

Example of a SIP NOTIFY without XML content

```
NOTIFY sip:200@10.30.100.103:5060 SIP/2.0
Via: SIP/2.0/UDP 10.30.100.103:5060;branch=z9hG4bK7bbc1fac;rport
From: <sip:201@10.30.100.103:5060>;tag=81be2861f3
To: Jacky200 <sip:200@10.30.100.103:5060>
Contact: <sip:201@10.30.100.103>
Call-ID: 59638f5d95c9d301
CSeq: 4 NOTIFY
Max-Forwards: 70
Event: aastraxml
Content-Type: application/xml
Content-Length: 0
```

When the phone receives the SIP NOTIFY, it will trigger the action uri xml sip notify if it has been previously configured using the configuration files or the phone Web UI. If the action uri xml sip notify is not enabled, the phone does not do anything.

 **Note:** To ensure that the SIP NOTIFY is coming from a **trusted source**, it is recommended that you enable the Whitelist feature (Whitelist Proxy parameter) on the IP phone. If enabled, and the phone receives a SIP NOTIFY from a server that is NOT on the whitelist, the phone will reject the message.

Asterisk implementation

Asterisk custom SIP Notify messages are configured in 'sip_notify.conf' file in the asterisk root directory, usually '/etc/asterisk/'.

Asterisk does not support custom SIP Notify with XML content. The only way to use the SIP Notify event with Asterisk is to use the Aastra-xml event triggerint the action uri xml sip notify.

To do so, the following lines must be added in /etc/asterisk/sip_notify.conf'

```
; Aastra XML event
[aastra-xml]
Event=>aastra-xml
Content-Length=>0
```

Then you must restart Asterisk to have the new SIP Notify parsed by Asterisk.

To use it, just send a SIP Notify aastraxml event to an Aastra SIP phone registered to the platform using either the asterisk CLI or the AGI.

```
sip notify aastra-xml 200 201...
```

Where 200, 201... are the SIP peers for the Aastra SIP phones.

This will trigger the action uri xml sip notify if it has been enabled and properly configured.

6.3 “Answer” and “Ignore” keys for action uri incoming

When a UI XML object is displayed as an answer to an action uri incoming, the regular contextual keys (“Answer” and “Ignore”) are not displayed as the display is managed by the XML object, the user can only take the call by pressing the blinking line key or go off-hook.

To keep a consistent behavior of the phone after an action uri incoming, the “allowAnswer” tag allows the native interactive keys “Answer” and “Ignore” to be displayed and allow the user to answer the call.

Once the call is answered or ignored, the 2 keys disappear automatically.

6.4 “Drop”, “Xfer” and “Conf” keys for XML apps in connected state

When a UI XML object is displayed as with the phone in a connected state, the regular contextual keys (“Drop”, “Xfer” and “Conf”) are overridden by the XML object, the user cannot access anymore to these telephony features.

To keep a consistent behavior of the phone when the phone is connected, 3 tags have been introduced:

- allowDrop
- allowXfer
- allowConf

When they are enabled the native interactive keys are displayed on top of the XML object.

Once the call is ended, the 3 keys disappear automatically.

6.5 Applications

Action URIs are very powerful as they allow an external application to take control of the display when an event occurs.

Here are some examples of potential applications.

Self-configuration

Using the startup URI, it is possible to develop self-provisioning on the phone. If a new phone boots and gets its configuration server IP address (through DHCP option 66 for example), it can download the `aastra.cfg` file with a startup URI set to an XML application, as it is a new phone the `<MAC>.cfg` config files does not exist. At the end of the boot, the phone will go to this XML application which can identify the phone and then generate the `<MAC>.cfg` file “on the fly” and ask the phone to reboot using the `PhoneExecute` object.

Screen pop

Using the action uri incoming, it is possible to display extra information on the phone for an incoming call. For instance, the XML application that is called when there is an incoming call can do a database lookup (Microsoft Exchange or any database) and display information on the caller. Basically it is like having a screen pop application directly on the phone.

Call Center

As for the Screen pop, the incoming URI can be used in a call center environment to display CRM or queue information on the caller. The on-hook URI can also be used to collect the wrap-up code at the end of a call.

And many more...

7 XML Configuration

After creating an XML application to use on the IP phone, the application can be accessed as a Service or a Key.

7.1 Configuring a Custom Service from the Web UI

The custom service is available only for 9480i/9480iCT/55i/57i/57i CT/6735i/6737i.

To load a new custom XML application to the IP phone, enter an HTTP address for the application at the “**Softkeys and XML**” screen in the Aastra IP Phone Web interface.

1. Select Operation=>Softkeys and XML.
2. Enter the HTTP address in the “**XML Application URL**” field.
3. If desired, give the XML application a custom title in the “**XML Application Title**” field.

The following illustration shows how to configure the access to an XML application:

- called “XML applications”
- which URI is located at “<http://65.205.71.13/xml/menu/mymenu.php>”.


After clicking  in the Softkeys Configuration screen, the XML application is dynamically applied to the IP phone you are configuring. The application URI can be accessed by pressing the “Services” button on your IP phone and selecting option 4.

XML Application URL XML Application Title	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="10" style="text-align: left;">Softkeys Configuration</th> </tr> <tr> <th colspan="2"></th> <th colspan="2">Bottom Keys</th> <th colspan="2">Top Keys</th> <th colspan="4"></th> </tr> <tr> <th>Key</th> <th>Type</th> <th>Label</th> <th>Value</th> <th>Line</th> <th>Idle</th> <th>Connected</th> <th>Incoming</th> <th>Outgoing</th> <th>Busy</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>XML</td> <td>Directory</td> <td>http://192.168.0.112/x</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>2</td> <td>XML</td> <td>Speed Dial</td> <td>http://192.168.0.112/x</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>3</td> <td>XML</td> <td>Registry</td> <td>http://65.205.71.13/xn</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>4</td> <td>XML</td> <td>XMLEnv</td> <td>http://65.205.71.13/xn</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>5</td> <td>XML</td> <td>Tricaster</td> <td>http://192.168.0.112/x</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>6</td> <td>XML</td> <td>Sample</td> <td>http://192.168.0.112/x</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>7</td> <td>XML</td> <td>SampleGD</td> <td>http://192.168.0.112/x</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>8</td> <td>XML</td> <td>Yankee</td> <td>http://192.168.0.112/x</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>9</td> <td>Directed Call Pickup</td> <td>Pickup</td> <td>**</td> <td>4</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>10</td> <td>BLF</td> <td>202</td> <td>202</td> <td>4</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>11</td> <td>XML</td> <td>Busy Icon</td> <td>http://192.168.0.112/x</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>12</td> <td>XML</td> <td>GD</td> <td>http://192.168.0.112/x</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>13</td> <td>XML</td> <td>D1</td> <td>http://192.168.0.112/F</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>14</td> <td>XML</td> <td>D2</td> <td>http://192.168.0.112/F</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>15</td> <td>XML</td> <td>SP</td> <td>http://192.168.0.112/F</td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>16</td> <td>None</td> <td></td> <td></td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>17</td> <td>None</td> <td></td> <td></td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>18</td> <td>None</td> <td></td> <td></td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>19</td> <td>None</td> <td></td> <td></td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>20</td> <td>None</td> <td></td> <td></td> <td>1</td> <td><input type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> <td><input checked="" type="checkbox"/></td> </tr> </tbody> </table> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: left;">Services</th> </tr> </thead> <tbody> <tr> <td>XML Application URI:</td> <td><input type="text" value="http://65.205.71.13/xml/menu/mymenu.php?menu_s"/></td> </tr> <tr> <td>XML Application Title:</td> <td><input type="text" value="XML Applications"/></td> </tr> <tr> <td>BLF List URI:</td> <td><input type="text"/></td> </tr> <tr> <td colspan="2" style="text-align: center;"><input type="button" value="Save Settings"/></td> </tr> </tbody> </table>	Softkeys Configuration												Bottom Keys		Top Keys						Key	Type	Label	Value	Line	Idle	Connected	Incoming	Outgoing	Busy	1	XML	Directory	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	2	XML	Speed Dial	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	3	XML	Registry	http://65.205.71.13/xn	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	4	XML	XMLEnv	http://65.205.71.13/xn	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	5	XML	Tricaster	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	6	XML	Sample	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	7	XML	SampleGD	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	8	XML	Yankee	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9	Directed Call Pickup	Pickup	**	4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	10	BLF	202	202	4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	11	XML	Busy Icon	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	12	XML	GD	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	13	XML	D1	http://192.168.0.112/F	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	14	XML	D2	http://192.168.0.112/F	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	15	XML	SP	http://192.168.0.112/F	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	16	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	17	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	18	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	19	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	20	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Services		XML Application URI:	<input type="text" value="http://65.205.71.13/xml/menu/mymenu.php?menu_s"/>	XML Application Title:	<input type="text" value="XML Applications"/>	BLF List URI:	<input type="text"/>	<input type="button" value="Save Settings"/>	
Softkeys Configuration																																																																																																																																																																																																																																																	
		Bottom Keys		Top Keys																																																																																																																																																																																																																																													
Key	Type	Label	Value	Line	Idle	Connected	Incoming	Outgoing	Busy																																																																																																																																																																																																																																								
1	XML	Directory	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
2	XML	Speed Dial	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
3	XML	Registry	http://65.205.71.13/xn	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
4	XML	XMLEnv	http://65.205.71.13/xn	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
5	XML	Tricaster	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
6	XML	Sample	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
7	XML	SampleGD	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
8	XML	Yankee	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
9	Directed Call Pickup	Pickup	**	4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
10	BLF	202	202	4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
11	XML	Busy Icon	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
12	XML	GD	http://192.168.0.112/x	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
13	XML	D1	http://192.168.0.112/F	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
14	XML	D2	http://192.168.0.112/F	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
15	XML	SP	http://192.168.0.112/F	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
16	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
17	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
18	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
19	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
20	None			1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																																																																																																																																																																																								
Services																																																																																																																																																																																																																																																	
XML Application URI:	<input type="text" value="http://65.205.71.13/xml/menu/mymenu.php?menu_s"/>																																																																																																																																																																																																																																																
XML Application Title:	<input type="text" value="XML Applications"/>																																																																																																																																																																																																																																																
BLF List URI:	<input type="text"/>																																																																																																																																																																																																																																																
<input type="button" value="Save Settings"/>																																																																																																																																																																																																																																																	

7.2 Configuring a Soft or Programmable Key using the phone Web UI

In addition to linking an XML application to a custom service, an application can be also be linked to a softkey and/or a programmable key depending on the phone and on the phone configuration (expansion modules).

1. Select “Operation” => “Softkeys and XML” (9480i, 9480iCT, 55i, 57i, 57iCT, 6735i, 6737i)
Or
Select “Operation” => “Programmable Keys” (9143i, 6753i, 55i, 6735i)
Or
Select “Operation” => “Expansion Module X” (6753i, 55i, 57i, 57i CT, 6735i, 6737i with expansion module(s))
2. Choose type “XML” for the desired key.
3. Enter the URI in the value field.
4. Click .

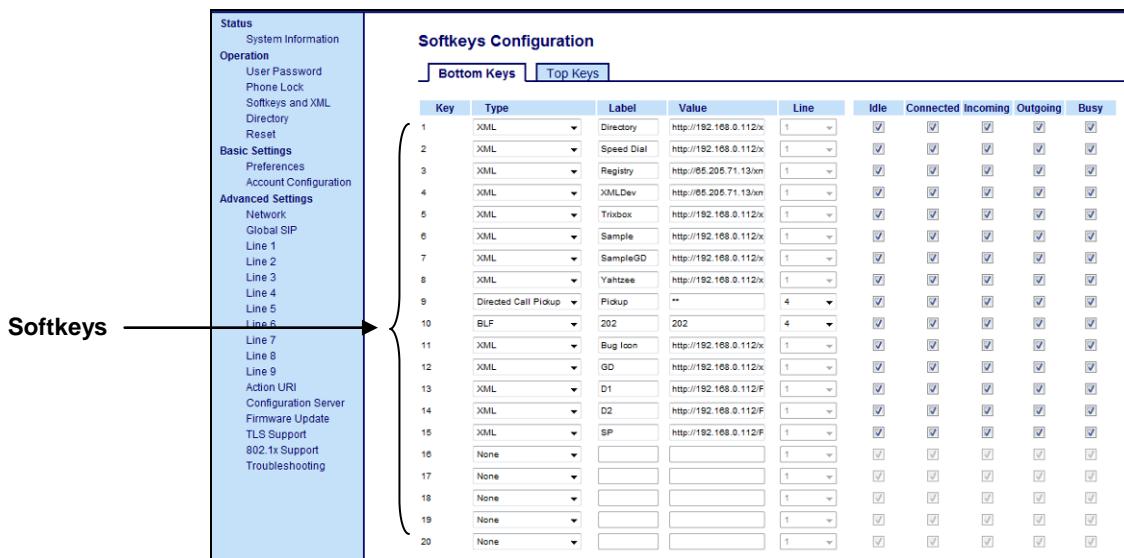

Key	Type	Label	Value	Line	Idle	Connected	Incoming	Outgoing	Busy
1	XML	Directory	http://192.168.0.112/x	1	<input checked="" type="checkbox"/>				
2	XML	Speed Dial	http://192.168.0.112/x	1	<input checked="" type="checkbox"/>				
3	XML	Registry	http://65.205.71.130/x	1	<input checked="" type="checkbox"/>				
4	XML	XMLDev	http://65.205.71.130/x	1	<input checked="" type="checkbox"/>				
5	XML	Trixbox	http://192.168.0.112/x	1	<input checked="" type="checkbox"/>				
6	XML	Sample	http://192.168.0.112/x	1	<input checked="" type="checkbox"/>				
7	XML	SampleGD	http://192.168.0.112/x	1	<input checked="" type="checkbox"/>				
8	XML	Yahtzee	http://192.168.0.112/x	1	<input checked="" type="checkbox"/>				
9	Directed Cell Pickup	Pickup	--	4	<input checked="" type="checkbox"/>				
10	BLF	202	202	4	<input checked="" type="checkbox"/>				
11	XML	Bug Icon	http://192.168.0.112/x	1	<input checked="" type="checkbox"/>				
12	XML	GD	http://192.168.0.112/x	1	<input checked="" type="checkbox"/>				
13	XML	D1	http://192.168.0.112/F	1	<input checked="" type="checkbox"/>				
14	XML	D2	http://192.168.0.112/F	1	<input checked="" type="checkbox"/>				
15	XML	SP	http://192.168.0.112/F	1	<input checked="" type="checkbox"/>				
16	None			1	<input checked="" type="checkbox"/>				
17	None			1	<input checked="" type="checkbox"/>				
18	None			1	<input checked="" type="checkbox"/>				
19	None			1	<input checked="" type="checkbox"/>				
20	None			1	<input checked="" type="checkbox"/>				



Note: Reboot is not required.

7.3 Configuring the XML Push Server List using the phone Web UI

The IP phone will only accept HTTP POSTs from the IP addresses set in the **XML Push Server List**.

4. Select Advanced Settings=>Configuration Server.
5. Enter a comma-separated list of IP addresses or domain names in the **XML Push Server List** field.
6. Click  and reboot the phone.

XML Push Server List	Configuration Server Settings <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">Settings</td> </tr> <tr> <td>Download Protocol</td> <td>TFTP</td> </tr> <tr> <td>TFTP Server</td> <td>192.168.0.112</td> </tr> <tr> <td>TFTP Path</td> <td></td> </tr> <tr> <td>Alternate TFTP</td> <td>0.0.0.0</td> </tr> <tr> <td>Alternate TFTP Path</td> <td></td> </tr> <tr> <td>Use Alternate TFTP</td> <td><input checked="" type="checkbox"/> Enabled</td> </tr> <tr> <td>FTP Server</td> <td></td> </tr> <tr> <td>FTP Path</td> <td></td> </tr> <tr> <td>FTP Username</td> <td></td> </tr> <tr> <td>FTP Password</td> <td></td> </tr> <tr> <td>HTTP Server</td> <td></td> </tr> <tr> <td>HTTP Path</td> <td></td> </tr> <tr> <td>HTTP Port</td> <td>80</td> </tr> <tr> <td>HTTPS Server</td> <td></td> </tr> <tr> <td>HTTPS Path</td> <td></td> </tr> <tr> <td>HTTPS Port</td> <td>443</td> </tr> <tr> <td colspan="2">Auto-Resync</td> </tr> <tr> <td>Mode</td> <td>None</td> </tr> <tr> <td>Time (24-hour)</td> <td>00:00</td> </tr> <tr> <td colspan="2">XML Push Server List(Approved IP Addresses)</td> </tr> <tr> <td colspan="2">192.168.0.112</td> </tr> <tr> <td colspan="2" style="text-align: center;">Save Settings</td> </tr> </table>	Settings		Download Protocol	TFTP	TFTP Server	192.168.0.112	TFTP Path		Alternate TFTP	0.0.0.0	Alternate TFTP Path		Use Alternate TFTP	<input checked="" type="checkbox"/> Enabled	FTP Server		FTP Path		FTP Username		FTP Password		HTTP Server		HTTP Path		HTTP Port	80	HTTPS Server		HTTPS Path		HTTPS Port	443	Auto-Resync		Mode	None	Time (24-hour)	00:00	XML Push Server List(Approved IP Addresses)		192.168.0.112		Save Settings	
Settings																																															
Download Protocol	TFTP																																														
TFTP Server	192.168.0.112																																														
TFTP Path																																															
Alternate TFTP	0.0.0.0																																														
Alternate TFTP Path																																															
Use Alternate TFTP	<input checked="" type="checkbox"/> Enabled																																														
FTP Server																																															
FTP Path																																															
FTP Username																																															
FTP Password																																															
HTTP Server																																															
HTTP Path																																															
HTTP Port	80																																														
HTTPS Server																																															
HTTPS Path																																															
HTTPS Port	443																																														
Auto-Resync																																															
Mode	None																																														
Time (24-hour)	00:00																																														
XML Push Server List(Approved IP Addresses)																																															
192.168.0.112																																															
Save Settings																																															

7.4 Configuring the Action URIs using the phone Web UI

You can configure the URI to be called for each type of event supported by the phone from the Web UI...


1. Select Advanced Settings=>Action URI.
2. Enter the URI for each type of event.
3. Click **Save Settings**.


Action URI Configuration	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Event</th> <th>Settings</th> </tr> </thead> <tbody> <tr> <td>StartUp</td> <td>http://192.168.0.133:80/aastral/asterisk/sync.php?ac</td> </tr> <tr> <td>Successful Registration</td> <td>http://192.168.0.133:80/aastral/asterisk/incoming.php</td> </tr> <tr> <td>Registration Event</td> <td>http://192.168.0.133:80/aastral/asterisk/outgoing.php</td> </tr> <tr> <td>Incoming Call</td> <td>http://192.168.0.133:80/aastral/asterisk/onhook.php?</td> </tr> <tr> <td>Outgoing Call</td> <td></td> </tr> <tr> <td>Offhook</td> <td></td> </tr> <tr> <td>Onhook</td> <td></td> </tr> <tr> <td>Connected</td> <td></td> </tr> <tr> <td>Disconnected</td> <td></td> </tr> <tr> <td>XML SIP Notify</td> <td>http://192.168.0.133:80/aastral/asterisk/sync.php?ac</td> </tr> <tr> <td>Poll</td> <td>http://192.168.0.133:80/aastral/asterisk/sync.php?ac-interval 1800</td> </tr> </tbody> </table>	Event	Settings	StartUp	http://192.168.0.133:80/aastral/asterisk/sync.php?ac	Successful Registration	http://192.168.0.133:80/aastral/asterisk/incoming.php	Registration Event	http://192.168.0.133:80/aastral/asterisk/outgoing.php	Incoming Call	http://192.168.0.133:80/aastral/asterisk/onhook.php?	Outgoing Call		Offhook		Onhook		Connected		Disconnected		XML SIP Notify	http://192.168.0.133:80/aastral/asterisk/sync.php?ac	Poll	http://192.168.0.133:80/aastral/asterisk/sync.php?ac-interval 1800
Event	Settings																								
StartUp	http://192.168.0.133:80/aastral/asterisk/sync.php?ac																								
Successful Registration	http://192.168.0.133:80/aastral/asterisk/incoming.php																								
Registration Event	http://192.168.0.133:80/aastral/asterisk/outgoing.php																								
Incoming Call	http://192.168.0.133:80/aastral/asterisk/onhook.php?																								
Outgoing Call																									
Offhook																									
Onhook																									
Connected																									
Disconnected																									
XML SIP Notify	http://192.168.0.133:80/aastral/asterisk/sync.php?ac																								
Poll	http://192.168.0.133:80/aastral/asterisk/sync.php?ac-interval 1800																								

← **Action URIs**

7.5 Configuring the XML Beep Support using the phone Web UI

You can configure the **XML Beep Support** (enabled or disabled) from the Web UI. It impacts the behavior of the `AastraIPPhoneStatus` object regarding the phone notification.


1. Select Basic Settings=>Preferences.
2. Enable or disable the parameter.
3. Click .

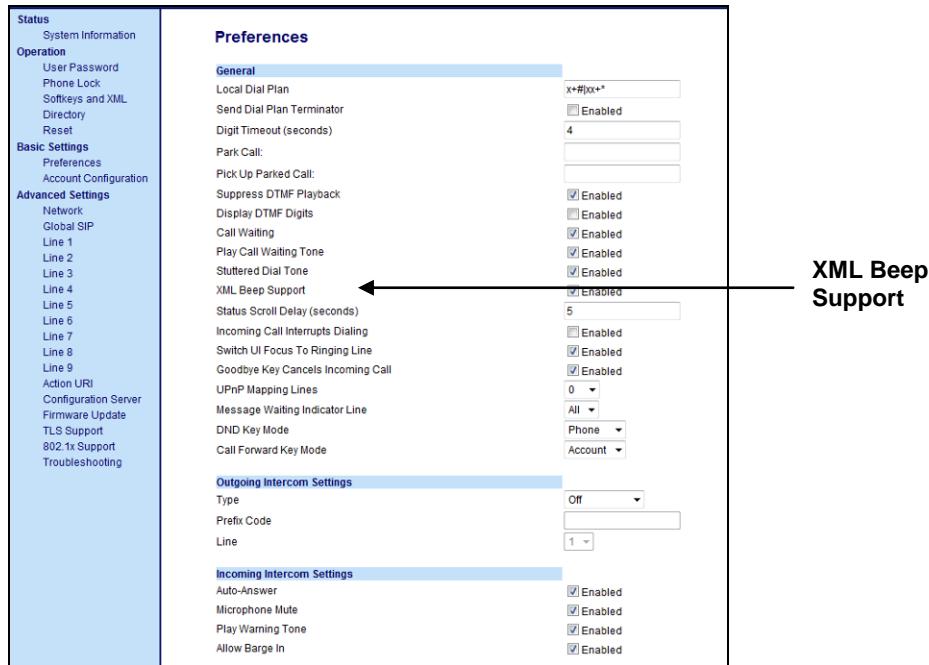

7.6 Configuring the Status Scroll Delay using the phone Web UI

You can configure the **Status Scroll Delay** (delay in seconds, default 5) from the Web UI. It impacts the behavior of the `AastraIPPhoneStatus` object defining the delay between each message.


1. Select Basic Settings=>Preferences.
2. Enter the value in seconds.
3. Click .

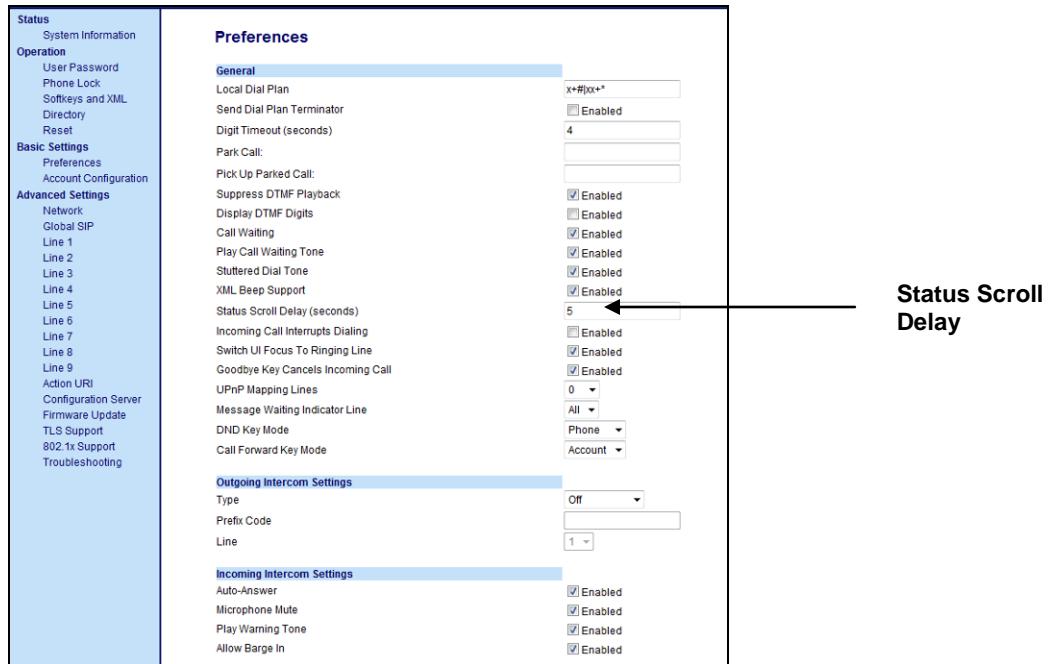

7.7 Configuring the XML SIP Notify using the phone Web UI

You can configure the **XML SIP Notify** from the Web UI. It will enable or disable SIP Notify aastraxml to be processed by the phone.

1. Select Advanced Settings=>Global SIP.
2. Enable or disable the parameter.
3. Click **Save Settings**.

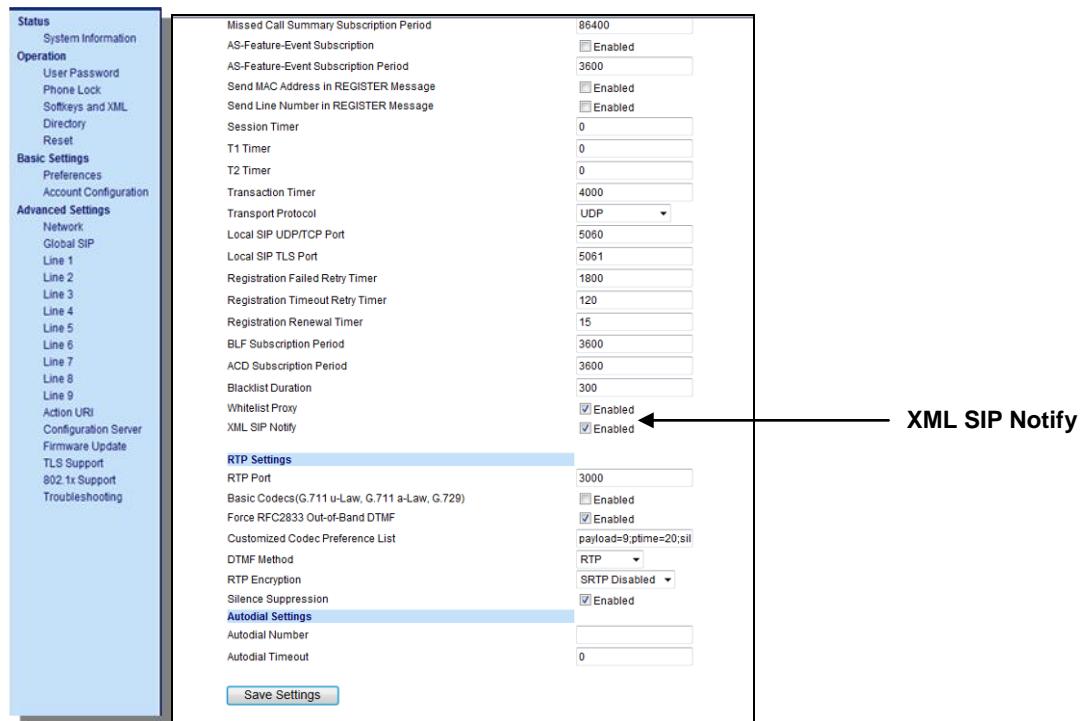

7.8 XML Configuration using the Configuration Files

The *aastr้า.cfg* and *<mac>.cfg* Configuration File contains all the configuration parameters for the phone. Please refer to the phone administration guide for more details.

7.8.1 General XML parameters

You can configure the XML applications in the *aastr้า.cfg* or *<mac>.cfg* file using the following parameters:

```

xml application URI1
xml application title1
xml application post list
xml beep notification
xml status scroll delay
xml get timeout
xml lock override
services script2
callers list script
directory script
redial script
xfer script
conf script
icom script
voicemail script
options script

```

¹ Not supported on Aastra53i and Aastra9143i

² Not supported on Aastra51i, Aastra53i and Aastra 9143i

auto offhook

Parameter – xml application URI	Configuration Files aastra.cfg, <mac>.cfg
Description	This is the XML application you are loading into the IP phone configuration.
Format	HTTP server path or fully qualified Domain Name
Default Value	Not Applicable
Range	Not Applicable
Example	xml application URI: http://172.16.96.63/aastra/internet.php

Parameter – xml application title	Configuration Files aastra.cfg, <mac>.cfg
Description	This parameter allows you to rename the XML application in the IP phone UI (Services->4. Custom Feature). By default, when you load an XML application to the IP phone, the XML application title is called "Custom Feature". The "xml application title" parameter allows you to change that title. For example, if you are loading a traffic report XML application, you could change this parameter title to "Traffic Reports", and that title will display in the IP phone UI as Services->4. Traffic Reports.
Format	Alphanumeric characters
Default Value	Not Applicable
Range	Not Applicable
Example	xml application title: Traffic Reports

Parameter – xml application post list	Configuration Files aastra.cfg, <mac>.cfg
Description	The HTTP server that is pushing XML applications to the IP phone.
Format	IP address in dotted decimal format and/or Domain name

	address
Default Value	Not Applicable
Range	Not Applicable
Example	xml application post list: 10.50.10.53, dhcp10-53.ana.aastra.com

Parameter – <code>xml beep notification</code>	Configuration Files aastra.cfg, <mac>.cfg
Description	Enables or disables a BEEP notification on the phone when an AastralPPhoneStatus object containing a “beep” attribute arrives to the phone.
Format	Boolean
Default Value	Value 1 (ON)
Range	0 (OFF) No beep is audible even if the beep attribute is present in the XML object. 1 (ON) The phone beeps when an XML object with the “beep” attribute arrives to the phone.
Example	<code>xml beep notification: 0</code>

Parameter – <code>xml status scroll delay</code>	Configuration Files aastra.cfg, <mac>.cfg
Description	Specifies the length of time, in seconds, that each XML status message displays on the phone.
Format	Integer
Default Value	5
Range	1 to 25
Example	<code>xml status scroll delay: 3</code>

Parameter – <code>xml get timeout</code>	Configuration Files aastra.cfg, <mac>.cfg
--	---

Description	Specifies the length of time, in seconds, that the phone will wait for a HTTP GET answer called by an XML.
Format	Integer
Default Value	0 (no timeout)
Range	0 to 4294967295
Example	xml get timeout: 10

Parameter – xml lock override	Configuration Files aastr้า.cfg, <mac>.cfg
Description	<p>Specifies the method to use for overriding a locked phone when XML applications are sent to the phone. There are three settings for this parameter:</p> <ul style="list-style-type: none"> 0 Phone prevents XML POSTs and XML GETs from being received or sent. 1 Phone allows XML POSTs; however, XML GETs by pressing the XML keys (softkeys/programmable keys/extension module keys) are not allowed. 2 Phone allows XML POSTs to the phone as well as XML GETs to/from the phone by pressing the XML keys (softkeys/programmable keys/extension module keys).
Format	Integer
Default Value	0
Range	0 to 2
Example	xml lock override: 1, xml lock override: 2

Parameter – services script	Configuration Files aastr้า.cfg, <mac>.cfg
Description	Specifies the XML URI to call when a “Services” key (prgkey or softkey) is pressed. The URI overrides native behavior of the “Services” key.
Format	HTTP server path or fully qualified Domain Name
Default Value	Not Applicable

Range	Not Applicable
Example	services script: http://172.16.96.63/services.php

Parameter – callers list script	Configuration Files aastr.cfg, <mac>.cfg
Description	Specifies the XML URI to call when a “Callers List” key (prgkey or softkey) is pressed. The URI overrides native behavior of the “Callers List” key.
Format	HTTP server path or fully qualified Domain Name
Default Value	Not Applicable
Range	Not Applicable
Example	callers list script: http://172.16.96.63/callers.php

Parameter – directory script	Configuration Files aastr.cfg, <mac>.cfg
Description	Specifies the XML URI to call when a “Directory” key (prgkey or softkey) is pressed. The URI overrides native behavior of the “Directory” key.
Format	HTTP server path or fully qualified Domain Name
Default Value	Not Applicable
Range	Not Applicable
Example	directory script: http://172.16.96.63/directory.php

Parameter – redial script	Configuration Files aastr.cfg, <mac>.cfg
Description	Specifies the XML URI to call when a “Redial” key (prgkey or softkey) is pressed. The URI overrides native behavior of the “Redial” key.
Format	HTTP server path or fully qualified Domain Name

Default Value	Not Applicable
Range	Not Applicable
Example	redial script: http://172.16.96.63/redial.php

Parameter – xfer script	Configuration Files aastr.cfg, <mac>.cfg
Description	Specifies the XML URI to call when a “Xfer” key (prgkey or softkey) is pressed. The URI overrides native behavior of the “Xfer” key.
Format	HTTP server path or fully qualified Domain Name
Default Value	Not Applicable
Range	Not Applicable
Example	xfer script: http://172.16.96.63/xfer.php

 **Note:** The Xfer key is redirected only in the “connected” and “dialing” states.

Parameter – conf script	Configuration Files aastr.cfg, <mac>.cfg
Description	Specifies the XML URI to call when a “Conference” key is pressed. The URI overrides native behavior of the “Conference” key.
Format	HTTP server path or fully qualified Domain Name
Default Value	Not Applicable
Range	Not Applicable
Example	conf script: http://172.16.96.63/conf.php

 **Note:** The Conference key is redirected only in the “connected” state.

Parameter – icom script	Configuration Files aastr้า.cfg, <mac>.cfg
Description	Specifies the XML URI to call when a “Icom” key (prgkey or softkey) is pressed. The URI overrides native behavior of the “Icom” key.
Format	HTTP server path or fully qualified Domain Name
Default Value	Not Applicable
Range	Not Applicable
Example	icom script: http://172.16.96.63/icom.php
<hr/>	
Parameter – voicemail script	Configuration Files aastr้า.cfg, <mac>.cfg
Description	Specifies the XML URI to call when a “Voicemail” key (prgkey or softkey) is pressed. The URI overrides native behavior of the “Voicemail” key.
Format	HTTP server path or fully qualified Domain Name
Default Value	Not Applicable
Range	Not Applicable
Example	voicemail script: http://172.16.96.63/vm.php
<hr/>	
Parameter – options script	Configuration Files aastr้า.cfg, <mac>.cfg
Description	<p>Specifies the XML URI to call when the “Options” key is pressed. The URI overrides native behavior of the “Options” key.</p> <ul style="list-style-type: none"> • On a normal key press of the “Options” key the XML application set in the URI is displayed • On a long key press the normal/local options menu is displayed
Format	HTTP server path or fully qualified Domain Name
Default Value	Not Applicable
Range	Not Applicable

Example	options script: http://172.16.96.63/opt.php
----------------	---

Notes:


- If no Options URI script is configured, the local Options Menu on the phone displays as normal.
 - If you configure password access to the Options Menu, this password is required when accessing the local Option Menu, but is not required for the Options Key redirection feature.
 - Pressing the Options Menu for redirection from the server does not interfere with normal operations of the phone (for example, pressing the options menu when on a call does not affect the call).
 - If the phone is locked, you must unlock the phone before accessing the Options Menu redirect feature. After pressing the Options Key, the phone displays a screen that allows you to unlock the phone before continuing.
-

Parameter – auto offhook	Configuration Files aastracfg, <mac>.cfg
Description	Specifies whether or not the phone is prevented from entering the off-hook/dialing state, if the handset is off-hook for more than 2 seconds, and the call ends.
Format	Boolean
Default Value	0 (disabled)
Range	0 (disabled) 1 (enabled)
Example	auto offhook: 1

7.8.2 Action uri parameters

These URIs will be configurable via the configuration files using the following parameters.

```

action uri startup: <URI to GET on startup>
action uri registered: <URI to GET on successful registration>
action uri registration event: <URI to GET on any registration event>
action uri incoming: <URI to GET on an incoming call>
action uri outgoing: <URI to GET on outgoing call>
action uri offhook: <URI to GET on an off-hook event>
action uri onhook: <URI to get on an on-hook event>
action uri poll: <URI to get when configured timer expires>
action uri poll interval: <polling interval in seconds for action uri poll>

```

```
action uri xml sip notify: <URI to get when a aastraxml SIP notify without content is received by the phone>
sip xml notify event: <Enables or disables the phone to accept an aastraxml SIP Notify event>
action uri connected: <URI to get on a connect event>
action uri disconnected: <URI to get on a disconnect event>
```

Parameter – <i>action uri startup</i>	Aastra Web UI: Configuration Files	Advanced Settings->Action URI aastra.cfg, <mac>.cfg
Description	URI to be called at the end of the boot sequence.	
Format	HTTP(s) server path or fully qualified Domain Name	
Default Value	Not applicable	
Range	Not applicable	
Example	<i>action uri startup: http://myserver.com/myappli.xml</i>	

Parameter – <i>action uri registered</i>	Aastra Web UI: Configuration Files	Advanced Settings->Action URI Aastra.cfg, <mac>.cfg
Description	URI to be called the first time the phone successfully registers.	
Format	HTTP(s) server path or fully qualified Domain Name	
Default Value	Not applicable	
Range	Not applicable	
Example	<i>action uri registered: http://myserver.com/myappli.xml</i>	

Parameter – <i>action uri registration event</i>	Aastra Web UI: Configuration Files	Advanced Settings->Action URI Aastra.cfg, <mac>.cfg
Description	URI to be called for every registration event.	
Format	HTTP(s) server path or fully qualified Domain Name	
Default Value	Not applicable	
Range	Not applicable	

Example	<i>action uri registration event: http://myserver.com/myappli.xml</i>
----------------	---

Parameter – <i>action uri incoming</i>	Aastra Web UI: Advanced Settings->Action URI Configuration Files Aastra.cfg, <mac>.cfg
Description	URI to be called every time the phone receives an incoming call.
Format	HTTP(s) server path or fully qualified Domain Name
Default Value	Not applicable
Range	Not applicable
Example	<i>action uri incoming: http://myserver.com/myappli.xml</i>

Parameter – <i>action uri outgoing</i>	Aastra Web UI: Advanced Settings->Action URI Configuration Files aastra.cfg, <mac>.cfg
Description	URI to be called every time the phone makes a valid outgoing call.
Format	HTTP(s) server path or fully qualified Domain Name
Default Value	Not applicable
Range	Not applicable
Example	<i>action uri outgoing: http://myserver.com/myappli.xml</i>

Parameter – <i>action uri offhook</i>	Aastra Web UI: Advanced Settings->Action URI Configuration Files aastra.cfg, <mac>.cfg
Description	URI to be called every time the phone goes offhook.
Format	HTTP(s) server path or fully qualified Domain Name
Default Value	Not applicable
Range	Not applicable
Example	<i>action uri offhook: http://myserver.com/myappli.xml</i>

Parameter – <i>action uri onhook</i>	Aastra Web UI: Configuration Files	Advanced Settings->Action URI aastra.cfg, <mac>.cfg
Description	URI to be called every time the phone goes back on hook after an active call.	
Format	HTTP(s) server path or fully qualified Domain Name	
Default Value	Not applicable	
Range	Not applicable	
Example	<i>action uri onhook: http://myserver.com/myappli.xml</i>	

Parameter – <i>action uri poll</i>	Aastra Web UI: Configuration Files	Advanced Settings->Action URI aastra.cfg, <mac>.cfg
Description	URI to be called every "action uri pool interval" seconds.	
Format	HTTP(s) server path or fully qualified Domain Name	
Default Value	Not applicable	
Range	Not applicable	
Example	<i>action uri poll: http://myserver.com/myappli.xml</i>	

Parameter – <i>action uri poll interval</i>	Aastra Web UI: Configuration Files	Advanced Settings->Action URI Aastra.cfg, <mac>.cfg
Description	Specifies the interval, in seconds, between calls from the phone to the "action uri poll".	
Format	Integer	
Default Value	0 (disabled)	
Range	Not applicable	
Example	<i>action uri poll interval:60</i>	

Parameter – <i>action uri xml sip notify</i>	Aastra Web UI: Configuration Files	Advanced Settings->Action URI Aastra.cfg, <mac>.cfg
Description	URI to be called when an empty XML SIP NOTIFY is received by the phone (sip xml notify event must be enabled).	

Format	HTTP(s) server path or fully qualified Domain Name
Default Value	Not applicable
Range	Not applicable
Example	<i>action uri xml sip notify: http://myserver.com/myappli.xml</i>

Parameter – <i>sip xml notify event</i>	Aastra Web UI: Advanced Settings->Global SIP-> Configuration Files Aastra.cfg, <mac>.cfg
Description	Enables or disables the phone to accept an aastraxml SIP NOTIFYmessage.
Format	Boolean
Default Value	0
Range	0 - disabled 1 – enabled
Example	<i>sip xml notify event:1</i>

Parameter – <i>action uri connected</i>	Aastra Web UI: Advanced Settings->Action URI Configuration Files aastraxml.cfg, <mac>.cfg
Description	URI to be called every time the phone goes to the connected state.
Format	HTTP(s) server path or fully qualified Domain Name
Default Value	Not applicable
Range	Not applicable
Example	<i>action uri connected: http://myserver.com/co.php</i>

Parameter – <i>action uri disconnected</i>	Aastra Web UI: Advanced Settings->Action URI Configuration Files aastraxml.cfg, <mac>.cfg
Description	URI to be called every time the phone goes back to the idle state.
Format	HTTP(s) server path or fully qualified Domain Name
Default Value	Not applicable

Range	Not applicable
Example	<i>action uri disconnected: http://myserver.com/di.php</i>

7.8.3 Programmable and Soft keys

You can configure keys calling an XML application using the following parameters.

```
softkeyX/prgkeyX/topsoftkeyX/expmodT keyX type: xml
softkeyX/prgkeyX/topsoftkeyX/expmodT keyX value: http://someapp.xml
```

As described in chapter 5.2, system variables can be used in the URI to be called by pressing a key.

7.8.4 Examples

Example (9143i/6753i/6730i/6731i)

```
# XML configuration
xml application URI: http://172.16.96.63/aastr/internet.php
xml application post list: 10.10.50.53, xmlserver.aastr.com
xml beep notification: 1
xml status scroll delay: 5

# Key 1
prgkey1 type: xml
prgkey1 value: http://172.16.96.63/aastr/internet.php

# Key 2
prgkey2 type: xml
prgkey2 value: http://myserver.com/login.php?user=$$SIPUSERNAME$$
```

Example (6735i/6737i/6739i/9480i/9480iCT/55i/57i/57i CT)

```
# XML configuration
xml beep notification: 1
xml status scroll delay: 5

# Softkey 1
softkey1 type: xml
softkey1 label: My XML
softkey1 value: http://172.16.96.63/aastr/internet.php

# Softkey 2
softkey2 type: xml
softkey2 label: Login
softkey2 value: http://myserver.com/login.php?user=$$SIPUSERNAME$$
```

8 Troubleshooting XML Applications

8.1 Introduction

The following figure shows the HTTP call flows when the phone is performing an XML operation.

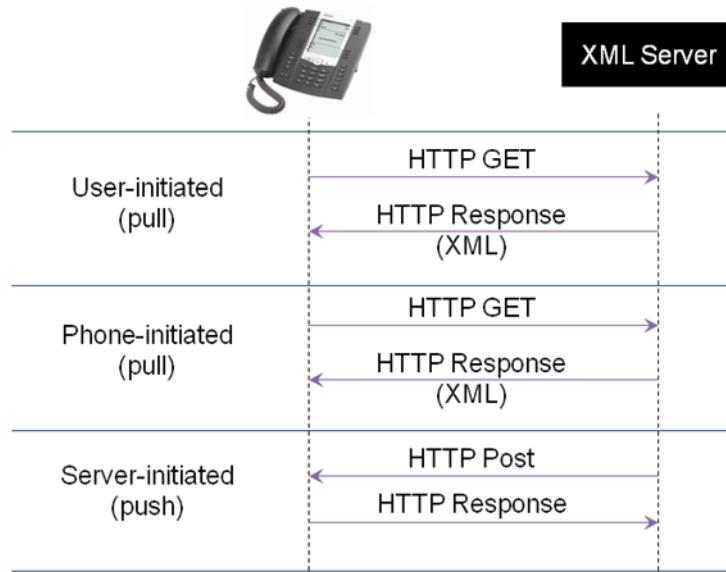


Figure 99: HTTP flow for XML applications

When the phone performs an HTTP GET there are many potential sources of error such as:

Server is not reachable	Answer
Network is down	Cannot display
Server is down	Cannot display
HTTP server application is down	Cannot display
URI can not be resolved (DNS issue)	Cannot display
Server is reachable	Answer
Wrong file name on the server	File not found
Parsing error of the XML answer	Cannot display
Timeout reached before getting an answer	Connect Timeout
URI can not be parsed (wrong format)	Invalid URI

Most of the time, an error will translate into a “Cannot display” which is not very helpful to find the origin of the problem as well as very frustrating for the XML developer.

The most common error is a XML parsing error and often the most difficult one to fix.

→ **Note:** Using the php classes provided in the toolkit is a good way to limit the number of parsing errors as the object are built following the XSD scheme.

When the server performs a PUSH to the phone, the common errors are:

- Nothing happens, most of the time the problem comes from a wrong configuration of the XML push list.
- “Cannot display”, if the XML object pushed to the phone creates a parsing error (object not properly formatted).

8.2 Troubleshooting tools

The following tools will help you troubleshoot problems with the XML services.


- Standard web browser (Microsoft Internet Explorer 6.0 or a later version)
 - Verify the connectivity
 - Verify the validity of the URI called by the phone
 - Verify if the XML answer has a correct syntax
- Network packet analyzer such as Wireshark
 - Verify what is exchanged between the phone and the server
- HTTP Server log
 - Verify if the HTTP GET reached the server
 - Verify the parameters of the HTTP GET
- XML validator tools
 - Verify the XML syntax and the compliance with the XSD model
- Phone log (syslog)
 - Verify how the phone processes a XML request


This last tool is the most powerful as it allows you to read phone internal traces and understand why something went wrong. It is the best way to debug a parsing error.

The phone can be configured to send internal traces to a Syslog server (such as Kiwi Syslog Daemon) either from the WebUI or from the configuration files.

8.3 Configuring the Syslog Server using the WebUI

You can configure the **Syslog server and activate the traces** from the Web UI.

1. Select Advanced Settings=>Troubleshooting.
2. Set Log IP (IP address of the Syslog server) and Log port (usually 514)
3. Set XML to 65535
4. Click 

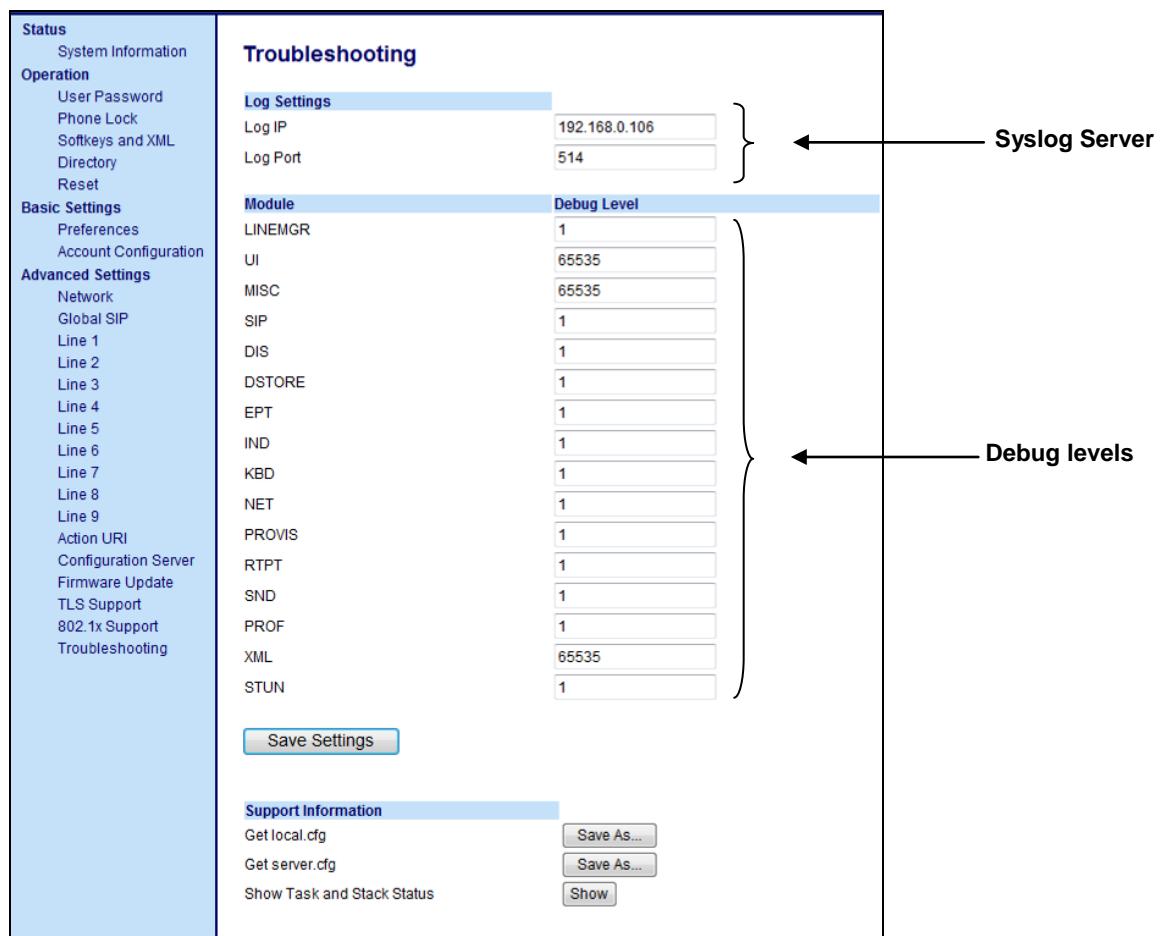

8.4 Configuring the Syslog server using the configuration files

The traces can also be activated from the configuration files (aastra.cfg and/or <MAC>.cfg), using the following parameters:

Syslog server

- log server ip IP address of the Syslog server
- log server port Port of the Syslog server

Traces level

- log module xml debug level for xml module

Example

```
# Syslog Server
log server ip: 192.168.0.106
log server port: 514

# Debug list
log module xml: 65535
```

8.5 Parsing error debug example

In this example, the phone is making an XML GET and receives the following XML object as an answer. The answer has an obvious parsing error, the phone displays 'Cannot display'.

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<AastraIPPhoneTextMenu>
  <Title>Graphic Apps Demo</Title>
  <MenuItem>
    <Prompt>Clock Digital GMT+1</Prompt>
    <URI>http://192.168.0.112/xml/lucaGD/demo.php?type=dclock</URI>
  </MenuItem>
  <MenuItem>
    <Prompt>Clock Analog GMT+1</Prompt>
    <URI>http://192.168.0.112/xml/lucaGD/demo.php?type=aclock</URI>
  </MenuItem>
  <MenuItem>
    <Prompt>Different Fonts</Prompt>
    <URI>http://192.168.0.112/xml/lucaGD/demo.php?type=font</URI>
  </MenuItem>
<AastraIPPhoneTextMenu>
```

The error is on the last line, it should be </AastraIPPhoneTextMenu>.

The following Syslog traces tell us where the problem is.

```
CreateApp: (UI) INFO: XML=|<?xml version="1.0" encoding="ISO-8859-1"?><010><AastraIPPhoneTextMenu><010><Title>Graphic Apps Demo</Title><010><MenuItem><010><Prompt>Clock Digital GMT+1</Prompt><010><URI>http://192.168.0.112/xml/lucaGD/demo.php?type=dclock</URI><010></MenuItem><010><MenuItem><010><Prompt>Clock Analog GMT+1</Prompt><010><URI>http://192.168.0.112/xml/lucaGD/demo.php?type=aclock</URI><010></MenuItem><010><MenuItem><010><Prompt>Different Fonts</Prompt><010><URI>http://192.168.0.112/xml/lucaGD/demo.php?type=font</URI><010></MenuItem><010><AastraIPPhoneTextMenu><010>|<010>mac:00-08-5D-1A-3C-54

ParserData: (XML) FUNC: ParserData ctor<010>mac:00-08-5D-1A-3C-54

TextMenuData: (XML) FUNC: TextMenuData ctor<010>mac:00-08-5D-1A-3C-54

startTagHandler: (XML) ERROR: Invalid tag: <AastraIPPhoneTextMenu> in the Root state<010>mac:00-08-5D-1A-3C-54

TextMenuData: (XML) FUNC: TextMenuData dtor<010>mac:00-08-5D-1A-3C-54

ParserData: (XML) FUNC: ParserData dtor<010>mac:00-08-5D-1A-3C-54

CreateApp: (UI) ERROR: !!!!!!!!!!!!!!! XML parsing error: no element found, Line 16, Column 23 !!!!!!!!!!!!!!!<010>mac:00-08-5D-1A-3C-54

ParserData: (XML) FUNC: ParserData ctor<010>mac:00-08-5D-1A-3C-54
```

9 Why XML Applications for an IP Phone?

XML applications can be split in 3 categories:

- Telephony applications, integration with the call processing, Voice Mail server, Conference server, Call Center application...
- Media and information
- Vertical applications

9.1 Telephony applications

This chapter details potential XML telephony applications which could be developed to enhance integration of an IP phone with the other telecom applications.

9.1.1 Directory

The first obvious applications that can be developed are the directory application, it includes:

- PBX directory
- Corporate directory (Global list from a Microsoft Exchange server)
- Personal contacts (My contacts in Outlook)
- Any LDAP directory (public or private)

9.1.2 Call Processing

XML applications can also be used to develop interactions between the call processing and the phone:

- DND
- Call Forward
- Parked calls
- Call pickup
- PBX configuration

9.1.3 Voice-Mail

- Voice mail messages management (play, skip, delete, ...)
- Display message envelopes
- Presence management

9.1.4 Conference Bridge

- Conference booking
- Conference reminder
- Audio console

9.1.5 Contact Center

- Agent Login/Logout

- Access to call center reports
- Account codes
- Wrap codes

9.2 Media and information

These are the applications getting information from the Web.

- Weather Alerts
- Stock Alerts
- Stock Prices
- Worldwide Time/Temperature
- Server Alarms and Notifications
- Server Status
- Account Balances
- Current Gas Prices
- Local Movie Times
- Upcoming Concerts-By Category
- Order Flowers-by Category
- Send Order to Starbucks
- Send SMS Messages
- Track FedEx Package (or Airborne, UPS, etc.)
- Calling Card Minutes Remaining
- Reserve Meeting Rooms
- Contact center Metrics (Calls Waiting, Longest Hold, Performance against Service Level, etc.)
- Pro Sports Scores, Vegas Betting Lines
- Multitude of Banking apps: Balances, Transfers, etc.
- Language Translation
- Daily Horoscope
- Broadcast Joke Of The Day/Inspirational Quote of the Day

9.3 Vertical applications

This chapter details potential vertical applications that can be developed as an XML application for the Aastra IP phones. The list is far from being exhaustive.

9.3.1 Human Resources

- Available Vacation Days
- Available Personal Days

- 401K balance
- Clock-In/Clock-Out

9.3.2 Travel/Hotel

- Current Balance
- In-Room Dining Ordering
- Delivery Dining Options
- Extend Stay
- Schedule Airport Shuttle
- Request Housekeeping/Engineering
- Leave Feedback
- Wake-Up Call
- Book Corporate Travel
- Do Not Disturb

9.3.3 Health Care

- Test Results
- Manage Appointment
- Appointment Reminders
- Take-Your-Medicine Reminders
- Order Hospital Meals
- Check Pharmacy Inventory
- Schedule Blood Donation

9.3.4 Education

- Attendance
- Request Substitute Teacher (used by primary teacher)
- Review Open Requests for Substitute Teacher (used by potential subs)
- Schedule Classes
- Request Dorm Room Change
- School Closing Notification/Status
- Parent Contact Info

9.3.5 Law Enforcement

- Amber Alerts
- Traffic Ticket Plead By Phone
- Fugitive Alerts

10 Phone Self-Configuration using XML

10.1 Introduction

The deployment of a SIP phone is not a simple task; you have to face 2 challenges:

1. Provide the address of the configuration server to the phone
2. Link the MAC address of the phone with a SIP extension

The first challenge is usually solved by using DHCP option 66 (bootp) to provision the phone with the IP address/name of the configuration server (TFTP, FTP, HTTP or HTTPS).

The second challenge is more difficult as you have to know the MAC address of the phone in advance in order to prepare the specific configuration file the phone will use. Usually, each phone is identified (scan of the MAC address) and then linked to an extension.

It is possible to have a complete self-configuration of the phone using an XML application called by the action uri startup at the end of the boot sequence.

10.2 Message flow

It is possible for a third-party to develop an automatic configuration process. The following is a description of how this can be done using existing phone features.

1. The aastra.cfg file sets the startup action uri configuration parameter to point to the configuration script and configuration download information.
2. Phone downloads the aastra.cfg file, ignores missing <MAC>.cfg file and continues boot process.
3. Phone executes startup uri, running the configuration script. The MAC address of the phone and the phone model are in the HTTP headers of the request.
4. The script uses XML to gather required configuration information and creates <mac>.cfg file. The <mac>.cfg file must reset the startup action uri to avoid the configuration script being called on subsequent boots.
5. The script reboots the phone via XML reboot command or via SIP check-sync message.
6. Phone reboots, directly downloads both aastra.cfg and newly created <MAC>.cfg file

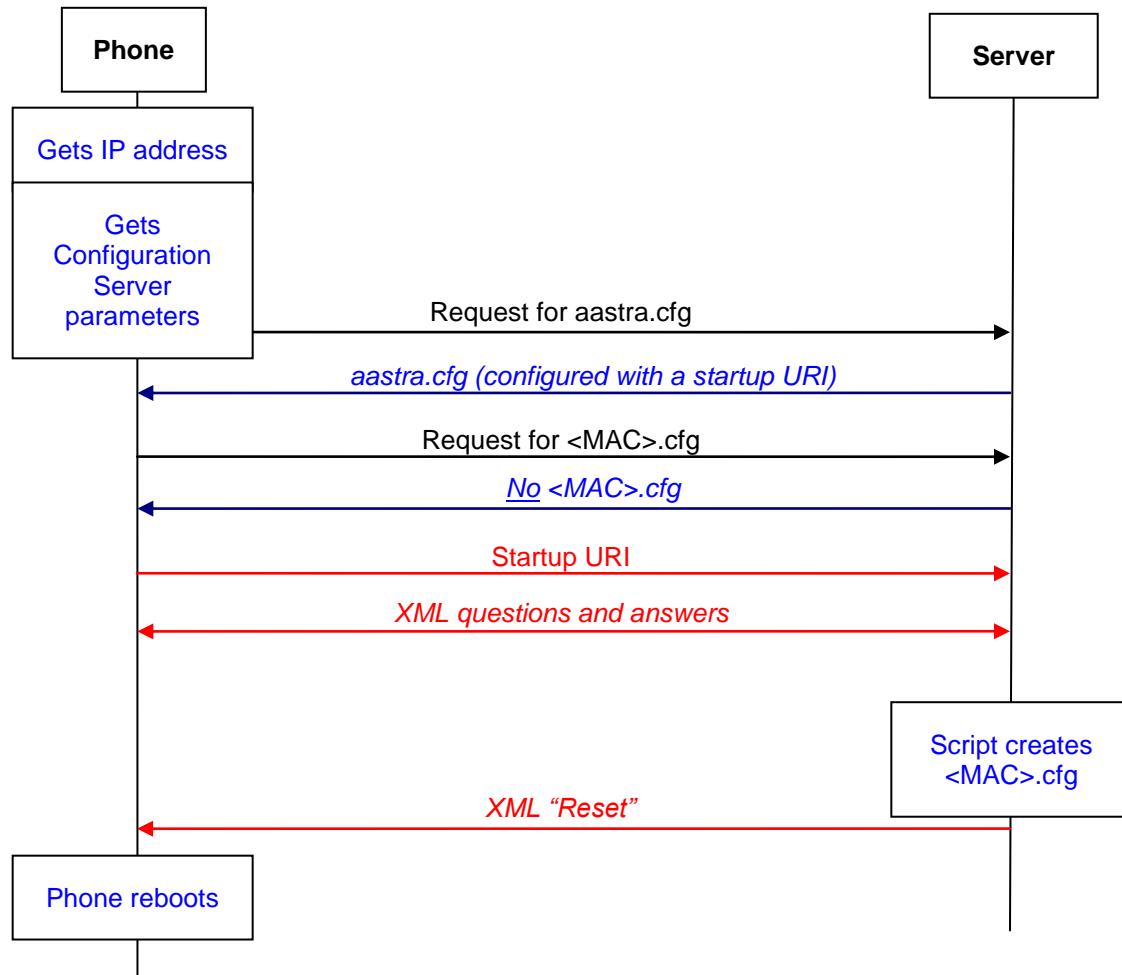


Figure 100: Auto-configuration message flow

10.3 Auto-configuration policy

The auto-configuration policy which includes the flow of questions asked to the user and the script to generate the <MAC>.cfg file is totally open with this mechanism.

Multiple options are available.

Extension is already provisioned in the IP-PBX database.

One way to implement this feature might be to have all the extensions already provisioned on the switch side and the XML flow will be used to identify the user (extension number and voicemail password for instance). The script must then control if the extension is not already assigned and create the <MAC>.cfg based on the extension(s) configuration.

Another way would be to display the list of available extensions and let the user select his extension; of course password protection is needed to avoid any hacking of the platform.

Extension is not provisioned in the IP-PBX database

A second option is to have the script to provision the extension in the database. To do so, the script can ask for user general parameters (name...) and automatically creates an extension in the switch

database and then creates the <MAC>.cfg, the extension number can be either automatically assigned or the user can select it in a list of available extensions.

10.4 Architecture

The following diagram represents the architecture of what needs to be developed to implement the Aastra self-configuration mechanism.

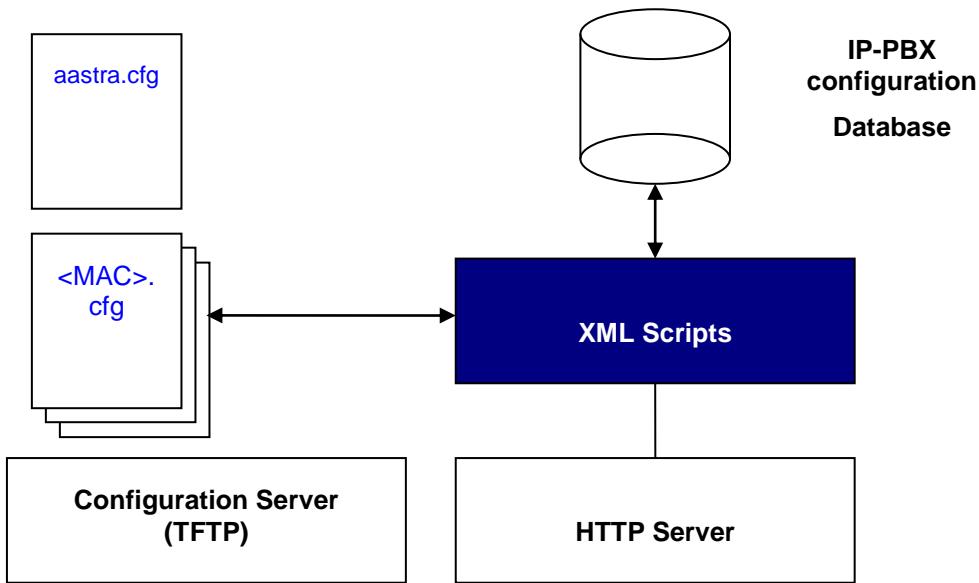


Figure 101: Self-configuration implementation architecture

The development effort to implement the self-configuration is fairly straight forward but the complexity depends on the policy to attribute extensions on the phone system.

11 Sample XML applications

Here is the list of XML applications provided by Aastra, these XML applications are available either through an Internet server hosted by Aastra or as source code (part of the Aastra XML API SDK) to be executed from a local PC running XAMPP for example.

- [Area code \(US\)](#)
- [Biorhythms](#)
- [CNN News](#)
- [Currency Converter](#)
- [ESPN News](#)
- [Fox News](#)
- [Horoscope](#)
- [IP Geolocation](#)
- [Local Weather \(US\)](#)
- [Movies](#)
- [Netflix](#)
- [Stock](#)
- [Today...](#)
- [World Clock](#)
- [Yahtzee](#)
- [All the above](#)

11.1 Access from the Internet

Aastra has made available, **for demonstration purpose only**, a list of XML applications on the Internet.

Notes:

-
- Aastra does not guarantee the availability of these applications. The applications can change at any time without notice.
 - These applications should not be used commercially; any abusive use of these applications will be detected and the phone will be automatically banned from the applications.
 - your Aastra SIP phone must have Internet access to use these applications.
-

The XML applications can be configured individually on a phone key or as a global menu.

11.2 Local server using XAMPP

XAMPP is a free, cross-platform, easy-to-use web server capable of serving dynamic pages. XAMPP consists mainly of the Apache HTTP Server, MySQL database and interpreters for scripts written in the PHP and Perl programming languages. The program is released under the GNU General Public License.



Notes: your server must have Internet access to use these applications.

XAMPP is an acronym for:

- **X** (any of the four operating systems Windows, Linux, Sun Solaris and Mac OS X)
- **Apache**
- **MySQL**
- **PHP**
- **Perl**

The XAMPP 1.6.6 Basic Package includes the following main components:

- Apache HTTPD 2.2.8 + OpenSSL 0.9.8g
- MySQL 5.0.51
- PHP 5.2.5 + PHP 4.4.8 rc2 dev + PEAR
- SQLite 2.8.15
- phpMyAdmin 2.11.4
- Mercury Mail Transport System v4.52
- FileZilla FTP Server 0.9.25



Note: the XML scripts provided by Aastra use only Apache and PHP.

11.2.1 XAMPP installation

The nice thing with XAMPP is that it does not need to be installed. Simply extracting the archive to the root folder of your disk is enough. No registry keys are written, no files are copied to the Windows directory. You can even put XAMPP on a memory stick and run it from there. This makes it very portable and easy to use.

XAMPP can be downloaded from <http://www.apachefriends.org/en/xampp.html>, where you can select which Operating System you want to use XAMPP.

Please refer to the XAMPP web site for detailed information on how to install the software.

Notes:

- Make sure you extract XAMPP to the root directory of your disk or memory stick (e.g. C:\), otherwise you may run into troubles later
- If you have an existing PHP installation on your computer, please uninstall it or remove the Windows environment variable PHPRC (open the Windows Control Panel, go to System, Advanced, Environment Variables and remove the PHPRC variable). Otherwise XAMPP might use the wrong PHP settings.

Once XAMPP is installed, just run which is located in thexampp directory. This configures the installation of XAMPP on your computer.

To uninstall, just remove thexampp directory.


11.2.2 XML scripts installation

Just create a directory named "xml" under "xampp/htdocs" directory and unzip the xml-xampp.zip file provided in the Aastra XML API SDK in this directory.

Also create a "cache" directory under thexampp directory. This directory will be used to cache data on the server.


11.2.3 XAMPP start and stop

In thexampp directory run . To start the Apache HTTP server, just click on the "Start" button next to the Apache module.

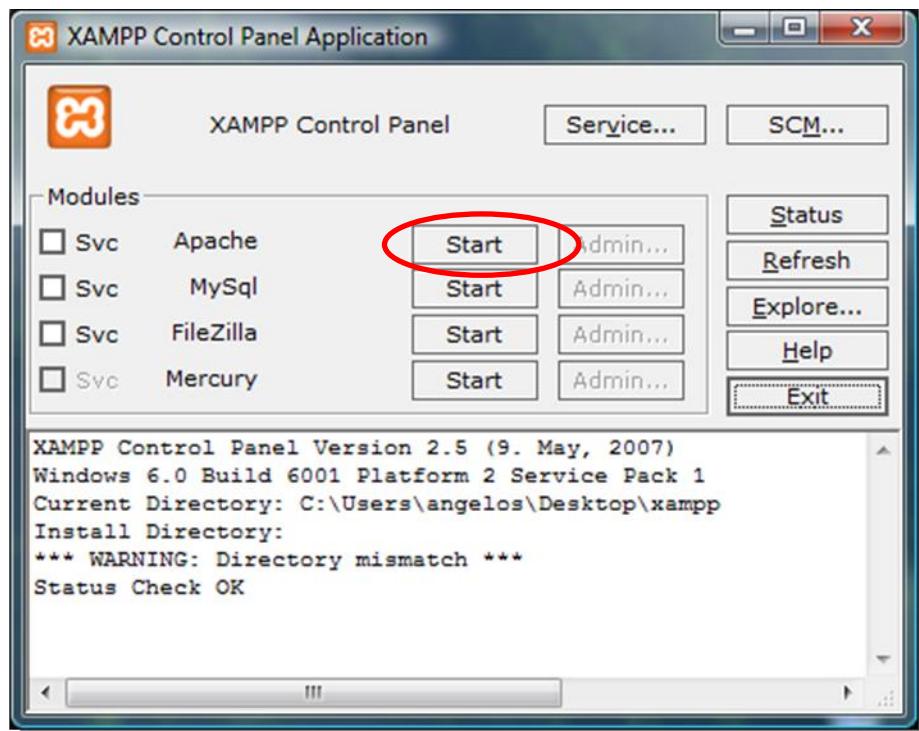

Apache is now running.


 **Note:** In case you have a firewall running (native for Windows XP or Vista), you will be prompted to authorize Apache HTTP Server.

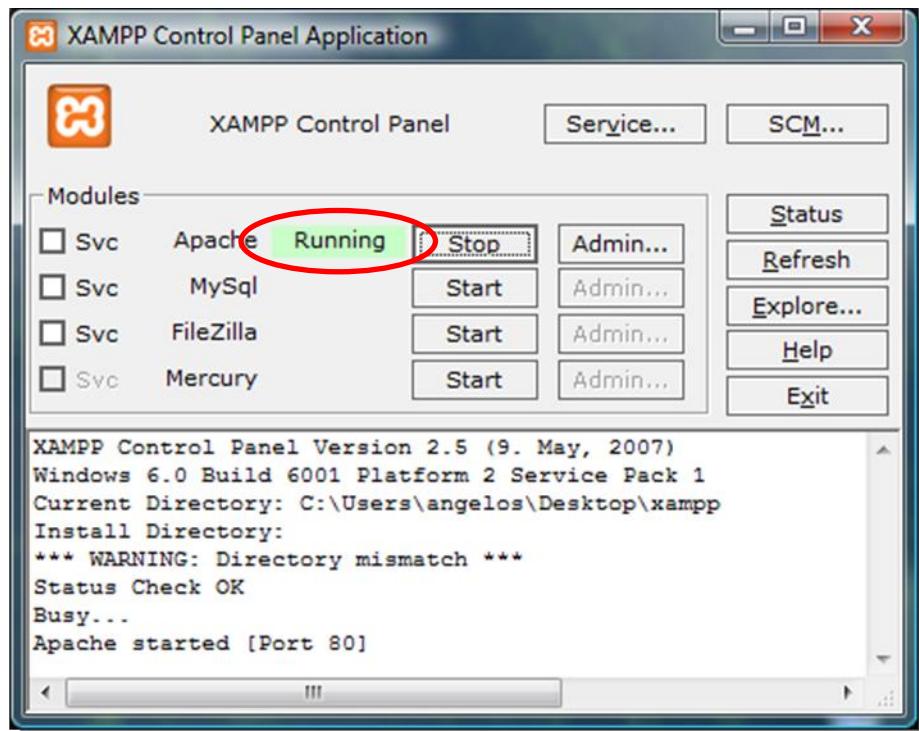


To stop Apache, simply click on the Stop-button. To close the XAMPP Control Panel, click on the Exit button.

11.2.4 Test your installation

To test the HTTP server, direct your Web browser to <http://localhost/xampp/>. You should see the following page:

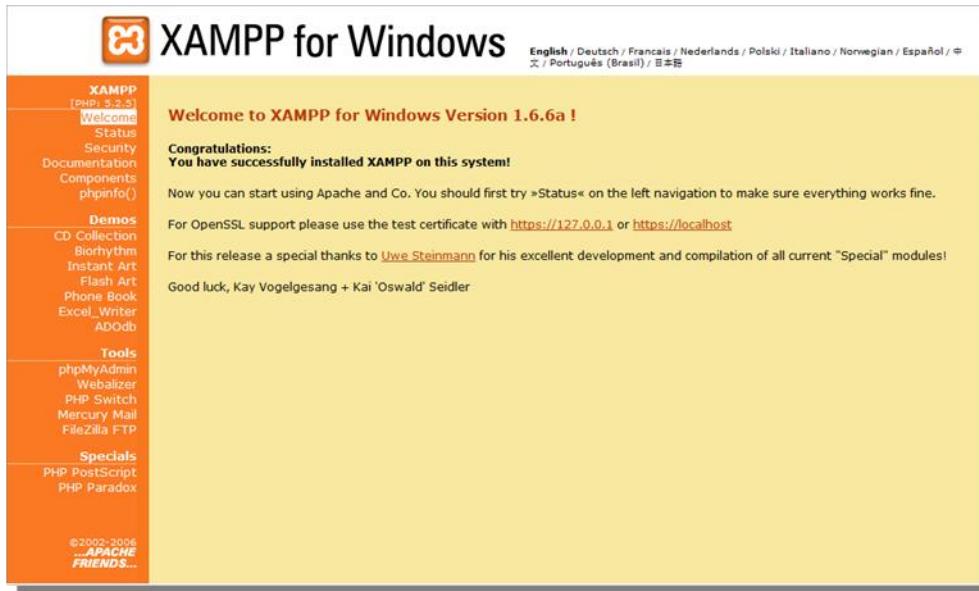

To test the XML scripts, direct your Web browser to <http://localhost/xml/area/area.php>. You should see the following page:

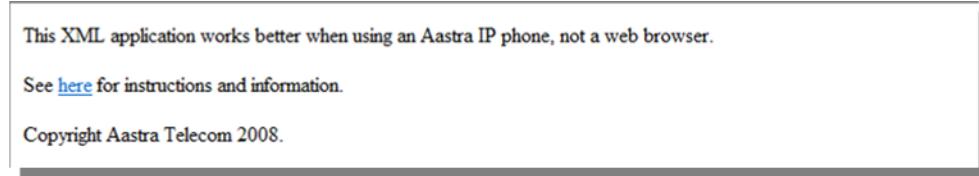

11.2.5 Troubleshooting Apache

Most common problem is that another program is already using TCP server port 80 (HTTP) and port 443 (HTTPS). Run the program [xampp-portcheck.exe](#) in the xampp directory.



Check which program is using server port 80 and/or 443. Shutdown that program.

11.3 Applications



This chapter describes all the sample applications available either from the Internet or from XAMPP running on a server (represented below as myserver.com).


11.3.1 Area code lookup (US/Canada)

Description			
This application allows the user to lookup for the State/Cities of any given US area code.			
Phone compatibility			
✓	Aastra9143i	✓	Aastra6753i
✓	Aastra9480i/9480iCT	✓	Aastra6755i/6735i
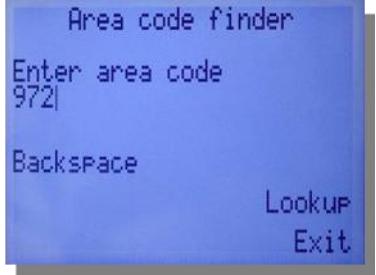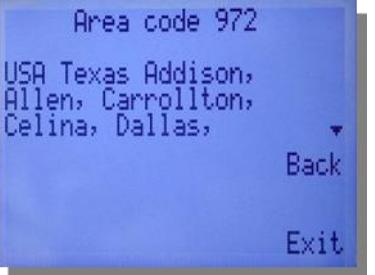
<input checked="" type="checkbox"/> Aastra6739i	<input checked="" type="checkbox"/> Aastra6757i/57iCT/6737i/6867i
<input checked="" type="checkbox"/> Aastra6730i/6731i/6863i/6865i	
Configuration (Internet)	
uri=http://65.205.71.13/xml/area/area.php	
Configuration (XAMPP)	
uri=http://myserver.com/xml/area/area.php	
Screenshots	
	


11.3.2 Biorhythms

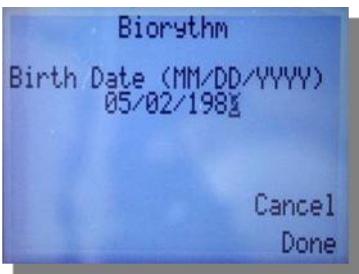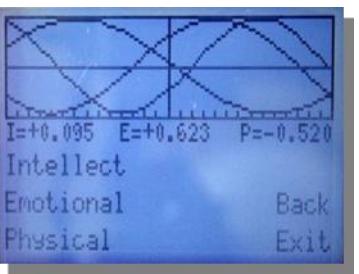Description	
Check your Biorhythms.	
Phone compatibility	
<input checked="" type="checkbox"/> Aastra9143i	<input checked="" type="checkbox"/> Aastra6753i
<input checked="" type="checkbox"/> Aastra9480i/9480iCT	<input checked="" type="checkbox"/> Aastra6755i/6735i
<input checked="" type="checkbox"/> Aastra6739i	<input checked="" type="checkbox"/> Aastra6757i/57iCT/6737i/6867i
<input checked="" type="checkbox"/> Aastra6730i/6731i/6863i/6865i	
Configuration (Internet)	
uri=http://65.205.71.13/xml/games/biorhythms.php	
Configuration (XAMPP)	
uri=http://myserver.com/xml/games/biorhythms.php	
Screenshots (55i/57i67/35i/6737i)	
	

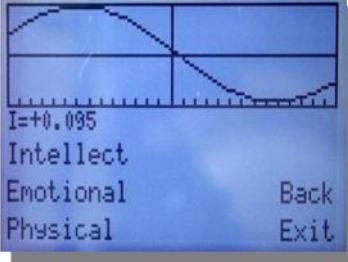
Comments
<p>User's birth date is stored on the server. Only phones with graphical display (6755i/6757i, 6757iCT, 6735i and 6737i) will display the charts PHP-GD extension is needed for this XML script.</p>

11.3.3 CNN News

Description	
RSS feed from CNN.com including the following topics:	
<ul style="list-style-type: none"> • Top Stories • World • U.S. • Politics • Law • Technology • Science and Space • Health 	<ul style="list-style-type: none"> • Entertainment • Travel • Education • Video • Offbeat • Most Popular • Most Recent
Phone compatibility	
<input checked="" type="checkbox"/> Aastra9143i	<input checked="" type="checkbox"/> Aastra6753i
<input checked="" type="checkbox"/> Aastra9480i/9480iCT	<input checked="" type="checkbox"/> Aastra6755i/6735i
<input checked="" type="checkbox"/> Aastra6739i	<input checked="" type="checkbox"/> Aastra6757i/57iCT/6737i/6867i
<input checked="" type="checkbox"/> Aastra6730i/6731i/6863i/6865i	
Configuration (Internet)	
uri=http://65.205.71.13/xml/rss/rss.php?feed=cnn	
Configuration (XAMPP)	
uri=http://myserver.com/xml/rss/rss.php?feed=cnn	
Screenshots	

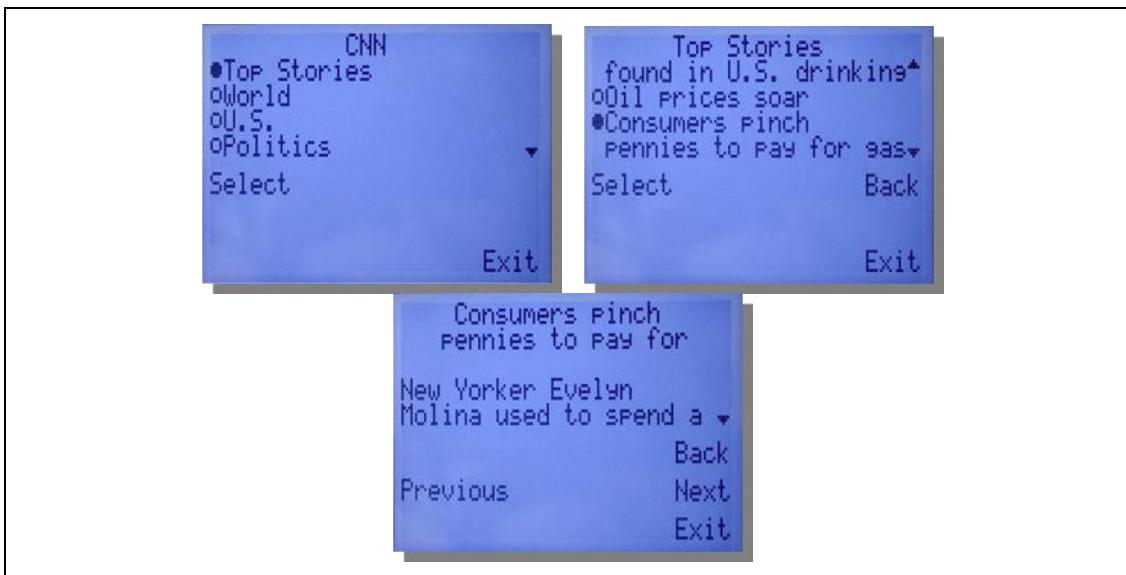


11.3.4 Currency Converter

Description			
This application uses www.yahoo.com to convert any currency in to another currency. It also allows the user to setup a list of favorite conversions.			
Phone compatibility			
✗ Aastra9143i	✗ Aastra6753i		
✓ Aastra9480i/9480iCT	✓ Aastra6755i/6735i		
✓ Aastra6739i	✓ Aastra6757i/57iCT/6737i/6867i		
✗ Aastra6730i/6731i/6863i/6865i			
Configuration (Internet)			
uri=http://65.205.71.13/xml/stock/currency.php			
Configuration (XAMPP)			
uri=http://myserver.com/xml/stock/currency.php			
Screenshots			


Comments
User's last request and favorites are stored on the server.

11.3.5 ESPN News

Description			
RSS feed from ESPN.com bringing news for the most popular sports in North America.			
<ul style="list-style-type: none"> • Top Headlines • NFL • NBA • MLB • NHL 		<ul style="list-style-type: none"> • Motorsports • Soccer • College Basketball • College Football 	
Phone compatibility			
<input checked="" type="checkbox"/> Aastra9143i	<input checked="" type="checkbox"/> Aastra6753i	<input checked="" type="checkbox"/> Aastra9480i/9480iCT	<input checked="" type="checkbox"/> Aastra6755i/6735i
<input checked="" type="checkbox"/> Aastra6739i	<input checked="" type="checkbox"/> Aastra6757i/57iCT/6737i/6867i	<input checked="" type="checkbox"/> Aastra6730i/6731i/6863i/6865i	
Configuration (Internet)			
uri=http://65.205.71.13/xml/rss/rss.php?feed=espn			
Configuration (XAMPP)			
uri=http://myserver.com/xml/rss/rss.php?feed=espn			

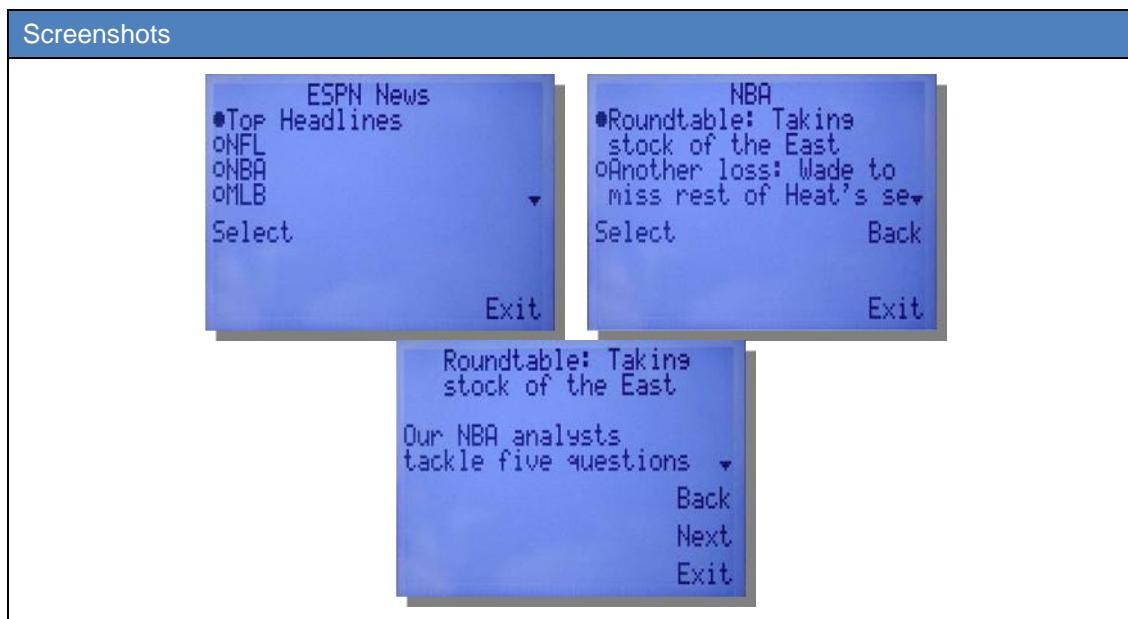

11.3.6 FOX News

Description	
RSS feed from foxnews.com including the following topics:	
<ul style="list-style-type: none"> • Latest Headlines • National • World • Politics 	<ul style="list-style-type: none"> • Business • SciTech • Health • Entertainment
Phone compatibility	
✓ Aastra9143i	✓ Aastra6753i
✓ Aastra9480i/9480iCT	✓ Aastra6755i/6735i
✓ Aastra6739i	✓ Aastra6757i/57iCT/6737i/6867i
✓ Aastra6730i/6731i/6863i/6865i	
Configuration (Internet)	
uri=http://65.205.71.13/xml/rss/rss.php?feed=fox	
Configuration (XAMPP)	
uri=http://myserver.com/xml/rss/rss.php?feed=fox	
Screenshots	



11.3.7 Horoscope

Description			
RSS feed from dailyhoroscopes.com.			
Phone compatibility			
✓ Aastra9143i	✓ Aastra6753i		
✓ Aastra9480i/9480iCT	✓ Aastra6755i/6735i		
✓ Aastra6739i	✓ Aastra6757i/57iCT/6737i/6867i		
✓ Aastra6730i/6731i/6863i/6865i			
Configuration (Internet)			
uri=http://65.205.71.13/xml/rss/rss.php?feed=horoscope			
Configuration (XAMPP)			
uri=http://myserver.com/xml/rss/rss.php?feed=horoscope			
Screenshots			

11.3.8 IP Geolocation


Description			
Identify the location (Country, City...) of any given public IP address. This application uses an			

API provided by http://www.geoplugin.net .		
Phone compatibility		
✓ Aastra480i/480iCT	✓	Aastra6739i
✓ Aastra9143i	✓	Aastra6753i
✓ Aastra9480i/9480iCT	✓	Aastra6755i/6735i
✓ Aastra6730i/6731i/6863i/6865i	✓	Aastra6757i/6757iCT/6737i/6867i
Configuration (Internet)		
uri= http://65.205.71.13/xml/area/ip.php		
Configuration (XAMPP)		
uri= http://myserver.com/xml/area/ip.php		

11.3.9 Movies

Description		
RSS feed from yahoo.com including the following topics:		
• Top 10 Box Office		
• Opening This Week		
• Coming Soon		
Phone compatibility		
✓ Aastra9143i	✓	Aastra6753i
✓ Aastra9480i/9480iCT	✓	Aastra6755i/6735i
✓ Aastra6739i	✓	Aastra6757i/57iCT/6737i/6867i
✓ Aastra6730i/6731i/6863i/6865i		
Configuration (Internet)		
uri= http://65.205.71.13/xml/rss/rss.php?feed=movies		
Configuration (XAMPP)		
uri= http://myserver.com/xml/rss/rss.php?feed=movies		

Screenshots

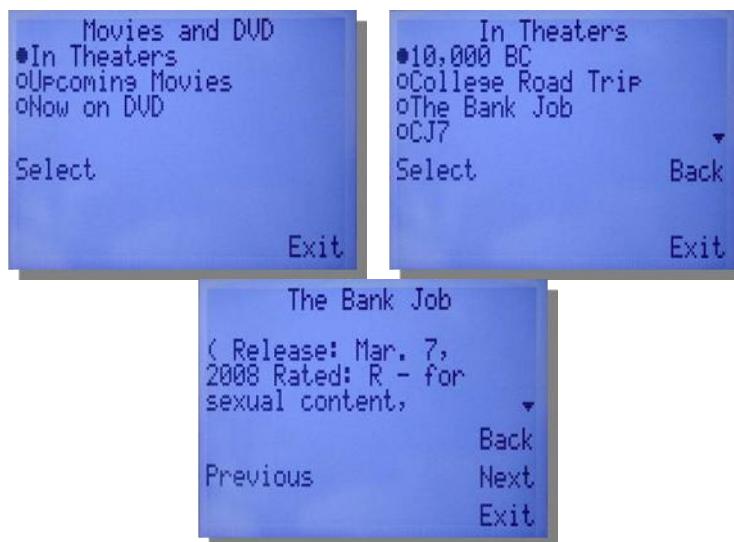

11.3.10 Netflix

Description

RSS feed from netflix.com including the following topics:

- Top 100
- New Releases*
- Action/adventure Top 25
- Comedy Top 25
- Drama Top 25
- Horror Top 25
- Sci-Fi Top 25
- Television Top 25
- Thrillers Top 25

Phone compatibility

✓ Aastra9143i	✓ Aastra6753i
✓ Aastra9480i/9480iCT	✓ Aastra6755i/6735i
✓ Aastra6751i	✓ Aastra6757i/57iCT/6737i/6867i
✓ Aastra6730i/6731i/6863i/6865i	✓ Aastra6739i


Configuration (Internet)

uri=http://65.205.71.13/xml/rss/rss.php?feed=netflix

Configuration (XAMPP)

uri=http://myserver.com/xml/rss/rss.php?feed=netflix


Screenshots

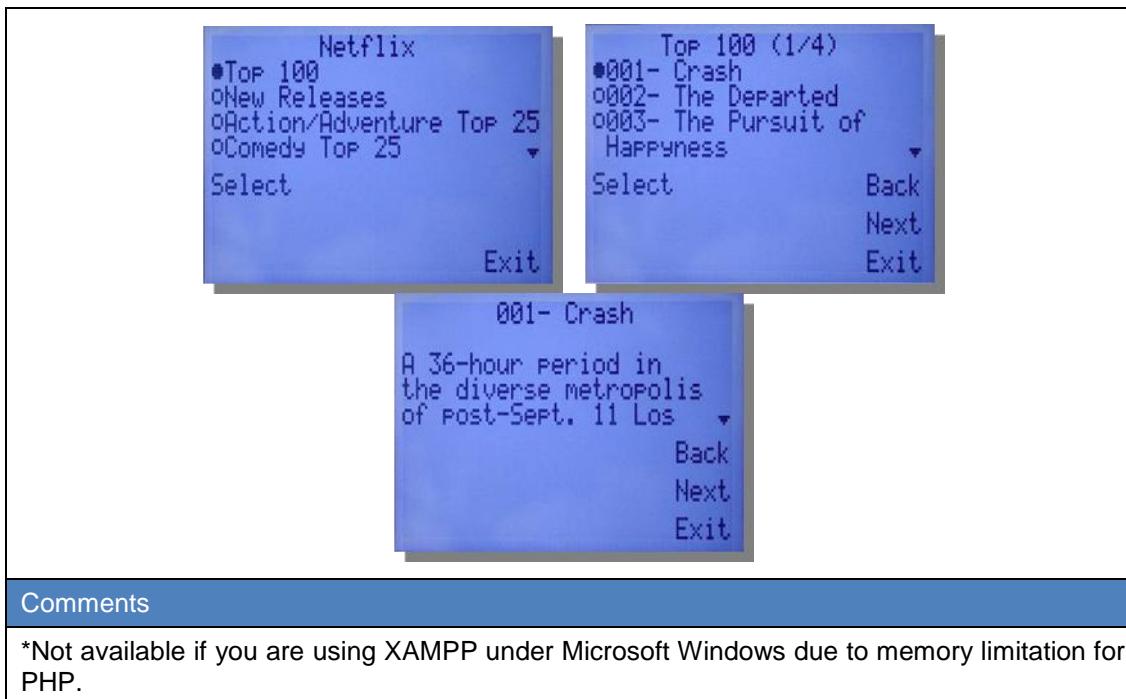

11.3.11 Stock Quotes

Description			
This application uses www.yahoo.com to get the value of any given stock. Please refer to yahoo.com for the syntax of the stock ticker.			
Phone compatibility			
✓	Aastra9143i	✓	Aastra6753i
✓	Aastra9480i/9480iCT	✓	Aastra6755i/6735i
✓	Aastra6739i	✓	Aastra6757i/57iCT/6737i/6867i
✓	Aastra6730i/6731i/6863i/6865i		
Configuration (Internet)			
<code>uri=http://65.205.71.13/xml/stock/stock.php</code>			
Configuration (XAMPP)			
<code>uri=http://myserver.com/xml/stock/stock.php</code>			

Screenshots

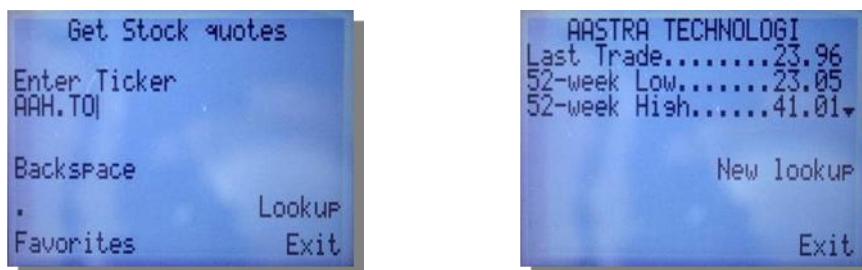

Comments

User's last request and favorites are stored on the server.

Only large screen phones have access to the favorites.

11.3.12 Today...

Description

RSS feed from answers.com including the following topics:

- Word of the Day
- Birthdays today
- This day in History
- Quote of the Day

Phone compatibility

✓	Aastra9143i	✓	Aastra6753i
✓	Aastra9480i/9480iCT	✓	Aastra6755i/6735i
✓	Aastra6739i	✓	Aastra6757i/57iCT/6737i/6867i
✓	Aastra6730i/6731i/6863i/6865i		


Configuration (Internet)

uri=http://65.205.17.13/xml/rss/rss.php?feed=day

Configuration (XAMPP)

uri=http://myserver.com/xml/rss/rss.php?feed=day

Screenshots

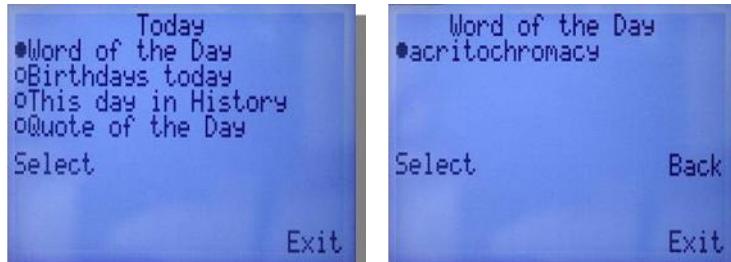



11.3.13 Local Weather


Description	
RSS feed from rssweather.com providing weather forecast for any given US ZIP code	
Phone compatibility	
<input checked="" type="checkbox"/> Aastra9143i	<input checked="" type="checkbox"/> Aastra6753i
<input checked="" type="checkbox"/> Aastra9480i/9480iCT	<input checked="" type="checkbox"/> Aastra6755i/6735i
<input checked="" type="checkbox"/> Aastra6739i	<input checked="" type="checkbox"/> Aastra6757i/57iCT/6737i/6867i
<input checked="" type="checkbox"/> Aastra6730i/6731i/6863i/6865i	
Configuration (Internet)	
uri=http://65.205.71.13/xml/weather/weather.php	
Configuration (XAMPP)	
uri=http://myserver.com/xml/weather/weather.php	
Screenshots	
Comments	
User's last request is stored on the server	

11.3.14 World Clock

Description			
Date and time from around the world using www.timeanddate.com . It allows the user to define a list of favorite cities for quick access.			
Phone compatibility			
✓ Aastra9143i	✓ Aastra6753i		
✓ Aastra9480i/9480iCT	✓ Aastra6755i/6735i		
✓ Aastra6739i	✓ Aastra6757i/57iCT/6737i/6867i		
✓ Aastra6730i/6731i/6863i/6865i			
Configuration (Internet)			
uri=http://65.205.71.13/xml/clock/clock.php			
Configuration (XAMPP)			
uri=http://myserver.com/xml/clock/clock.php			
Screenshots			
 			

11.3.15 Yahtzee

Description			
A Yahtzee game...			
Phone compatibility			
✗ Aastra9143i	✗ Aastra6753i		
✗ Aastra9480i/9480iCT	✓ Aastra6755i/6735i		
✗ Aastra6739i	✓ Aastra6757i/57iCT/6737i/6867i		
✗ Aastra6730i/6731i/6863i/6865i			
Configuration (Internet)			
uri=http://65.205.71.13/xml/games/yahtzee.php			
Configuration (XAMPP)			
uri=http://myserver.com/xml/games/yahtzee.php			

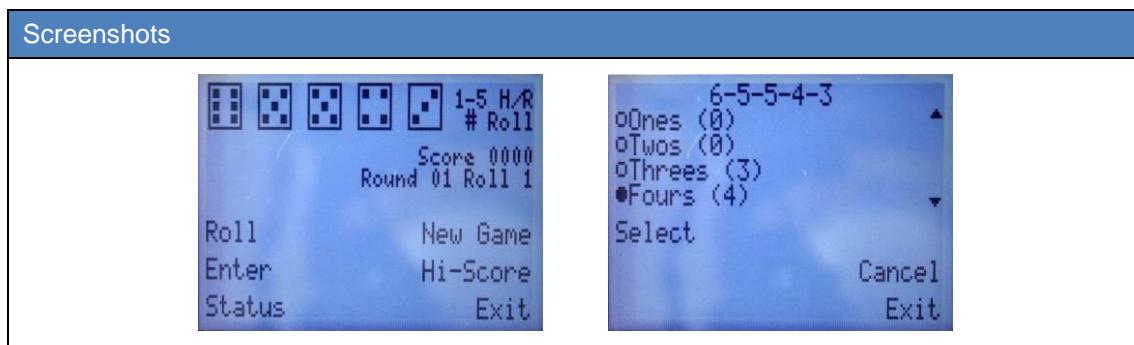

11.3.16 Global menu

Description			
This application is an XML application aggregator. It can be configured as an XML key or as the XML custom menu behind the “Services” key (not supported on 9143i and 6753i).			
Phone compatibility			
✓ Aastra9143i	✓ Aastra6753i		
✓ Aastra9480i/9480iCT	✓ Aastra6755i/6735i		
✓ Aastra6739i	✓ Aastra6757i/57iCT/6737i/6867i		
✓ Aastra6730i/6731i/6863i/6865i			
Configuration (Internet)			
uri=http://65.205.71.13/xml/menu/mymenu.php			
Configuration (XAMPP)			
uri=http://myserver.com/xml/menu/mymenu.php			
Screenshots			
Comments			
Only Aastra phones with softkeys are able to customize the list of applications.			

12 Appendix A: XSL Model

```

<?xml version="1.0" encoding="UTF-8" ?>
<xs:schema xmlns:xs="http://www.w3.org/2001/XMLSchema">

<xs:simpleType name="textAttributeType">
  <xs:restriction base="xs:string">
    <xs:pattern value="yes|no" />
  </xs:restriction>
</xs:simpleType>

<xs:simpleType name="lockinAttributeType">
  <xs:restriction base="xs:string">
    <xs:pattern value="yes|no|call" />
  </xs:restriction>
</xs:simpleType>

<xs:simpleType name="modeType">
  <xs:restriction base="xs:string">
    <xs:pattern value="normal|extended|fullscreen" />
  </xs:restriction>
</xs:simpleType>

<xs:simpleType name="integerAttributeType">
  <xs:restriction base="xs:integer" />
</xs:simpleType>

<xs:simpleType name="verticalAlignType">
  <xs:restriction base="xs:string">
    <xs:pattern value="top|middle|bottom" />
  </xs:restriction>
</xs:simpleType>

<xs:simpleType name="horizontalAlignType">
  <xs:restriction base="xs:string">
    <xs:pattern value="left|middle|right" />
  </xs:restriction>
</xs:simpleType>

<xs:simpleType name="colorType">
  <xs:restriction base="xs:string">
    <xs:pattern value="white|black|red|green|brown|blue|magenta|cyan|lightgray|darkgray|lightred|lightgreen|yellow|lightblue|lightmagenta|lightcyan"/>
  </xs:restriction>
</xs:simpleType>

<xs:simpleType name="CallingType">
  <xs:restriction base="xs:string">
    <xs:pattern value="outgoing|incoming|missed" />
  </xs:restriction>
</xs:simpleType>

<xs:simpleType name="TerminalType">
  <xs:restriction base="xs:string">
    <xs:pattern value="mobile/office/home"/>
  </xs:restriction>
</xs:simpleType>

<xs:complexType name="TopTitleTagType" mixed="true">
  <xs:attribute name="icon" type="integerAttributeType" default="0">
  </xs:attribute>
  <xs:attribute name="Color" default="white" type="colorType"/>
</xs:complexType>

<xs:complexType name="titleTagType" mixed="true">
  <xs:attribute name="wrap" default="yes">
    <xs:simpleType>
      <xs:restriction base="xs:string">
        <xs:pattern value="yes|no"/>
      </xs:restriction>
    </xs:simpleType>
  </xs:attribute>
  <xs:attribute name="Color" default="white" type="colorType"/>
</xs:complexType>

<xs:complexType name="lineTagType" mixed="true">
  <xs:attribute name="Color" default="white" type="colorType"/>
  <xs:attribute name="Size" default="regular">

```

```

<xs:simpleType>
  <xs:restriction base="xs:string">
    <xs:pattern value="double|regular|small|large" />
  </xs:restriction>
</xs:simpleType>
</xs:attribute>
<xs:attribute name="Align" default="left">
<xs:simpleType>
  <xs:restriction base="xs:string">
    <xs:pattern value="right|left|center" />
  </xs:restriction>
</xs:simpleType>
</xs:attribute>
</xs:complexType>

<xs:complexType name="imageType" mixed="true">
  <xs:attribute name="verticalAlign" type="verticalAlignType" />
  <xs:attribute name="horizontalAlign" type="horizontalAlignType" />
  <xs:attribute name="height">
    <xs:simpleType>
      <xs:restriction base="xs:integer">
        <xs:minInclusive value="0" />
        <xs:maxInclusive value="40" />
      </xs:restriction>
    </xs:simpleType>
  </xs:attribute>
  <xs:attribute name="width" type="integerAttributeType" default="0" />
</xs:complexType>

<xs:complexType name="softKeyType">
  <xs:sequence>
    <xs:element name="Label" type="xs:string" />
    <xs:element name="URI" type="xs:string" />
  </xs:sequence>
  <xs:attribute name="index" use="required">
    <xs:simpleType>
      <xs:restriction base="xs:integer">
        <xs:minInclusive value="1" />
        <xs:maxInclusive value="6" />
      </xs:restriction>
    </xs:simpleType>
  </xs:attribute>
  <xs:attribute name="icon" type="integerAttributeType" default="0" />
  <xs:attribute name="Color" default="white" type="colorType"/>
</xs:complexType>

<xs:complexType name="iconListType">
  <xs:sequence>
    <xs:element name="Icon" minOccurs="1" maxOccurs="unbounded">
      <xs:complexType mixed="true">
        <xs:attribute name="index" type="integerAttributeType" use="required" />
      </xs:complexType>
    </xs:element>
  </xs:sequence>
</xs:complexType>

<xs:element name="AastraIPPhoneTextScreen">
  <xs:complexType>
    <xs:sequence>
      <xs:element name="TopTitle" type="TopTitleTagType" minOccurs="0" maxOccurs="1" />
      <xs:element name="Title" type="titleTagType" minOccurs="0" maxOccurs="1"/>
      <xs:element name="Text">
        <xs:simpleType>
          <xs:restriction base="xs:string">
            <xs:minLength value="1" />
            <xs:maxLength value="1000" />
          </xs:restriction>
          <xs:attribute name="Color" default="white" type="colorType"/>
        </xs:simpleType>
      </xs:element>
      <xs:element name="SoftKey" type="softKeyType" minOccurs="0" maxOccurs="10"/>
    </xs:sequence>
    <xs:attribute name="destroyOnExit" type="textAttributeType" default="no" />
    <xs:attribute name="Beep" type="textAttributeType" default="no" />
    <xs:attribute name="LockIn" type="lockinAttributeType" default="no" />
    <xs:attribute name="Timeout" type="integerAttributeType" default="45" />
    <xs:attribute name="cancelAction" type="xs:string" />
    <xs:attribute name="GoodbyeLockInURI" type="xs:string" />
    <xs:attribute name="doneAction" type="xs:string" />
    <xs:attribute name="allowAnswer" type="xs:string" default="no"/>
    <xs:attribute name="allowDTMF" type="xs:string" default="no"/>
  </xs:complexType>
</xs:element>

```

```

<xs:attribute name="allowDrop" type="xs:string" default="no"/>
<xs:attribute name="allowConf" type="xs:string" default="no"/>
<xs:attribute name="allowXfer" type="xs:string" default="no"/>
</xs:complexType>
</xs:element>

<xs:element name="AastraIPPhoneTextMenu">
<xs:complexType>
<xs:sequence>
<xs:element name="TopTitle" type="TopTitleTagType" minOccurs="0" maxOccurs="1" />
<xs:element name="Title" type="titleTagType" minOccurs="0" maxOccurs="1"/>
<xs:element name="MenuItem" minOccurs="1" maxOccurs="30">
<xs:complexType>
<xs:all>
<xs:element name="Prompt" type="xs:string" minOccurs="0" maxOccurs="1" >
<xs:attribute name="Color" default="white" type="colorType"/>
<xs:attribute name="Split" type="integerAttributeType" default="-1"/>
</xs:element>
<xs:element name="URI" type="xs:string" minOccurs="0" maxOccurs="1" />
<xs:element name="Dial" type="xs:string" minOccurs="0" maxOccurs="1">
<xs:complexType>
<xs:attribute name="line" use="optional">
<xs:simpleType>
<xs:restriction base="xs:integer">
<xs:minInclusive value="1" />
<xs:maxInclusive value="9" />
</xs:restriction>
</xs:simpleType>
</xs:attribute>
</xs:complexType>
</xs:element>
<xs:element name="Selection" type="xs:string" minOccurs="0" maxOccurs="1" />
</xs:all>
<xs:attribute name="base" type="xs:string" />
<xs:attribute name="icon" type="integerAttributeType" default="0" />
</xs:complexType>
</xs:element>
<xs:element name="SoftKey" type="softKeyType" minOccurs="0" maxOccurs="10" />
<xs:element name="IconList" type="iconListType" minOccurs="0" maxOccurs="1" />
</xs:sequence>
<xs:attribute name="destroyOnExit" type="textAttributeType" default="no" />
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="LockIn" type="lockinAttributeType" default="no" />
<xs:attribute name="Timeout" type="integerAttributeType" default="45" />
<xs:attribute name="defaultIndex" type="integerAttributeType" default="1" />
<xs:attribute name="cancelAction" type="xs:string" />
<xs:attribute name="GoodbyeLockInURI" type="xs:string" />
<xs:attribute name="style" type="xs:string" default="numbered" />
<xs:attribute name="allowAnswer" type="xs:string" default="no"/>
<xs:attribute name="wrapList" type="textAttributeType" default="no" />
<xs:attribute name="numberLaunch" type="textAttributeType" default="no" />
<xs:attribute name="scrollConstrain" type="textAttributeType" default="no" />
<xs:attribute name="unitScroll" type="textAttributeType" default="no" />
<xs:attribute name="scrollUp" type="xs:string" />
<xs:attribute name="scrollDown" type="xs:string" />
<xs:attribute name="allowDrop" type="xs:string" default="no"/>
<xs:attribute name="allowConf" type="xs:string" default="no"/>
<xs:attribute name="allowXfer" type="xs:string" default="no"/>
</xs:complexType>
</xs:element>

<xs:element name="AastraIPPhoneInputScreen">
<xs:complexType>
<xs:sequence>
<xs:element name="TopTitle" type="TopTitleTagType" minOccurs="0" maxOccurs="1" />
<xs:element name="Title" type="titleTagType" minOccurs="0" maxOccurs="1" />
<xs:element name="Prompt" type="xs:string" minOccurs="0" maxOccurs="1" >
<xs:attribute name="Color" default="white" type="colorType"/>
</xs:element>
<xs:element name="Parameter" type="xs:string" minOccurs="0" maxOccurs="1" >
<xs:attribute name="Color" default="black" type="colorType"/>
</xs:element>

<xs:element name="URL" />
<xs:element name="Parameter" minOccurs="0" maxOccurs="1" />
<xs:element name="Default" minOccurs="0" maxOccurs="1" />
<xs:element name="Selection" minOccurs="0" maxOccurs="1" />
<xs:element name="InputField" minOccurs="0" maxOccurs="10">
<xs:complexType>
<xs:sequence>
<xs:element name="Prompt" type="xs:string" minOccurs="0" maxOccurs="1" >

```

```

<xs:attribute name="Color" default="white" type="colorType"/>
</xs:element>
<xs:element name="Parameter" type="xs:string" minOccurs="0" maxOccurs="1" >
<xs:attribute name="Color" default="black" type="colorType"/>
</xs:element>
<xs:element name="Default" minOccurs="0" maxOccurs="1" />
<xs:element name="Selection" minOccurs="0" maxOccurs="1" />
<xs:element name="SoftKey" type="softKeyType" minOccurs="0" maxOccurs="10"/>
<xs:element name="IconList" type="iconListType" minOccurs="0" maxOccurs="1" />
</xs:sequence>
<xs:attribute name="type" use="optional">
<xs:simpleType>
<xs:restriction base="xs:string">
<xs:pattern value="IP|string|number|timeUS|dateUS|timeInt|dateInt|Empty" />
</xs:restriction>
</xs:simpleType>
</xs:attribute>
<xs:attribute name="password" type="textAttributeType" default="no" />
<xs:attribute name="editable" type="textAttributeType" default="yes" />
</xs:complexType>
</xs:element>
<xs:element name="SoftKey" type="softKeyType" minOccurs="0" maxOccurs="10" />
<xs:element name="IconList" type="iconListType" minOccurs="0" maxOccurs="1" />
</xs:sequence>
<xs:attribute name="type" use="required">
<xs:simpleType>
<xs:restriction base="xs:string">
<xs:pattern value="IP|string|number|timeUS|dateUS|timeInt|dateInt" />
</xs:restriction>
</xs:simpleType>
</xs:attribute>
<xs:attribute name="password" type="textAttributeType" default="no" />
<xs:attribute name="destroyOnExit" type="textAttributeType" default="no" />
<xs:attribute name="editable" type="textAttributeType" default="yes" />
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="inputLanguage" use="optional" default="English">
<xs:simpleType>
<xs:restriction base="xs:string">
<xs:pattern
value="English|French|Spanish|German|Italian|Russian|Portuguese|FranÃ§ais|EspÃ¡tol|Deutsch|Italiano|DÃ©ngÃ©|Nordic" />
</xs:restriction>
</xs:simpleType>
</xs:attribute>
<xs:attribute name="LockIn" type="lockinAttributeType" default="no" />
<xs:attribute name="Timeout" type="integerAttributeType" default="45" />
<xs:attribute name="defaultIndex" type="integerAttributeType" default="1" />
<xs:attribute name="defaultFocus" type="textAttributeType" default="no" />
<xs:attribute name="cancelAction" type="xs:string" />
<xs:attribute name="GoodbyeLockInURI" type="xs:string" />
<xs:attribute name="allowAnswer" type="xs:string" default="no"/>
<xs:attribute name="allowDrop" type="xs:string" default="no"/>
<xs:attribute name="allowConf" type="xs:string" default="no"/>
<xs:attribute name="allowXfer" type="xs:string" default="no"/>
<xs:attribute name="displayMode" default="uncondensed">
<xs:simpleType>
<xs:restriction base="xs:string">
<xs:pattern value="condensed|uncondensed" />
</xs:restriction>
</xs:simpleType>
</xs:attribute>
</xs:complexType>
</xs:element>

<xs:element name="AastraIPPhoneDirectory">
<xs:complexType>
<xs:sequence>
<xs:element name="Title" type="xs:string" />
<xs:element name="MenuItem" minOccurs="1" maxOccurs="15">
<xs:complexType>
<xs:sequence>
<xs:element name="Prompt" type="xs:string" />
<xs:element name="URI" type="xs:string" />
</xs:sequence>
<xs:attribute name="base" type="xs:string" />
<xs:attribute name="icon" type="integerAttributeType" default="0" />
</xs:complexType>
</xs:element>
<xs:element name="SoftKey" type="softKeyType" minOccurs="0" maxOccurs="10" />
<xs:element name="IconList" type="iconListType" minOccurs="0" maxOccurs="1" />
</xs:sequence>

```

```

<xs:attribute name="destroyOnExit" type="textAttributeType" default="no" />
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="LockIn" type="lockinAttributeType" default="no" />
<xs:attribute name="Timeout" type="integerAttributeType" default="45" />
<xs:attribute name="next" type="xs:string" />
<xs:attribute name="previous" type="xs:string" />
<xs:attribute name="cancelAction" type="xs:string" />
<xs:attribute name="GoodbyeLockInURI" type="xs:string" />
</xs:complexType>
</xs:element>

<xs:element name="AastraIPPhoneExecute">
<xs:complexType>
<xs:sequence>
<xs:element name="ExecuteItem" minOccurs="0" maxOccurs="unbounded">
<xs:complexType>
<xs:attribute name="URI" type="xs:string" />
<xs:attribute name="interruptCall" type="textAttributeType" default="yes" />
</xs:complexType>
</xs:element>
</xs:sequence>
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="triggerDestroyOnExit" type="textAttributeType" default="no" />
</xs:complexType>
</xs:element>

<xs:element name="AastraIPPhoneStatus">
<xs:complexType>
<xs:sequence>
<xs:element name="Session" type="xs:string" minOccurs="0" />
<xs:element name="Message">
<xs:complexType mixed="true">
<xs:attribute name="index" type="integerAttributeType" use="required" />
<xs:attribute name="type">
<xs:simpleType>
<xs:restriction base="xs:string">
<xs:pattern value="alert|icon" />
</xs:restriction>
</xs:simpleType>
</xs:attribute>
<xs:attribute name="Timeout" type="integerAttributeType" default="3" />
<xs:attribute name="URI" type="xs:string" />
<xs:attribute name="icon" type="integerAttributeType" default="0" />
<xs:attribute name="Color" default="white" type="colorType"/>
</xs:complexType>
</xs:element>
<xs:element name="IconList" type="iconListType" minOccurs="0" maxOccurs="1" />
</xs:sequence>
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="triggerDestroyOnExit" type="textAttributeType" default="no" />
</xs:complexType>
</xs:element>

<xs:element name="AastraIPPhoneConfiguration">
<xs:complexType>
<xs:sequence>
<xs:element name="ConfigurationItem" minOccurs="0" maxOccurs="unbounded">
<xs:complexType>
<xs:sequence>
<xs:element name="Parameter" type="xs:string" />
<xs:element name="Value" type="xs:string" />
</xs:sequence>
</xs:complexType>
</xs:element>
</xs:sequence>
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="triggerDestroyOnExit" type="textAttributeType" default="no" />
</xs:complexType>
</xs:element>

<xs:group name="linesAndScroll">
<xs:sequence>
<xs:element name="Scroll" minOccurs="1" maxOccurs="1">
<xs:complexType>
<xs:sequence>
<xs:element name="Line" type="lineTagType" minOccurs="1" maxOccurs="unbounded" />
</xs:sequence>
<xs:attribute name="Height" type="integerAttributeType" default="1" />
</xs:complexType>
</xs:element>

```

```

<xs:element name="Line" type="lineTagType" minOccurs="0" maxOccurs="unbounded" />
</xs:sequence>
</xs:group>

<xs:element name="AastraIPPhoneFormattedTextScreen">
<xs:complexType>
<xs:sequence>
  <xs:element name="TopTitle" type="TopTitleTagType" minOccurs="0" maxOccurs="1" />
  <xs:element name="Line" type="lineTagType" minOccurs="0" maxOccurs="unbounded" />
  <xs:group ref="linesAndScroll" minOccurs="0" maxOccurs="1"/>
  <xs:element name="SoftKey" type="softKeyType" minOccurs="0" maxOccurs="10" />
</xs:sequence>
<xs:attribute name="destroyOnExit" type="textAttributeType" default="no" />
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="LockIn" type="lockinAttributeType" default="no" />
<xs:attribute name="Timeout" type="integerAttributeType" default="45" />
<xs:attribute name="cancelAction" type="xs:string" />
<xs:attribute name="GoodbyeLockInURI" type="xs:string" />
<xs:attribute name="doneAction" type="xs:string" />
<xs:attribute name="allowAnswer" type="xs:string" default="no"/>
<xs:attribute name="allowDTMF" type="xs:string" default="no"/>
<xs:attribute name="allowDrop" type="xs:string" default="no"/>
<xs:attribute name="allowConf" type="xs:string" default="no"/>
<xs:attribute name="allowXfer" type="xs:string" default="no"/>
</xs:complexType>
</xs:element>

<xs:element name="AastraIPPhoneImageScreen">
<xs:complexType>
<xs:sequence>
  <xs:element name="TopTitle" type="TopTitleTagType" minOccurs="0" maxOccurs="1" />
  <xs:element name="Image" type="imageType" />
  <xs:element name="SoftKey" type="softKeyType" minOccurs="0" maxOccurs="10" />
  <xs:element name="IconList" type="iconListType" minOccurs="0" maxOccurs="1" />
</xs:sequence>
<xs:attribute name="destroyOnExit" type="textAttributeType" default="no" />
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="mode" type="modeType" default="normal" />
<xs:attribute name="LockIn" type="lockinAttributeType" default="no" />
<xs:attribute name="Timeout" type="integerAttributeType" default="45" />
<xs:attribute name="imageAction" type="xs:string" />
<xs:attribute name="doneAction" type="xs:string" />
<xs:attribute name="cancelAction" type="xs:string" />
<xs:attribute name="GoodbyeLockInURI" type="xs:string" />
<xs:attribute name="allowDTMF" type="xs:string" default="no"/>
</xs:complexType>
</xs:element>

<xs:element name="AastraIPPhoneImageMenu">
<xs:complexType>
<xs:sequence>
  <xs:element name="TopTitle" type="TopTitleTagType" minOccurs="0" maxOccurs="1" />
  <xs:element name="Image" type="imageType" />
  <xs:element name="URIList">
    <xs:complexType>
      <xs:sequence>
        <xs:element name="URI" minOccurs="0" maxOccurs="12">
          <xs:complexType mixed="true">
            <xs:attribute name="base" />
            <xs:attribute name="key" use="required" >
              <xs:simpleType>
                <xs:restriction base="xs:string">
                  <xs:pattern value="[0-9]|#|\"*>
                </xs:restriction>
              </xs:simpleType>
            </xs:attribute>
          </xs:complexType>
        </xs:element>
      </xs:sequence>
    </xs:complexType>
  </xs:element>
  <xs:element name="SoftKey" type="softKeyType" minOccurs="0" maxOccurs="10" />
  <xs:element name="IconList" type="iconListType" minOccurs="0" maxOccurs="1" />
</xs:sequence>
<xs:attribute name="destroyOnExit" type="textAttributeType" default="no" />
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="mode" type="modeType" default="normal" />
<xs:attribute name="LockIn" type="lockinAttributeType" default="no" />
<xs:attribute name="Timeout" type="integerAttributeType" default="45" />
<xs:attribute name="imageAction" type="xs:string" />
<xs:attribute name="doneAction" type="xs:string" />

```

```

<xs:attribute name="cancelAction" type="xs:string" />
<xs:attribute name="GoodbyeLockInURI" type="xs:string" />
</xs:complexType>
</xs:element>

<xs:element name="AastraIPPhoneCallLog">
<xs:complexType>
<xs:sequence>
<xs:element name="TopTitle" type="TopTitleTagType" minOccurs="0" maxOccurs="1" />
<xs:element name="LogItem" minOccurs="1" maxOccurs="50"> // 30? 80 ?
<xs:complexType>
<xs:all>
<xs:element name="Name" type="xs:string" minOccurs="0" maxOccurs="1" />
<xs:element name="Number" type="xs:string" minOccurs="1" maxOccurs="1" />
<xs:element name="Date" type="xs:string" minOccurs="0" maxOccurs="1" />
<xs:element name="Time" type="xs:string" minOccurs="1" maxOccurs="1" />
<xs:element name="Selection" type="xs:string" minOccurs="1" maxOccurs="1" />
<xs:attribute name="duration" type="xs:integer" />
<xs:attribute name="type" type="CallingType"
  use="mandatory" />
<xs:attribute name="callingTerminal" type="TerminalType" />
<xs:attribute name="count" type="xs:integer" default="1" />
<xs:attribute name="line" type="xs:integer"
  default="1" />
</xs:all>
</xs:complexType>
</xs:element>
<xs:element name="IconList" type="iconListType" minOccurs="0" maxOccurs="1" />
</xs:sequence>
<xs:attribute name="destroyOnExit" type="textAttributeType" default="no" />
<xs:attribute name="Beep" type="textAttributeType" default="no" />
<xs:attribute name="LockIn" type="lockinAttributeType" default="no" />
<xs:attribute name="Timeout" type="integerAttributeType" default="45" />
<xs:attribute name="GoodbyeLockInURI" type="xs:string" />
<xs:attribute name="allowAnswer" type="xs:string" default="no" />
<xs:attribute name="allowDrop" type="xs:string" default="no" />
<xs:attribute name="allowConf" type="xs:string" default="no" />
<xs:attribute name="allowXfer" type="xs:string" default="no" />
<xs:attribute name="scrollConstrain" type="textAttributeType" default="no" />
<xs:attribute name="scrollUp" type="xs:string" />
<xs:attribute name="scrollDown" type="xs:string" />
<xs:attribute name="deleteUri" type="xs:string" />
<xs:attribute name="deleteAllUri" type="xs:string" />
<xs:attribute name="dialUri" type="xs:string" />
<xs:attribute name="addUri" type="xs:string" />
</xs:complexType>
</xs:element>
</xs:schema>

```

13 Appendix B: Object Oriented PHP Classes

Aastra also provides an object oriented API to develop XML applications which is included in the XML SDK.



Note: The PHP objects are taking care of the XML escape encoding when they are needed.

13.1 AastralIPPhoneCallLog()

This class allows you to create a XML PhoneCallLog object.

Include

AastralIPPhoneCallLog.class.php

Methods

- `setTopTitle(title,color,icon_index)` to set the Top Title of the XML screen (6739i only)
 - title string
 - color string, "red", "blue", ... (optional)
 - icon_index integer, icon number
- `setCancelAction(uri)` to set the cancel parameter with the URI to be called on Cancel (optional)
 - uri string
- `setDestroyOnExit()` to set DestroyonExit parameter to 'yes', 'no' by default (optional)
- `setBeep()` to enable a notification beep with the object (optional)
- `setLockIn(uri)` to set the Lock-in tag to 'yes' and the GoodbyeLockInURI (optional)
 - uri string, GoodByeLockInURI
- `setAllowAnswer()` to set the allowAnswer tag to 'yes' (optional only for non softkey phones)
- `setAllowDrop()` to set the allowDrop tag to 'yes' (optional only for non softkey phones)
- `setAllowXfer()` to set the allowXfer tag to 'yes' (optional only for non softkey phones)
- `setAllowConf()` to set the allowConf tag to 'yes' (optional only for non softkey phones)
- `setTimeout(timeout)` to define a specific timeout for the XML object (optional)
 - timeout integer (seconds)
- `setRefresh(timeout,URL)` to add Refresh parameters to the object (optional)
 - timeout integer (seconds)
 - URL string
- `setEncodingUTF8()` to change encoding from default ISO-8859-1 to UTF-8 (optional)
- `addIcon(index,icon)` to add custom icons to the object (optional)
 - index integer, icon index
 - icon string, icon name or definition

- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- addEntry(name,number,date,time,selection,duration,type,terminal,count,line)
 - name string (optional)
 - number string
 - date string MM-DD-YYYY
 - time string HH:MM (military time)
 - selection string (optional)
 - duration integer call duration in seconds (optional)
 - type string call type (incoming/outgoing/missed) (optional)
 - terminalstring terminal type (office/mobile/home) (optional)
 - count integer number of calls (optional)
 - line integer line used (1-9) (optional)
- setScrollConstrain() to avoid the list to wrap
- setScrollUp(uri) to set the URI to be called when the user presses the Up arrow (optional)
 - uri string
- setScrollDown(uri) to set the URI to be called when the user presses the Down arrow (optional)
 - uri string
- setDeleteUri(uri) to configure the uri called by the "Delete" button (optional)
 - uri string
- setDeleteAllUri(uri) to configure the uri called by the "Delete ALL" button (optional)
 - uri string
- setDialUri(uri) to configure the uri called by the "Dial" button (optional)
 - uri string
- setAddUri(uri) to configure the uri called by the "Add to directory" button(optional)
 - uri string

Example

```


require_once('AastraIPPhoneCallLog.class.php');
$object = new AastraIPPhoneCallLog();
$object->setTopTitle('Callers List','','1');
$object->setDestroyOnExit();
$object->setCancelAction($XML_SERVER);
$object->addEntry('John Doe','972-555-2345','01-01-
2012','15:28','1','60','incoming','mobile','','1');
$object->addEntry('Jane Doe','408-555-1234','01-05-
2011','10:01','2','','missed','home','2','1');
$object->setAddUri('http://myserver/myscript.php?action=add');
$object->addIcon('1', 'Icon:Book');

```

```
$object->output();
```

In this example, the label and the type of the softkey 1 are changed.

Output

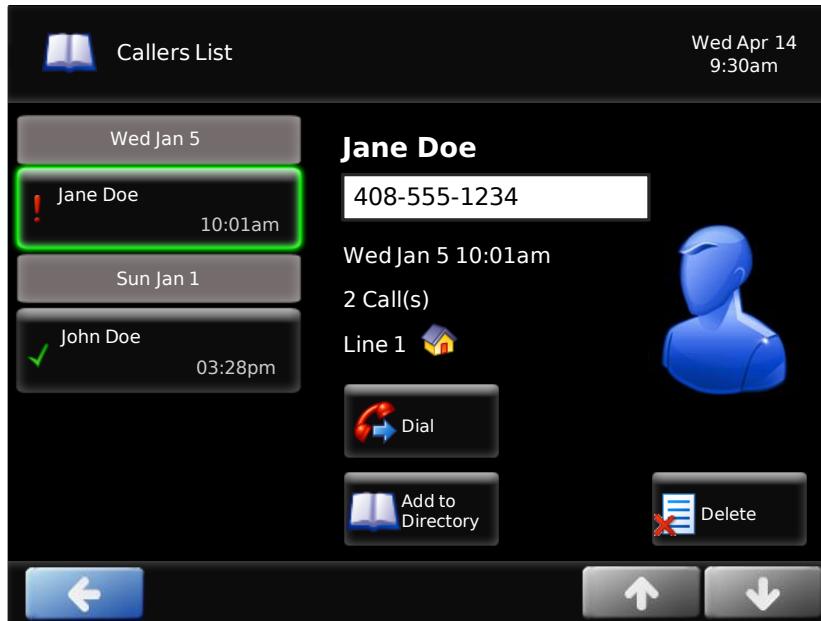

13.2 AastralIPPhoneConfiguration()

This class allows you to create a XML PhoneConfiguration object.

Include

AastralIPPhoneConfiguration.class.php

Methods

- setEncodingUTF8() to change encoding from default ISO-8859-1 to UTF-8 (optional)
- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- setType(type) to set the type of configuration object (optional)
 - type string, configuration change type
- addEntry(parameter,value,type) to add a configuration change
 - parameter string, parameter name
 - value string, parameter value
 - type string, conmfiguration change type (optional)
- setTriggerDestroyOnExit() to set the triggerDestroyOnExit tag to "yes" (optional)

Example

```
require_once('AastralIPPhoneConfiguration.class.php');
```

```
$configuration = new AastraIPPhoneConfiguration();
$configuration->addEntry('softkey1 label','Test');
$configuration->addEntry('softkey1 type','xml');
$configuration->setTriggerDestroyOnExit();
$configuration->setBeep();
$configuration->output();
```

In this example, the label and the type of the softkey 1 are changed.

13.3 AastralPPhoneExecute()

This class allows you to create a XML PhoneExecute object.

Include

AastralPPhoneExecute.class.php

Methods

- setBeep() to enable a notification beep with the object (optional)
- setEncodingUTF8() to change encoding from default ISO-8859-1 to UTF-8 (optional)
- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- setTriggerDestroyOnExit() to set the triggerDestroyOnExit tag to "yes" (optional)
- addEntry(url,interruptCall) to add an action to be executed.
 - url string
 - interruptCall string, optional, "yes" or "no"

Example

```
require_once('AastralPPhoneExecute.class.php');
$execute = new AastralPPhoneExecute();
$execute->addEntry('http://myserver.com/script.php?choice=2');
$execute->addEntry('Command: Reset');
$execute->output();
```

13.4 AastralPPhoneFormattedTextScreen()

This class allows you to create a XML FormattedTextScreen object.

Include

AastralPPhoneFormattedTextScreen.class.php

Methods

- setTopTitle(title,color,icon_index) to set the Top Title of the XML screen (6739i only)
 - title string
 - color string, "red", "blue", ... (optional)
 - icon_index integer, icon number

- setCancelAction(uri) to set the cancel parameter with the URI to be called on Cancel (optional)
 - uri string
- setDestroyOnExit() to set DestroyonExit parameter to 'yes', 'no' by default (optional)
- setLockIn(uri) to set the Lock-in tag to 'yes' and the GoodbyeLockInURI (optional)
 - uri string, GoodByeLockInURI
- setAllowAnswer() to set the allowAnswer tag to 'yes' (optional)
- setAllowDrop() to set the allowDrop tag to 'yes' (optional)
- setAllowXfer() to set the allowXfer tag to 'yes' (optional)
- setAllowConf() to set the allowConf tag to 'yes' (optional)
- setTimeout(timeout) to define a specific timeout for the XML object (optional)
 - timeout integer (seconds)
- addSoftkey(index,label,uri) to add custom softkeys to the object (optional)
 - index integer, softkey number
 - label string
 - uri string
- setRefresh(timeout,URL) to add Refresh parameters to the object (optional)
 - timeout integer (seconds)
 - URL string
- setEncodingUTF8() to change encoding from default ISO-8859-1 to UTF-8 (optional)
- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- addLine(text,size,align,color) to add a formatted line
 - text string
 - size string, optional, "double"
 - align string, optional, "left", "right" or "center"
 - color string, optional
- setScrollStart() to define the beginning of the scrolling section
- setScrollEnd() to define the end of the scrolling section
- setAllowDTMF() to allow DTMF passthrough on the object

Example

```

require_once('AastraIPPhoneFormattedTextScreen.class.php');
$ftext = new AastraIPPhoneFormattedTextScreen();
$ftext->setDestroyOnExit();
$ftext->addLine('Formatted Screen','double','center','red');
$ftext->setScrollStart();
$ftext->addLine('Scrolled text1');
$ftext->addLine('Scrolled text2');
$ftext->addLine('Scrolled text3');
$ftext->addLine('Scrolled text4');

```

```
$ftext->addLine('Scrolled text5');
$ftext->setScrollEnd();
$ftext->addLine('Footer',NULL,'center','blue');
$ftext->addSoftkey('10', 'Exit', 'SoftKey:Exit');
$ftext->output();
```

Output



13.5 AastralPPhoneImageMenu()

This class allows you to create a XML ImageMenu object on 55i/57i/57iCT/6735i/6737i.

Include

AastralPPhoneImageMenu.class.php

Methods

- `setTopTitle(title,color,icon_index)` to set the Top Title of the XML screen (6739i only)
 - `title` string
 - `color` string, "red", "blue", ... (optional)
 - `icon_index` integer, icon number
- `setCancelAction(uri)` to set the cancel parameter with the URI to be called on Cancel (optional)
 - `uri` string
- `setDestroyOnExit()` to set DestroyonExit parameter to 'yes', 'no' by default (optional)
- `setBeep()` to enable a notification beep with the object (optional)
- `setLockIn(uri)` to set the Lock-in tag to 'yes' and the GoodbyeLockInURI (optional)
 - `uri` string, GoodByeLockInURI
- `setAllowAnswer()` to set the allowAnswer tag to 'yes' (optional)

- setAllowDrop() to set the allowDrop tag to 'yes' (optional)
- setAllowXfer() to set the allowXfer tag to 'yes' (optional)
- setAllowConf() to set the allowConf tag to 'yes' (optional)
- setTimeout(timeout) to define a specific timeout for the XML object (optional)
 - timeout integer (seconds)
- addSoftkey(index,label,uri,icon_index) to add custom softkeys to the object (optional)
 - index integer, softkey number
 - label string
 - uri string
 - icon_index integer, icon number
- setRefresh(timeout,URL) to add Refresh parameters to the object (optional)
 - timeout integer (seconds)
 - URL string
- setEncodingUTF8() to change encoding from default ISO-8859-1 to UTF-8 (optional)
- addIcon(index,icon) to add custom icons to the object (optional)
 - index integer, icon index
 - icon string, icon name or definition
- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- setImage(image) to define the image to be displayed
 - image string
- setGDIImage(GDIImage) to use a GDIImage for display, the size is forced to 40x144
 - GDIImage GDIImage
- setAlignment(vertical,vertical) to define image alignment
 - vertical string, "top", "middle", "bottom"
 - horizontal string, "left", "middle", "right"
- setSize(height,width) to define image size
 - height integer (pixels)
 - width integer (pixels)
- setURIBase(uriBase) to define the base URI for the selections
 - uriBase string
- addURI(key,uri) to add a selection key with its URI
 - key string (1-9, * and #)
 - uri string
- setMode(mode) to define the image mode to be displayed (normal,extended,fullscreen) (optional, 6739i only)
 - mode string enum normal,extended,fullscreen

- `setDoneAction(uri)` to set the URI to be called when the user selects the default "Done" key (optional)
 - uri string
 - `setImageAction(uri)` to set the `imageAction` parameter with the URI to be called when user presses on the displayed image (optional, 6739i only)
 - uri string

Example

Output



13.6 AastralIPPhoneImageScreen()

This class allows you to create a XML ImageScreen object.

Include

AastralIPPhoneImageScreen.class.php

Methods

- **setTopTitle(title,color,icon_index)** to set the Top Title of the XML screen (6739i only)
 - title string
 - color string, "red", "blue", ... (optional)
 - icon_index integer, icon number
- **setCancelAction(uri)** to set the cancel parameter with the URI to be called on Cancel (optional)
 - uri string
- **setDestroyOnExit()** to set DestroyonExit parameter to 'yes', 'no' by default (optional)
- **setBeep()** to enable a notification beep with the object (optional)
- **setLockIn(uri)** to set the Lock-in tag to 'yes' and the GoodbyeLockInURI (optional)
 - uri string, GoodByeLockInURI
- **setAllowAnswer()** to set the allowAnswer tag to 'yes' (optional)
- **setAllowDrop()** to set the allowDrop tag to 'yes' (optional)
- **setAllowXfer()** to set the allowXfer tag to 'yes' (optional)
- **setAllowConf()** to set the allowConf tag to 'yes' (optional)
- **setTimeout(timeout)** to define a specific timeout for the XML object (optional)
 - timeout integer (seconds)
- **addSoftkey(index,label,uri,icon_index)** to add custom softkeys to the object (optional)
 - index integer, softkey number
 - label string

- uri string
 - icon_index integer, icon number
- setRefresh(timeout,URL) to add Refresh parameters to the object (optional)
 - timeout integer (seconds)
 - URL string
- setEncodingUTF8() to change encoding from default ISO-8859-1 to UTF-8 (optional)
- addIcon(index,icon) to add custom icons to the object (optional)
 - index integer, icon index
 - icon string, icon name or definition
- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- setImage(image) to define the image to be displayed
 - image string
- setGDIImage(GDIImage) to use a GDIImage for display, the size is forced to 40x144
 - GDIImage GDIImage
- setAlignment(vertical,horizontal) to define image alignment
 - vertical string, "top", "middle", "bottom"
 - horizontal string, "left", "middle", "right"
- setSize(height,width) to define image size
 - height integer (pixels)
 - width integer (pixels)
- setAllowDTMF() to allow DTMF passthrough on the object
- setScrollUp(uri) to set the URI to be called when the user presses the Up arrow (optional)
 - uri string
- setScrollDown(uri) to set the URI to be called when the user presses the Down arrow (optional)
 - uri string
- setScrollLeft(uri) to set the URI to be called when the user presses the Left arrow (optional)
 - uri string
- setScrollRight(uri) to set the URI to be called when the user presses the Right arrow (optional)
 - uri string
- setMode(mode) to define the image mode to be displayed (normal,extended,fullscreen) (optional, 6739i only)
 - mode string enum normal,extended,fullscreen
- setDoneAction(uri) to set the URI to be called when the user selects the default "Done" key (optional)
 - uri string

- # setImageAction(uri) to set the imageAction parameter with the URI to be called when user presses on the displayed image (optional, 6739i only)
 - uri string

Example

```
require_once('AastraIPPhoneImageScreen.class.php');
$images = new AastraIPPhoneImageScreen();
$images->setDestroyOnExit();
$images->setSize(40,40);
$images-
>setImage('fffffffffc02fffffffffe4ffffbffffc05ffffe7ff7a7fffffffffeffffebd
7fffffea6bcfffffe796f3feff6fa289f0a86f4866fa20df42414595dd0134f8037
ed1637f0e2522b2dd003b6eb936f05ffffbd4f4107bba6eb0080e93715000010b754
001281271408c640252081b1b22500013c5c66201368004e04467520dc11067152b
82094d418e100247205805494780105002601530020931400020ac5c91088b0f2b0
8c21c07d0c2006009fdfe81f80efe0107fe0fb1c3ffff8ffc3ffffef8f7febffbfcc
87ffbfff64');
$images->addSoftkey('1', 'Mail',
'http://myserver.com/script.php?action=1','1');
$images->addSoftkey('6', 'Exit', 'SoftKey:Exit');
$images->addIcon('1', 'Icon:Envelope');
$images->output();
```

Output



13.7 AastralIPPhoneInputScreen() – Single Input field

This class allows you to create a XML InputScreen object.

Include

AastralIPPhoneInputScreen.class.php

Methods

- setTitle(title) to setup the title of an object (optional)
 - title string
- setTopTitle(title,color,icon_index) to set the Top Title of the XML screen (6739i only)
 - title string

- color string, "red", "blue", ... (optional)
 - icon_index integer, icon number
- setCancelAction(uri) to set the cancel parameter with the URI to be called on Cancel (optional)
 - uri string
- setDestroyOnExit() to set DestroyonExit parameter to 'yes', 'no' by default (optional)
- setLockIn(uri) to set the Lock-in tag to 'yes' and the GoodbyeLockInURI (optional)
 - uri string, GoodByeLockInURI
- setAllowAnswer() to set the allowAnswer tag to 'yes' (optional)
- setAllowDrop() to set the allowDrop tag to 'yes' (optional)
- setAllowXfer() to set the allowXfer tag to 'yes' (optional)
- setAllowConf() to set the allowConf tag to 'yes' (optional)
- setTimeout(timeout) to define a specific timeout for the XML object (optional)
 - timeout integer (seconds)
- addSoftkey(index,label,uri) to add custom softkeys to the object (optional)
 - index integer, softkey number
 - label string
 - uri string
- setRefresh(timeout,URL) to add Refresh parameters to the object (optional)
 - timeout integer (seconds)
 - URL string
- setEncodingUTF8() to change encoding from default ISO-8859-1 to UTF-8 (optional)
- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- setURL(url) to set the URL to called after the input
 - url string
- setType(type) to set type of input, 'string' by default
 - type enum ('IP', 'string', 'number', 'dateUS'...)
- setDefault(default) to set default value for the input (optional)
 - default string
- setParameter(param) to set the parameter name to be parsed after the input
 - param string
- setInputLanguage(language) to set the language of the input (optional)
 - language enum ("English", "French"....)
- setPassword() to set the Password parameter to 'yes', 'no' by default (optional)

- `setNotEditable()` to set the `editable` parameter to 'no', 'yes' by default (optional)
- `setEditable()` is now replaced by `setNotEditable` but kept for compatibility reasons (optional)
- `setPrompt(prompt)` to set the prompt to be displayed for the input.
 - `prompt` string

Example

```
require_once('AastralIPPhoneInputScreen.class.php');
$input = new AastralIPPhoneInputScreen();
$input->setTitle('Title');
$input->setPrompt('Enter your password');
$input->setParameter('param');
$input->setType('string');
$input->setURL('http://myserver.com/script.php');
$input->setPassword();
$input->setDestroyOnExit();
$input->setDefault('Default');
$input->output();
```

Output



13.8 AastralIPPhoneInputScreen() – Multiple Input fields

This class allows you to create a XML InputScreen object with multiple input fields.

Include

`AastralIPPhoneInputScreen.class.php`

Methods

- `setTitle(title)` to setup the title of an object (optional)
 - `title` string
- `setTopTitle(title,color,icon_index)` to set the Top Title of the XML screen (6739i only)

- title string
 - color string, "red", "blue", ... (optional)
 - icon_index integer, icon number
- setCancelAction(uri) to set the cancel parameter with the URI to be called on Cancel (optional)
 - uri string
- setDestroyOnExit() to set DestroyonExit parameter to 'yes', 'no' by default (optional)
- setLockIn(uri) to set the Lock-in tag to 'yes' and the GoodbyeLockInURI (optional)
 - uri string, GoodByeLockInURI
- setAllowAnswer() to set the allowAnswer tag to 'yes' (optional)
- setAllowDrop() to set the allowDrop tag to 'yes' (optional)
- setAllowXfer() to set the allowXfer tag to 'yes' (optional)
- setAllowConf() to set the allowConf tag to 'yes' (optional)
- setTimeout(timeout) to define a specific timeout for the XML object (optional)
 - timeout integer (seconds)
- addSoftkey(index,label,uri) to add custom softkeys to the object (optional)
 - index integer, softkey number
 - label string
 - uri string
- setRefresh(timeout,URL) to add Refresh parameters to the object (optional)
 - timeout integer (seconds)
 - URL string
- setEncodingUTF8() to change encoding from default ISO-8859-1 to UTF-8 (optional)
- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- setURL(url) to set the URL to called after the input
 - url string
- setType(type) to set the default type of input 'string' by default
 - type enum ('IP', 'string', 'number', 'dateUS'...)
- setDefault(default) to set default default value for the input (optional)
 - default string
- setParameter(param) to set the default parameter name to be parsed after the input
 - param string
- setPassword() to set the default Password parameter to 'yes', 'no' by default (optional)
- setNotEditable() to set the default editable parameter to 'no', 'yes' by default (optional)

- setEditable() is now replaced by setNotEditable but kept for compatibility reasons (optional)
- setPrompt(prompt) to set the default prompt to be displayed for the input.
 - prompt string
- setDefaultIndex(index) to define the field index the object will use to start (optional)
 - index integer, optional, default is 1
- setDisplayMode(display) to define the aspect of the display, normal/condensed (optional)
 - display enum ("normal, "condensed"), default is "normal".
- setInputLanguage(language) to set the language of the input (optional)
 - language enum ("English", "French"....)
- addField(type) to add an input field and setting its type
 - type (IP, string, number, dateUS, timeUS,dateInt, timeInt or empty) if the type is an empty string then the type is inherited from the main object.
- setFieldPassword(password) to set the password mode for the input field, overrides the value set by setPassword for the field
 - password enum ("yes", "no")
- setFieldEditable(editable) to set the input field editable mode ('yes', no'), overrides the value set by setEditable or setNotEditable for the field
 - editable enum ("yes", "no")
- setFieldParameter(parameter) to set the parameter name to be parsed after the global input, overrides the value set by setParameter for the field
 - parameter string
- setFieldPrompt(prompt)to set the prompt to be displayed for the input field, overrides the value set by setPrompt for the field
 - prompt string
- setFieldSelection(selection) to set the Selection tag for the field
 - selection string
- setFieldDefault(default) to set default value for the input field, overrides the value set by setDefault for the field
 - default string

Example


```

require_once('AastraIPPhoneInputScreen.class.php');
$input = new AastraIPPhoneInputScreen();
$input->setTitle('Restricted application');
$input->setDisplayMode('condensed');
$input->setURL($XML_SERVER);
$input->setDestroyOnExit();
$input->addField('empty');
$input->addField('string');
$input->setFieldSelection('1');
$input->setFieldPrompt('Username:');
$input->setFieldParameter('user');
$input->setFieldSelection('1');
$input->addField('number');

```

```
$input->setFieldPassword('yes');
$input->setFieldPrompt('Password:');
$input->setFieldParameter('password');
$input->setFieldSelection('2');
$input->addSoftkey('10', 'Exit', 'SoftKey:Exit');
$input->output();
```

Output

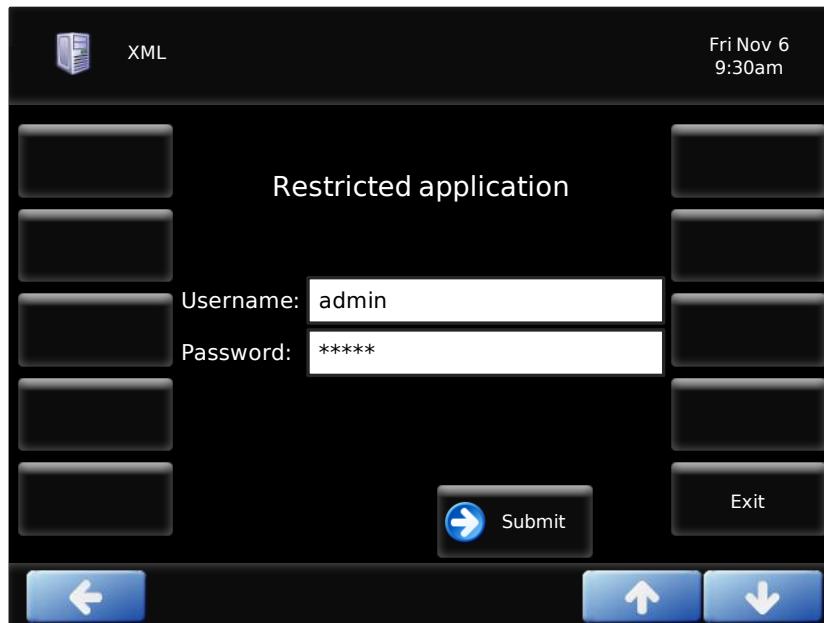

13.9 AastralIPPhoneStatus()

This class allows you to create a XML PhoneStatus object.

Include

`AastralIPPhoneStatus.class.php`

Methods

- `setEncodingUTF8()` to change encoding from default ISO-8859-1 to UTF-8 (optional)
- `generate()` to return the generated XML for the object
- `output(flush)` to display the object
 - `flush` boolean optional, output buffer to be flushed out or not.
- `setSession(session)` to setup the session ID
 - `session` string
- `setTriggerDestroyOnExit()` to set the triggerDestroyOnExit tag to "yes" (optional)
- `addEntry(index,message,type,timeout,uri,icon)` to add a message to be displayed on the idle screen.
 - `index` integer
 - `message` string

- type enum ("alert") optional
- timeout integer (seconds) optional
- uri string (6739i only, optional)
- icon integer (6739i only, optional)

Example

```
require_once('AastraIPPhoneStatus.class.php');
$status = new AastraIPPhoneStatus();
$status->setSession('Session');
$status->addEntry('1','Message 1');
$status->addEntry('2','Alert Message','alert',5);
$status->output();
```

Output



13.10 AastralIPPhoneTextMenu()

This class allows you to create a XML TextMenu object.

Include

AastralIPPhoneTextMenu.class.php

Methods

- setTitle(title) to setup the title of an object (optional)
 - title string
- setCancelAction(uri) to set the cancel parameter with the URI to be called on Cancel (optional)
 - uri string
- setDestroyOnExit() to set DestroyonExit parameter to 'yes', 'no' by default (optional)
- setBeep() to enable a notification beep with the object (optional)
- setLockIn(uri) to set the Lock-in tag to 'yes' and the GoodbyeLockInURI (optional)
 - uri string, GoodByeLockInURI
- setAllowAnswer() to set the allowAnswer tag to 'yes' (optional)
- setAllowDrop() to set the allowDrop tag to 'yes' (optional)
- setAllowXfer() to set the allowXfer tag to 'yes' (optional)

- setAllowConf() to set the allowConf tag to 'yes' (optional)
- setTimeout(timeout) to define a specific timeout for the XML object (optional)
 - timeout integer (seconds)
- addSoftkey(index,label,uri) to add custom softkeys to the object (optional)
 - index integer, softkey number
 - label string
 - uri string
- setRefresh(timeout,URL) to add Refresh parameters to the object (optional)
 - timeout integer (seconds)
 - URL string
- setEncodingUTF8() to change encoding from default ISO-8859-1 to UTF-8 (optional)
- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- setDefaultIndex(index) to set the default selection in the list (optional)
 - index index (1-30)
- setBase(base) to configure the menuitem base URI
 - base string
- resetBase() to reset the menuitem base URI
- addEntry(name,url,selection,icon,dial) to add an element in the list to be displayed
 - name string or array(0=>Line1,1=>Line2,2=>Offset,3=>Char,4=>Mode)
 - url string
 - selection string
 - icon integer
 - dial string, phone number bto dial
- setScrollUp(uri) to set the URI to be called when the user presses the Up arrow (optional)
 - uri string
- setScrollDown(uri) to set the URI to be called when the user presses the Down arrow (optional)
 - uri string
- setUnitScroll() to set the unitScroll tag to yes which changes the scrolling behavior on the 6739i (optional and 6739i only)
- natsortbyname() to order the list, must not be used in conjunction with setBase or resetBase

Example

```

require_once('AastraIPPhoneTextMenu.class.php');
$menu = new AastraIPPhoneTextMenu();
$menu->setTitle('Title');
$menu->setDestroyOnExit();
$menu->setDefaultIndex('3');

```

```
$menu->addEntry('Choice 2',
  'http://myserver.com/script.php?choice=2', 'Value=2');
$menu->addEntry('Choice 1',
  'http://myserver.com/script.php?choice=1', 'Value=1');
$menu->addEntry('Choice 3',
  'http://myserver.com/script.php?choice=3', 'Value=3');
$menu->natsortByName();
$menu->addSoftkey('1', 'My Select',
  'http://myserver.com/script.php?action=1');
$menu->addSoftkey('10', 'Exit', 'SoftKey:Exit');
$menu->output();
```

Output



13.11 AastralIPPhoneTextScreen()

This class allows you to create a XML TextScreen object.

Include

AastralIPPhoneTextScreen.class.php

Methods

- `setTitle(title)` to setup the title of an object (optional)
 - `title` string
- `setTopTitle(title,color,icon_index)` to set the Top Title of the XML screen (6739i only)
 - `title` string
 - `color` string, "red", "blue", ... (optional)
 - `icon_index` integer, icon number
- `setCancelAction(uri)` to set the cancel parameter with the URI to be called on Cancel (optional)

- uri string
- setDestroyOnExit() to set DestroyonExit parameter to 'yes', 'no' by default (optional)
- setBeep() to enable a notification beep with the object (optional)
- setLockIn(uri) to set the Lock-in tag to 'yes' and the GoodbyeLockInURI (optional)
 - uri string, GoodByeLockInURI
- setAllowAnswer() to set the allowAnswer tag to 'yes' (optional)
- setAllowDrop() to set the allowDrop tag to 'yes' (optional)
- setAllowXfer() to set the allowXfer tag to 'yes' (optional)
- setAllowConf() to set the allowConf tag to 'yes' (optional)
- setTimeout(timeout) to define a specific timeout for the XML object (optional)
 - timeout integer (seconds)
- addSoftkey(index,label,uri) to add custom softkeys to the object (optional)
 - index integer, softkey number
 - label string
 - uri string
- setRefresh(timeout,URL) to add Refresh parameters to the object (optional)
 - timeout integer (seconds)
 - URL string
- setEncodingUTF8() to change encoding from default ISO-8859-1 to UTF-8 (optional)
- addIcon(index,icon) to add custom icons to the object (optional)
- generate() to return the generated XML for the object
- output(flush) to display the object
 - flush boolean optional, output buffer to be flushed out or not.
- setText(text) to set the text to be displayed.
 - text string
- setAllowDTMF() to allow DTMF passthrough on the object

Example

```

require_once('AastraIPPhoneTextScreen.class.php');
$text = new AastraIPPhoneTextScreen();
$text->setTitle('Title');
$text->setText('Text to be displayed and this text can be really
long...');
$text->setDestroyOnExit();
$text->addSoftkey('1', 'Mail',
'http://myserver.com/script.php?action=1');
$text->addSoftkey('10', 'Exit', 'SoftKey:Exit');
$text->output();

```

Output



13.12 AastralIPPhoneScrollableTextMenu()

This class allows you to create TextMenu supporting more than 30 items, all the next/previous page management is handled by the object.

Include

AastralIPPhoneScrollableTextMenu.class.php

Methods

- `setEntries(entries)` Set entries of the list by 2 dim array.
 - entries Inner array field names: 'name', 'url', 'selection', 'icon', 'dial'
- `verifyCookie(cookie)` Verifies if the cookie of the HTTP requests matches the cookie of the saved context.
- `setBackURI(URI)` Set the cancel parameter with the URI to be called on Cancel or Back Softkey (optional)
- `setBackKeyPosition(position)` Set position of Back Softkey. Default is 3.
- `setNextKeyPosition(position)` Set position of Next Softkey. Default is 4.
- `setPreviousKeyPosition(position)` Set position of Previous Softkey. Default is 5.
- `setExitKeyPosition(position)` Set position of Back Softkey. Default is 6.
- `setSelectKeyPosition(position)` Set position of Back Softkey. Default is 1.
- `setNextKeyIcon(icon)` Set icon of Next Softkey. Default is Icon:TailArrowDown. Set NULL to disable icon.
- `setPreviousKeyIcon(icon)` Set icon of Previous Softkey. Default is Icon:TailArrowUp. Set NULL to disable icon.
- `disableExitKey()` Disable the Exit Softkey

- `setSelectKeyLabel(label)` Set the label of the Select Softkey. Default is 'Select'. Make sure the string is in language.ini.
- `setCancelAction(uri)` to set the cancel parameter with the URI to be called on Cancel or Back Softkey (optional)
- `output()` to display the object
- `addEntry(name,url,selection,icon,dial)` to add an element in the list to be displayed
- `natsortbyname()` to order the list
- `setTitle>Title`) to setup the title of an object (optional)
- `setTitleWrap()` to set the title to be wrapped on 2 lines (optional)
- `setTopTitle(title,color,icon_index)` to set the Top Title of the XML screen (6739i only)
 - `title` string
 - `color` string, "red", "blue", ... (optional)
 - `icon_index` integer, icon number
- `setDestroyOnExit()` to set DestroyOnExit parameter to "yes" (optional)
- `setBeep()` to enable a notification beep with the object (optional)
- `setLockIn(uri)` to set the Lock-in tag to 'yes' and the GoodbyeLockInURI (optional)
 - `uri` string, GoodByeLockInURI
- `setAllowAnswer()` to set the allowAnswer tag to 'yes' (optional)
- `setTimeout(timeout)` to define a specific timeout for the XML object (optional)
- `addSoftkey(index,label,uri,icon_index)` to add custom softkeys to the object (optional)
- `setRefresh(timeout,URL)` to add Refresh parameters to the object (optional)
- `generate()` to return the object content
- `setDefaultIndex(index)` to set the default selection in the list (optional)
- `setStyle(style)` to set the style of the list numbered/none/radio (optional)
- `setWrapList()` to allow 2 lines items (optional)

Examples

```
require_once('AastraIPPhoneScrollableTextMenu.class.php')
$menu = new AastraIPPhoneScrollableTextMenu();
$menu->setTitle('My Menu');
$menu->addEntry('Choice 1', $XML_SERVER."?choice=1", '1');
# ... add as many entries you want
$menu->addEntry('Choice 100', $XML_SERVER."?choice=100", '100');
$menu->output();
```

And

```
require_once('AastraIPPhoneScrollableTextMenu.class.php')
$entries[0]['name'] = "Choice 1";
$entries[0]['url'] = $XML_SERVER."?choice=1";
$entries[0]['selection'] = "1";
# ... add as many entries you want
$entries[99]['name'] = "Choice 100";
$entries[99]['url'] = $XML_SERVER."?choice=100";
```

```
$entries[99]['selection'] = "100";
$menu = new AastraIPPhoneScrollableTextMenu();
$menu->setTitle('My Menu');
$menu->setEntries($entries);
$menu->output();
```

13.13 AastralIPPhoneScrollableDirectory()

This class allows you to create a complete directory application by just providing the results of a directory query as an array..

Include

AastralIPPhoneScrollableDirectory.class.php

Methods

- `setDialKeyPosition(position)`
Set position of Dial Softkey in list view. Default is 2.
- `setNameDisplayFormat(format)` Set name display format. 0="Firstname Lastname", 1="Lastname, Firstname"
- `natsortByLastname()` Sort by lastname (same as natsortByName in case firstname is not provided)
- `natsortByFirstname()` Sort by firstname (same as natsortByName in case firstname is not provided)
- *Overwritten methods from AastralIPPhoneScrollableTextMenu*
- `setEntries(records)` Set directory entries by 2 dim array. Inner array fields: See `addEntry(record)`
 - Array fields: (name is mandatory, rest optional)
 - name: Lastname or name
 - firstname: Firstname (optional)
 - title: Title
 - department: Department
 - company: Company
 - icon: Icon
 - office: Office number display format
 - officeDigits: Office number digits / extension to be dialed. Optional
 - mobile: Cell number display format
 - mobileDigits: Cell number digits / extension to be dialed. Optional
 - home: Home number display format
 - homeDigits: Home number digits / extension to be dialed. Optional
 - office2: Alternative / 2nd office number display format
 - office2Digits: 2nd office number digits / extension to be dialed. Optional

- speedURL: If this field is present, a "+Speed" Softkey will be shown in zoom mode. Selected number will be passed in \$selection variable.
- Example: speedURL=http://xmlserver/xml/speed/speed.php?action=add&name=Peter
- *Inherited from AastraIPPhoneScrollableTextMenu*
- setTopTitle(title,color,icon_index) to set the Top Title of the XML screen (6739i only)
 - title string
 - color string, "red", "blue", ... (optional)
 - icon_index integer, icon number
- setEntries(entries) Set entries of the list by an 2 dim array. Inner array field names: 'name', 'url', 'selection', 'icon', 'dial'
- verifyCookie(cookie) Verifies if the cookie of the HTTP requests matches the cookie of the saved context.
- setBackURI(URI) Set the cancel parameter with the URI to be called on Cancel or Back Softkey (optional)
- setBackKeyPosition(position) Set position of Back Softkey. Default is 3.
- setNextKeyPosition(position) Set position of Back Softkey. Default is 4.
- setPreviousKeyPosition(position) Set position of Back Softkey. Default is 5.
- setExitKeyPosition(position) Set position of Back Softkey. Default is 6.
- setSelectKeyPosition(position) Set position of Back Softkey. Default is 1.
- setNextKeyIcon(icon) Set icon of Next Softkey. Default is Icon:TailArrowDown. Set NULL to disable icon.
- setPreviousKeyIcon(icon) Set icon of Previous Softkey. Default is Icon:TailArrowUp. Set NULL to disable icon.
- disableExitKey() Disable the Exit Softkey
- setSelectKeyLabel(label) Set the label of the Select Softkey. Default is 'Select'. Make sure the string is in language.ini.
- setCancelAction(uri) to set the cancel parameter with the URI to be called on Cancel or Back Softkey (optional)
- addIcon(index,icon) to add custom icons to the object (optional)
- output() to display the object
- addEntry(name,url,selection,icon,dial) to add an element in the list to be displayed
- natsortbyname() to order the list

Examples

```
require_once('AastraIPPhoneScrollableDirectory.class.php')
$records[0]['name'] = "Smith";
$records[0]['firstname'] = "Lisa";
$records[0]['office'] = "+1 (0) 555-123-4321";
$records[0]['officeDigits'] = "4321";
$records[0]['mobile'] = "079 555 12 34";
# ... add as many entries you want
$records[99]['name'] = "Miller";
$records[99]['firstname'] = "Bob";
```

```
$records[99]['office'] = "+1 (0) 555-123-1234";
$records[99]['officeDigits'] = "1234";
$records[99]['home'] = "044 555 22 33";
$records[99]['company'] = "Mitel";
$directory = new AastraIPPhoneScrollableDirectory();
$directory->setTitle('Directory');
$directory->setBackURI($XML_SERVER."?action=start");
$directory->setEntries($records);
$directory->output();
```

13.14 Examples provided with the PHP API

With the PHP API, Aastra provides some source code on how to use it.

- sample.php for the regular XML objects

The whole directory “php_classes” must be installed on a HTTP server anywhere behind the root directory

sample.php

On any type of phone, create a XML softkey/prgkey to call the sample.php script using the following uri:

<http://myserver.com/mydirectory/sample.php>

It includes examples for

- PhoneConfiguration
- PhoneExecute
- PhoneInputScreen (3)
- PhoneTextMenu (2)
- PhoneTextScreen
- PhoneFormattedTextScreen
- PhoneStatus (2)

14 Appendix C: Dynamic Parameters

The following table lists the configuration parameters that can be modified by a PhoneConfiguration object without a reboot of the SIP phone.

Parameter	Comments
ALL action uri	
ALL SIP parameters	
admin password	
alternate tftp server	
audio mode	
auto offhook	
auto resync days	
auto resync max delay	
auto resync mode	
auto resync time	
background image	
call forward key mode	
call transfer disabled	
callers list disabled	This parameter is dynamic so a user can't access it or add to it. However, you need to reboot the phone to clear the list.
conf script	
conference disabled	
date format	
directed call pickup	
directory 1	You need to reboot the phone to download new directories.
directory 2	
directory disabled	This parameter is dynamic so a user can't access it or add to it. However, you need to reboot the phone to clear the list.
directory script	
dnd key mode	
download protocol	
dst config	
dst end day	

Parameter	Comments
dst end hour	
dst end month	
dst end relative date	
dst end week	
dst minutes	
dst start day	
dst start hour	
dst start month	
dst start relative date	
dst start week	
feature key selection list	
ftp password	
ftp server	
ftp username	
handset sidetone gain	
handset tx gain	
handsfree tx gain	
headset sidetone gain	
headset tx gain	
http path	
http server	
https validate certificates	
https validate expires	
https validate hostname	
icom script	
inactivity brightness level	
language	
line1 ring tone	
line2 ring tone	
line3 ring tone	
line4 ring tone	
line5 ring tone	
line6 ring tone	
line7 ring tone	

Parameter	Comments
line8 ring tone	
line9 ring tone	
live dialpad	
log module lldp	
map conf key to	
map redial key to	
mwi missed calls	
options password enabled	
options script	
play a ring splash	
preferred line	
preferred line timeout	
prgkeyN line	
prgkeyN name	Changes to subscriptions (eg BLF or BLA) require a reboot.
prgkeyN type	
prgkeyN value	
redial disabled	This parameter is dynamic so a user can't access it or add to it. However, you need to reboot the phone to clear the list.
redial script	
ring tone	
ringback timeout	
softkeyN label	
softkeyN line	
softkeyN states	Changes to subscriptions (eg BLF or BLA) require a reboot.
softkeyN type	
softkeyN value	
softkey selection list	
speeddial edit	
suppress dtmf playback	
switch ui focus to ringing line	
tftp server	
time format	
time reserved	

Parameter	Comments
time server disabled	
time server1	
time server2	
time server3	
time zone code	
time zone minutes	
time zone name	
tone set	
use alternate tftp server	
user password	
voicemail script	
xfer script	
xml application title	
xml application URI	
xml beep notification	

15 Appendix D: Localized input character set

15.1 English

Key	Capital Characters	Small Characters
1	1.:;=_,-'&()	1.:;=_,-'&()
2	ABC2	abc2
3	DEF3	def3
4	GHI4	ghi4
5	JKL5	jkl5
6	MNO6	mno6
7	PQRS7	pqrs7
8	TUV8	tuv8
9	WXYZ9	wxyz9
0	0+	0+
*	* <SPACE>	* <SPACE>
#	#\@\@	#\@\@

15.2 French/Français

Key	Capital Characters	Small Characters
1	1.:;=_,-'&()	1.:;=_,-'&()
2	ABC2ÀÀÇÀÀÆ	abc2ààçààæ
3	DEF3ÉÉÊË	def3ééêë
4	GHI4ÏÏ	ghi4ïï
5	JKL5	jkl5
6	MNO6ÑÓÒÒÖ	mno6ñóòòö
7	PQRS7	pqrs7
8	TUV8ÙÙÛÛ	tuv8ùùûû
9	WXYZ9	wxyz9
0	0+	0+
*	* <SPACE>	* <SPACE>
#	#\@\@	#\@\@

15.3 Spanish/Español

Key	Capital Characters	Small Characters
1	1.:;=_,-'&()	1.:;=_,-'&()
2	ABC2ÀÀÇ	abc2ààç
3	DEF3ÉÉ	def3éé
4	GHI4ÏÏ	Ghi4ïï
5	JKL5	Jkl5
6	MNO6ÑÓÒÒ	mno6ñóòò
7	PQRS7	pqrs7
8	TUV8ÙÙ	tuv8ùù
9	WXYZ9	wxyz9
0	0+	0+
*	* <SPACE>	* <SPACE>
#	#\@\@	#\@\@

15.4 German/Deutsch

Key	Capital Characters	Small Characters
1	1.;=_,-'&()	1.;=_,-'&()
2	ABC2ÄÄ	abc2ää
3	DEF3É	def3é
4	GHI4	ghi4
5	JKL5	jkł5
6	MNO6Ö	mno6ö
7	PQRS7ß	pqrs7ß
8	TUV8Ü	tuv8ü
9	WXYZ9	wxyz9
0	0+	0+
*	* <SPACE>	* <SPACE>
#	#{@}	#{@}

15.5 Italian/Italiano

Key	Capital Characters	Small Characters
1	1.;=_,-'&()	1.;=_,-'&()
2	ABC2ÀÇ	abc2àç
3	DEF3ÈË	def3èë
4	GHI4	ghi4
5	JKL5	jkł5
6	MNO6ÒÒ	mno6òò
7	PQRS7	pqrs7
8	TUV8Ù	tuv8ù
9	WXYZ9	wxyz9
0	0+	0+
*	* <SPACE>	* <SPACE>
#	#{@}	#{@}

15.6 Portuguese/Portugês

Key	Capital Characters	Small Characters
1	1.;=_,-'&()	1.;=_,-'&()
2	ABC2ÀÃÃÇ	abc2àâãç
3	DEF3ÈÊ	def3éê
4	GHI4Í	ghi4í
5	JKL5	jkł5
6	MNO6ÒÒ	mno6òò
7	PQRS7	pqrs7
8	TUV8ÙÙ	tuv8ùù
9	WXYZ9	wxyz9
0	0+	0+
*	* <SPACE>	* <SPACE>
#	#{@}	#{@}

16 Appendix E: XML Self-Configuration

Aastra provides here a possible implementation for the self-configuration, this is just an example source code not supported by Aastra.

In this implementation targeted for Trixbox CE using FreePBX, the chosen policy is to have all the extensions pre-configured in the Asterisk database and use

- the extension
- the voice mail password

for the credentials to authenticate the user and link the MAC address of the phone to an extension.

The script checks the credentials but also uses a log file to trace the extensions that are already used (startup.cfg).

On top of the XML self-configuration we also provide here a “hot desking” capability using the “logout.php”, the user can logout his extension of his current phone and login somewhere else.

For instance the logout key can be configured as a softkey

```
softkey1 type: xml
softkey1 label: logout
softkey1 value: http://192.168.0.110/startup/logout.php?extension=$$SIPUSERNAME$$
softkey1 states: idle
```

Notes:



- TFTP server root directory is located at ‘/tftpboot’
- Asterisk directory is located at ‘/etc/asterisk’
- XML script and all the related files are located at the root directory of the HTTP server (typically /var/www/html) under the directory “startup”.
- The “startup” directory must have read/write for the HTTP server user.

aastracfg (typically located at /tftpboot)



Note: In this example, the Trixbox CE server is located at 192.168.0.110 and is also the TFTP server.

```
# Setup DHCP mode
dhcp: 1

# Setup TFTP server address
tftp server: 192.168.0.110

# Time server
time server disabled: 0
time server1: pool.ntp.org
time server2: 192.168.0.110

# Startup URI
action uri startup: http://192.168.0.110/startup/startup.php
```

gen-aastracfg script shell to generate the aastracfg file

```
#!/bin/sh
# To put on /usr/local/sbin
echo ""
echo "-----"
```

```

echo "Creating a default config file for Aastra phones"
echo "-----"
echo ""
echo "Creating /tftpboot/aastra.cfg..."
echo ""

IFCONFIG=`which ifconfig 2>/dev/null||echo /sbin/ifconfig`
IPADDR=$IFCONFIG eth0|gawk '/inet addr/{print $2}'|gawk -F: '{print $2}'` 

cat > /tftpboot/aastra.cfg <<EOF
# Setup DHCP mode
dhcp: 1

# Setup TFTP server address
tftp server: $IPADDR

# Time server
time server disabled: 0
time server1: pool.ntp.org
time server2: $IPADDR

# Startup URI
action uri startup: http://$IPADDR/xml/startup/startup.php

EOF

chmod 666 /tftpboot/aastra.cfg

echo "Created /tftpboot/aastra.cfg using $IPADDR for the proxy. If the"
echo "IP address of your Asterisk system changes run this script again and reboot."
echo "Reboot your Aastra phones by disconnecting the power to the phone."
echo ""

```

Template files for the phones (typically located at /var/www/html/startup)

The following file is a template used to create the MAC.cfg file, there must be one file for each Aastra phone.

- Aastra53i.cfg for the 53i
- Aastra55i.cfg for the 55i
- Aastra57i.cfg for the 57i
- Aastra57iCT.cfg for the 57iCT
- Aastra6730i.cfg for the 6730i
- Aastra6731i.cfg for the 6731i
- Aastra6735i.cfg for the 6735i
- Aastra6737i.cfg for the 6737i
- Aastra6739i.cfg for the 6739i
- Aastra9143i.cfg for the 9143i
- Aastra9480i.cfg for the 9480i
- Aastra9480iCT.cfg for the 9480iCT

In these template files, you can use variables that will be replaced with the corresponding value by the script.

- \$\$AA_SIPAUTHNAME_AA\$\$ for the user SIP authentication name
- \$\$AA_SIPSECRET_AA\$\$ for the user SIP secret
- \$\$AA_SIPUSERNAME_AA\$\$ for the user SIP username
- \$\$AA_SIPCALLERID_AA\$\$ for the user SIP caller-id
- \$\$AA_PROXY_SERVER_AA\$\$ for the name/IP address of the proxy server
- \$\$AA_REGISTRAR_SERVER_AA\$\$ for the name/IP address of the registrar server

The template files can of course be completed with extra parameters (timezone, softkeys ...).

```

# SIP Lines
sip line1 auth name: $$AA_SIPAUTHNAME_AA$$
sip line1 password: $$AA_SIPSECRET_AA$$
sip line1 user name: $$AA_SIPUSERNAME_AA$$
sip line1 display name: $$AA_SIPCALLERID_AA$$
sip line1 screen name: $$AA_SIPCALLERID_AA$$
sip line1 proxy ip: $$AA_PROXY_SERVER_AA$$
sip line1 proxy port: 5060
sip line1 registrar ip: $$AA_REGISTRAR_SERVER_AA$$
sip line1 registrar port: 5060
sip line1 vmail: *98
sip line1 mode: 0

# Action URI
action uri startup:

```

startup.php (located at /var/www/html/startup)

```

<?php
#####
# Sample script for self-configuration with Trixbox CE/Asterisk
# Aastra SIP Phones R2.3.0 or better
#
# php source code
# Provided by Aastra 2008
#
# Phone supported
#   Aastra 5i series
#####

#####
# Includes
#####
require_once('include/config.inc.php');
require_once('include/backend.inc.php');
require_once('phpagi/misc.php');
require_once('phpagi/phpagi-asmanager.php');

#####
# Private functions
#####

#####
# Aastra_decode_HTTP_header()
#
# Returns an array
#   0 Phone Type
#   1 Phone MAC Address
#   2 Phone firmware version
#####
function Aastra_decode_HTTP_header()
{
$user_agent=$_SERVER["HTTP_USER_AGENT"];
if(stristr($user_agent,"Aastra"))
{
$value=ereg_split("/ MAC:/",$user_agent);
$fin=ereg_split("/ /",$value[1]);
$value[1]=ereg_replace("/-/,"",$fin[0]);
$value[2]=ereg_replace("/V:/,"",$fin[1]);
}
else
{
$value[0]="MSIE";
$value[1]="NA";
$value[2]="NA";
}

$value[3]=$_SERVER["REMOTE_ADDR"];

```

```

    return($value);
}

#####
# lookup_config_file(extension)
# Checks if extension is already in use.
#
# Parameters
#      extension      extension to check
#
# Returns 1 if extension already in use
#####
function lookup_config_file($extension)
{
$config="startup.cfg";

# Init return
$return=0;

# Read config file
$array = @parse_ini_file($config, true);

# Test MAC address
if($array[$extension]['mac']!="") $return=1;

return($return);
}

#####
# update_config_file(extension,mac,ip,model)
# Update the config file with the new extension parameters
#
# Parameters
#      extension      user extension
#      mac           MAC address of the phone
#      ip            IP address of the phone
#      model         Phone model
#####
function update_config_file($extension,$mac,$ip,$model)
{
$config="startup.cfg";

# Read config file
$array = @parse_ini_file($config, true);
if($array==NULL) $array=array();

# Update value
$array[$extension]['mac']=$mac;
$array[$extension]['ip']=$ip;
$array[$extension]['model']=$model;

# Update config file
reset($array);
$handle = @fopen($config, "w");
if($handle)
{
  while ($v = current($array))
  {
    fputs($handle,"[" . key($array) . "]". "\n");
    fputs($handle,"mac=". $v['mac']. "\n");
    fputs($handle,"ip=". $v['ip']. "\n");
    fputs($handle,"model=". $v['model']. "\n\n");
    next($array);
  }
  fclose($handle);
}
}

#####
# create_mac(extension,mac,username,secret,callerid,model)
# Creates the MAC.cfg file for the user.

```

```

#
# Parameters
#   extension      user extension
#   mac            MAC address of the phone
#   username       SIP authname
#   secret         SIP secret
#   callerid      User CallerID
#   model          Phone model
#
#####
##### function create_mac($mac,$extension,$username,$secret,$callerid,$model)
{
Global $AA PROXY SERVER,$AA REGISTRAR SERVER;

$value=ereg_replace("/ /", $callerid);
$result=$value[0]." ".$value[1];
$result=ereg_replace("/</", "(",$result);
$result=ereg_replace("/>/",")",$result);

# Prepare replace strings
$search=array('/\$\$AA_SIPAUTHNAME_AA\$\\$/','/\$\$AA_SIPSECRET_AA\$\\$/','/\$\$AA_SI
PUSERNAME_AA\$\\$/','/\$\$AA_SIPCALLERID_AA\$\\$/','/\$\$AA_PROXY_SERVER_AA\$\\$/','/\$\$AA_REGISTRAR_SERVER_AA\$\\$/');
$replace=array($username,$secret,$extension,$result,$AA PROXY SERVER,$AA REGISTRAR
SERVER);

$read = @fopen($model.".cfg", "r");
if($read)
{
  $write = @fopen("/tftpboot/".$mac.".cfg", "w");
  if($write)
  {
    # Create file header
    while($line=fgets($read,200))
    {
      $line = ereg_replace($search, $replace, $line);
      fputs($write,$line);
    }
    fputs($write,"\\n");
    fclose($write);
  }
  fclose($read);
}
}

#####
# get callerid(user)
#
# This function retrieves the user callerID of a user in the Asterisk
# registry (FreePBX 2.3)
#
# Parameters
#   @user        user ID
#
# Returns
#   CallerID as a string
#####
##### function get_callerid($user)
{
Global $ASTERISK_LOCATION;

# Try in the config file first
$sip_array = parse_ini_file($ASTERISK_LOCATION."sip_additional.conf", true);

# Extension exists?
if ($sip_array[$user]==NULL) $callerid="Unknown";
else
{
  # FreePBX ?
  if(strstr($sip_array[$user]['callerid'],'device'))
  {

```

```

      # Connect to AGI
      $as = new AGI_AsteriskManager();
      $res = $as->connect();

      # Get value in the database
      $res = $as->Command('database get AMPUSER '.$user.'\cidname');
      $line=split("\n", $res['data']);
      $cid=split(" ", $line[1]);
      $callerid= $cid[1].' '.$cid[2];

      # Disconnect properly
      $as->disconnect();
    }
  else
  {
    # Retrieve the value
    $value=explode(" <",$sip_array[$user]['callerid'],2);
    $callerid=$value[0];
  }
}

# Return Caller ID
return($callerid);
}

#####
# get_username(user)
#
# This function retrieves the username of a user in the Asterisk
# registry (FreePBX 2.3)
#
# Parameters
#   @user           user ID
#
# Returns
#   username as a string
#####
function get_username($user)
{
Global $ASTERISK_LOCATION;

# Get all the user data
$sip_array = @parse_ini_file($ASTERISK_LOCATION."sip additional.conf", true);

# Collect data
if($sip_array[$user]['username']!='') $username=$sip_array[$user]['username'];
else
{
  #
  # Connect to AGI
  $as = new AGI_AsteriskManager();
  $res = $as->connect();

  # Get value in the database
  $res = $as->Command('database get DEVICE '.$user.'\user');
  $line=split("\n", $res['data']);
  $cid=split(" ", $line[1]);
  $username= $cid[1];

  # Disconnect properly
  $as->disconnect();
}

# Return answer
return($username);
}

#####
# get_secret(user)
#
# This function retrieves the SIP password (secret) of a user in the
# Asterisk configuration

```

```

#
# Parameters
#   @user           user ID
#
# Returns
#   secret as a string
#####
function get_secret($user)
{
Global $ASTERISK_LOCATION;

# Get all the user data
$sip_array = @parse ini file($ASTERISK LOCATION."sip additional.conf", true);

# Return answer
return($sip_array[$user] ['secret']);
}

#####
# Main code
#####
# GLOBAL VARIABLES
$XML SERVER = "http://".$ SERVER['SERVER ADDR'].$ SERVER['SCRIPT NAME'];
$AA_PROXY_SERVER = $ SERVER['SERVER_ADDR'];
$AA REGISTRAR SERVER = $ SERVER['SERVER ADDR'];
$ASTERISK_LOCATION = "/etc/asterisk/";

# Retrieve parameters
$extension=$ GET["extension"];
$password=$_GET["password"];
$action=$ GET["action"];
$step=$_GET["step"];

# Set content type
header("Content-Type: text/xml");

# Reboot
if($action=="reboot")
{
$output = "<AastraIPPhoneExecute>\n";
$output .= "<ExecuteItem URI=\"Command: Reset\"/>\n";
$output .= "</AastraIPPhoneExecute>\n";
header("Content-Length: ".strlen($output));
echo $output;
exit;
}

# Input Extension
if ($extension=="")
{
$output = "<AastraIPPhoneInputScreen type=\"number\" LockIn=\"yes\">\n";
$output .= "<Title>Initial startup</Title>\n";
$output .= "<Prompt>Enter Extension</Prompt>\n";
$output .= "<URL>$XML SERVER</URL>\n";
$output .= "<Parameter>extension</Parameter>\n";
$output .= "<Default></Default>\n";
$output .= "</AastraIPPhoneInputScreen>\n";
header("Content-Length: ".strlen($output));
echo $output;
exit;
}

# Input Password
if ($password=="")
{
$output = "<AastraIPPhoneInputScreen type=\"number\" password=\"yes\" LockIn=\"yes\" destroyOnExit=\"yes\">\n";
$output .= "<Title>Initial startup</Title>\n";
$output .= "<Prompt>Enter Password</Prompt>\n";
$output .= "<URL>$XML SERVER?extension=$extension</URL>\n";
}

```

```

$output .= "<Parameter>password</Parameter>\n";
$output .= "<Default></Default>\n";
$output .= "</AastraIPPhoneInputScreen>\n";
header("Content-Length: ".strlen($output));
echo $output;
exit;
}

# IF authentication failed
if (!$userinfo = verify_user($extension, $password))
{
  # Display error
  $output = "<AastraIPPhoneTextScreen LockIn=\"yes\""
destroyOnExit="\"yes\">\n";
  $output .= "<Title>Authentication failed</Title>\n";
  $output .= "<Text>Wrong user and password.</Text>\n";
  $output .= "</AastraIPPhoneTextScreen>\n";
  header("Content-Type: text/xml");
  header("Content-Length: ".strlen($output));
  echo $output;
  exit;
}

# IF already configured
if(lookup_config_file($extension)==1)
{
  # Display error
  $output = "<AastraIPPhoneTextScreen LockIn=\"yes\""
destroyOnExit="\"yes\">\n";
  $output .= "<Title>Error</Title>\n";
  $output .= "<Text>Extension already in use.</Text>\n";
  $output .= "</AastraIPPhoneTextScreen>\n";
  header("Content-Type: text/xml");
  header("Content-Length: ".strlen($output));
  echo $output;
  exit;
}

# Get all the user data
$sip_array = parse_ini_file($ASTERISK_LOCATION."sip_additional.conf", true);

# If user not found
if ($sip_array[$extension]==NULL)
{
  # Display error
  $output = "<AastraIPPhoneTextScreen LockIn=\"yes\""
destroyOnExit="\"yes\">\n";
  $output .= "<Title>Internal error</Title>\n";
  $output .= "<Text>Extension is not provisioned.</Text>\n";
  $output .= "</AastraIPPhoneTextScreen>\n";
  header("Content-Type: text/xml");
  header("Content-Length: ".strlen($output));
  echo $output;
  exit;
}
else
{
  # Collect data
  $username=get_username($extension);
  $secret=get_secret($extension);
  $callerid=get_callerid($extension);
}

# Get MAC address and type of phone
$value=Aastra_decode_HTTP_header();

# Create mac.cfg
create_mac($value[1],$extension,$username,$secret,$callerid,$value[0]);

# Update config file
update_config_file($extension,$value[1],$value[3],$value[0]);

```

```

# Create Reboot screen
$output = "<AastraIPPhoneTextScreen destroyOnExit=\"yes\">\n";
$output .= "<Title>REBOOT</Title>\n";
$output .= "<Text>Reboot</Text>\n";
$output .= "</AastraIPPhoneTextScreen>\n";
header("Refresh: 1; url=\"$XML SERVER.?action=reboot\"");

# Display XML Object
header("Content-Type: text/xml");
header("Content-Length: ".strlen($output));
echo $output;
exit;
?>
```

logout.php (located at /var/www/html/startup)

```

<?php
#####
# Sample script for shot desking with Trixbox CE/Asterisk
# Aastra SIP Phones R2.3.0 or better
#
# php source code
# Provided by Aastra 2008
#
# Phone supported
#   Aastra 5i series
#####

#####
# Includes
#####
require once('include/config.inc.php');
require_once('include/backend.inc.php');

#####
# Private functions
#####

#####
# Aastra decode HTTP header()
#
# Returns an array
#   0 Phone Type
#   1 Phone MAC Address
#   2 Phone firmware version
#####
function Aastra_decode_HTTP_header()
{
$User Agent=$ SERVER["HTTP_USER_AGENT"];
if(stristr($User_Agent,"Aastra"))
{
  $Value=preg_split("/ MAC:/,$User_Agent);
  $Fin=preg_split("/ /,$Value[1]);
  $Value[1]=preg_replace("/\-/,"",$Fin[0]);
  $Value[2]=preg_replace("/V:/,"",$Fin[1]);
}
else
{
  $Value[0]="MSIE";
  $Value[1]="NA";
  $Value[2]="NA";
}

$Value[3]=$ _SERVER["REMOTE_ADDR"];

return($Value);
}
```

```

#####
# update config file(extension)
# Update the config file deleting the current extension
#
# Parameters
#   extension      user extension
#####
function update config file($extension)
{
# Config file
$config="startup.cfg";

# Read config file
$array = @parse ini file($config, true);
if($array==NULL) $array=array();

# Update config file
$handle = @fopen($config, "w");
if($handle)
{
  foreach($array as $key=>$value)
  {
    if($key!=$extension)
    {
      fputs($handle,"[$key]". "\n");
      fputs($handle,"mac=".$value['mac']. "\n");
      fputs($handle,"ip=".$value['ip']. "\n");
      fputs($handle,"model=".$value['model']. "\n\n");
    }
  }
  fclose($handle);
}
}

#####
# delete_mac(mac)
# Deletes the MAC.cfg file for the user.
#
# Parameters
#   mac          MAC address of the phone
#
#####
function delete_mac($mac)
{
# Delete MAC.cfg
@unlink("/tftpboot/".$mac.".cfg");
}

#####
# Main code
#####
# GLOBAL VARIABLES
$XML_SERVER = "http://".$_SERVER['SERVER_ADDR']."." $_SERVER['SCRIPT_NAME'];

# Retrieve parameters
$extension=$_GET["extension"];
$password=$_GET["password"];
$action=$_GET["action"];

# Set content type
header("Content-Type: text/xml");

# Process action
switch($action)
{
  case 'display':
    # Reboot
    $output = "<AastraIPPhoneTextScreen LockIn=\"yes\""
destroyOnExit="\"yes\">\n";
    $output .= "<Title>REBOOT</Title>\n";
}

```

```

$output .= "<Text>Reboot.</Text>\n";
$output .= "</AastraIPPhoneTextScreen>\n";
break;

default:
  # Input Password
  if ($password=='')
  {
    $output = "<AastraIPPhoneInputScreen type=\"number\""
password=\"$yes\" LockIn=\"$yes\" destroyOnExit=\"$yes\">\n";
    $output .= "<Title>Logout</Title>\n";
    $output .= "<Prompt>Enter Password</Prompt>\n";
    $output .= "<URL>$XML SERVER?extension=$extension</URL>\n";
    $output .= "<Parameter>password</Parameter>\n";
    $output .= "<Default></Default>\n";
    $output .= "</AastraIPPhoneInputScreen>\n";
  }
  else
  {
    # IF authentication fails
    if (!verify_user($extension,$password))
    {
      # Display error
      $output = "<AastraIPPhoneTextScreen LockIn=\"$yes\""
destroyOnExit=\"$yes\">\n";
      $output .= "<Title>Authentication failed</Title>\n";
      $output .= "<Text>Wrong credentials.</Text>\n";
      $output .= "</AastraIPPhoneTextScreen>\n";
    }
    else
    {
      # Get MAC address and type of phone
      $value=Aastra_decode_HTTP_header();

      # Erase mac.cfg
      delete mac($value[1]);

      # Update config file
      update_config_file($extension);

      # Reboot needed
      $output = "<AastraIPPhoneExecute>\n";
      $output .= "<ExecuteItem
URI=\"$XML_SERVER.\"?action=display\"/>\n";
      $output .= "<ExecuteItem URI=\"$Command:
FastReboot\"/>\n";
      $output .= "</AastraIPPhoneExecute>\n";
    }
  }
  break;
}

# Display XML Object
header("Content-Type: text/xml");
header("Content-Length: ".strlen($output));
echo $output;
exit;
?>

```

17 Appendix F: CSV based Directory

17.1 Introduction

The application described in this chapter is a generic directory application using a CSV file as data source as well as a server-side speed dial application which can be linked from the directory application.

The directory application allows the user to perform a lookup based on

- The first letters of the first name
- The first letters of the last name
- The first letters of the Company name
- (at least 3) Letters anywhere in the complete name or company name

Also, it allows the user to configure:

- The results display format: 'first name last name' or 'last name first name'
- Sorting index: 'last name' or 'first name'

The directory application can also be password protected (configured in config/directory.conf), the password is requested only for the first use, once authenticated by its MAC address, the phone no longer requires the password check.

The source code is provided in the XML SDK as a zip file called csv_directory_3.3.1.zip



Note: the source code is not supported by Aastra, it is provided only as an example.

17.2 Phone compatibility

The directory and speed dial applications are available for

- Aastra 6751i, 6753i, 6755i, 6757i, 6757iCT, 6735i, 6737i
- Aastra 9143i, 9480i, 9480iCT
- Aastra 6730i/6731i
- Aastra6863i/6865i/6867i

But some limitations apply in the directory application when the phone is a non softkey phone a user cannot:

- set a speed dial from the directory application
- change sorting index and display format
- access to record details
- perform a search using first name or last name

17.3 Installation

The provided scripts must be extracted under the ROOT directory of the HTTP server in a 'xml' directory, a cache directory (default /var/cache/aastra) must also be created with read/write access for the HTTP server user.

The cache directory can be configured in config/server.conf, see chapter 17.6.1 for more details.

17.4 XML key configuration

Directory

The uri to use is

<http://myserver.com/xml/directory/directory.php?user=USER&source=SOURCE>

Where

- myserver.com is the name or IP address of your HTTP server
- USER is the userID, if not provided the script uses the phone MAC address as the userID.
- SOURCE is the name of the csv file located in the 'directory' directory, if not provided, the script uses the file configured as default in config/directory.conf

Speed dial

The uri to use is

<http://myserver.com/xml/directory/speed.php?user=USER>

Where

- myserver.com is the name or IP address of your HTTP server
- USER is the userID, if not provided the script uses the phone MAC address as the userID.



Note: USER must be the same for both applications in order to have the speed dial integrated in the directory application.

17.5 CSV file format

The CSV file must respect the following format:

First name, Last name, Company, Title, Work, Home, Mobile

The application is provided with a sample database 'directory/directory.txt' where all the fields have been randomly generated.

17.6 Configuration files

17.6.1 server.conf

This file includes configuration parameters for the XML server.

```
[General]
# Public IP address (optional), if not provided $_SERVER['HTTP_HOST'] is used
public=
# Path for the Aastra cache directory (optional), if not provided /var/cache/aastra is used
cache=
# Path for the TFTP root directory (optional) if not provided /tftpboot is used
tftp=
```

```
# Path for the XML directory behind the HTTP Server (optional), default is xml
xmldirectory=
# Mode DEBUG (0 or 1), default is 0
debug=
# Mode TRACE (0 or 1), default is 0
trace=
# Forced language (optional), can be en, de, fr...
language=
```

When activated, the traces are stored in a log file located in the 'cache' directory (by default /var/cache/aastra) indexed by the date, a file is generated per day.

17.6.2 directory.conf

This file includes configuration parameters for the Directory application.

```
#####
# directory.conf
#
# Configuration file for the directory application
#####

#####
# Global configuration
#
# [general]
# password           To protect the application with a password
# speeddial          Configure is speeddial is enabled (0 or 1) (optional)
# default            Name of the default csv file located in the directory
#####
[General]
password=
speeddial=
default=directory
#####
# Dialing profile
#
# [Dialplan]
# country            country code
# long distance      long distance prefix
# international      international prefix
# outgoing           outgoing prefix
# local              list of local phone numbers prefixes separated by a comma
#####
[Dialplan]
country=1
long distance=1
international=011
outgoing=9
local=
```

17.7 Application Files

/	Root Directory
language.ini	Language configuration file
license.txt	License file
/directory/	Directory for the applications
directory.php	Directory application
directory.txt	Sample CSV file
speed.php	Speed dial application
/config/	Directory for configuration files
server.conf	Server configuration
directory.conf	Directory configuration

/include/	Directory for common includes
AastraCommon.php	Common Aastra functions
AastraiIPPhone.php	
AastraiIPPhone.class.php	
AastraiIPPhoneConfiguration.class.php	
AastraiIPPhoneConfigurationEntry.class.php	
AastraiIPPhoneExecute.class.php	
AastraiIPPhoneExecuteEntry.class.php	
AastraiIPPhoneInputScreen.class.php	
AastraiIPPhoneInputScreenEntry.class.php	
AastraiIPPhoneSoftkeyEntry.class.php	
AastraiIPPhoneStatus.class.php	
AastraiIPPhoneStatusEntry.class.php	
AastraiIPPhoneTextMenu.class.php	
AastraiIPPhoneTextMenuEntry.class.php	
AastraiIPPhoneTextScreen.class.php	

Aastra XML objects

php classes

18 Appendix G: LDAP Directory

18.1 Introduction

This appendix describes how to provide access to the Corporate Directory (Active Directory) from the Aastra SIP phones. As LDAP protocol is used to access Active Directory, this document is also valid for any other LDAP enabled directory server. This document is solely about user initiated directory lookup, it does not cover Corporate Directory based caller ID lookup for incoming or outgoing calls.

There is no native LDAP client in the Aastra SIP phone, but the phone's inbuilt XML browser can be used to access a XML Proxy Server which then communicates with the LDAP server. This architecture offers more flexibility than a native LDAP client in the phone since the logic of the LDAP directory application lies in the XML LDAP application (e.g. a PHP script) running on the XML Proxy Server rather than in the LDAP client embedded in the phone's firmware. The following features can be easily controlled by changing the XML LDAP application on the XML Proxy Server:

- Customized search fields on the phone (e.g. first name / last name / any name / department / ...)
- Customized LDAP-attributes to be included in the search result (such as title, department, address)
- Number translation (digits to be removed from / added to the numbers found in the LDAP before dialling – e.g. external prefix)

The following diagram shows a typical architecture for the LDAP directory access:

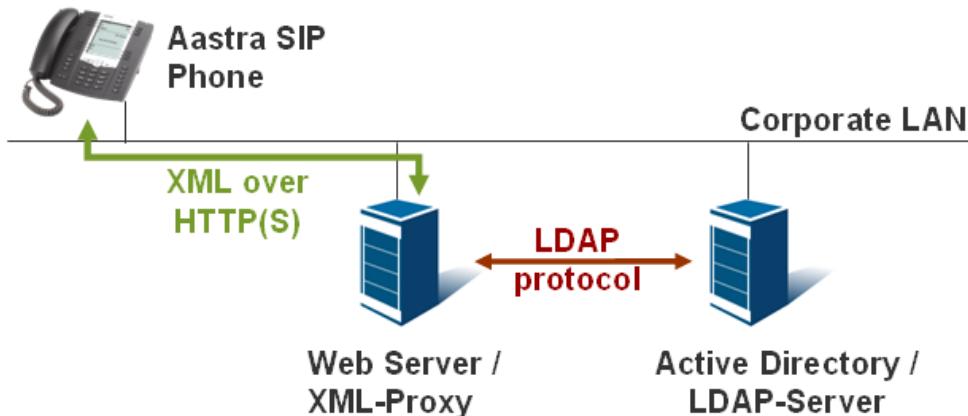


Figure 102: LDAP directory architecture

The message flow is given by the diagram below:

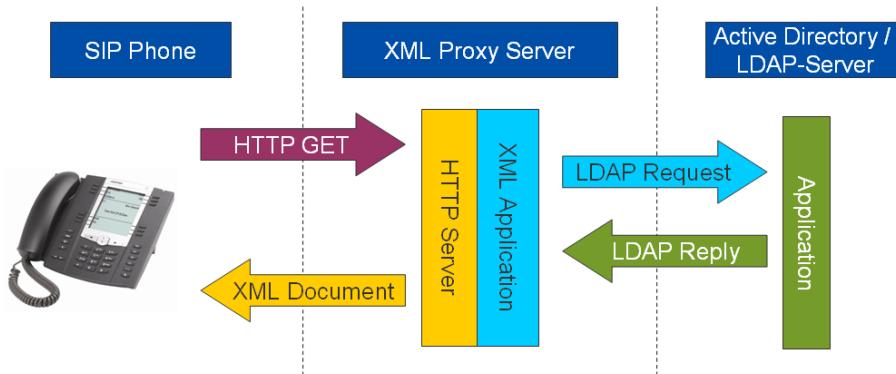


Figure 103: LDAP directory message flow

The directory application allows the user to perform a lookup based on

- The first letters of the first name AND last name
- (at least 3) Letters anywhere in the complete name

The source code is provided in the XML SDK as a zip file called `ldap_directory_3.3.1.zip`



Note: the source code is not supported by Aastra, it is provided only as an example.

18.2 Installation

The provided scripts must be extracted under the ROOT directory of the HTTP server in a 'xml'directory, a cache directory (default /var/cache/aastra) must also be created with read/write access for the HTTP server user.

The cache directory can be configured in config/server.conf, see chapter 18.5.1 for more details.

The Web server must support PHP 5.x or higher and the PHP LDAP extension must be available in PHP. Typically, Apache Web server is used. Apache runs on most operating systems.

Windows platforms

To enable the PHP LDAP extension, this line must be inserted into php.ini:

```
extension=php_ldap.dll
```

Linux platforms

Just install the php-ldap package (via yum or via rpm)

To check whether PHP 5.x (or higher) and the PHP LDAP extensions are properly installed, create a PHP script with the following content and save it under the Web server's root directory:

```
<?php phpinfo(); ?>
```

Then point your Web browser to this script. Check the PHP version and make sure there is a section "ldap" with a table containing the key "LDAP Support" and corresponding value "enabled"

18.3 Network Requirements

18.3.1 Phone -> XML Proxy Server

The phone must be able to reach the XML Proxy Server. Typically, the XML Proxy Server will run on port 80/tcp, but any other port can be used as well. The phone can be behind NAT as the TCP requests will always be phone initiated.

In case there is a firewall between the phone and the XML Proxy Server, the firewall must allow phone initiated TCP sessions towards the Web server port on the XML Proxy Server.

18.3.2 XML Proxy Server -> LDAP-Server

The XML Proxy Server must be able to reach the LDAP-Server on port 389/tcp (default LDAP port) or 3268/tcp (default LDAP port on Active Directory Server) or any other port that is used for LDAP access.

Requests will always be XML Proxy Server initiated.

18.4 Active Directory / LDAP-Server Requirements

The LDAP / Active Directory Server must allow LDAP search requests. Depending on the server's configuration, anonymous access (anonymous bind) is allowed. If not, a username (User DN) and password must be provided. Active Directory typically does not allow anonymous access.

Also the Search Base / Root DN needs to be known. This information should be requested from the LDAP / Active Server administrator.

To test the LDAP server access, use a tool like "Softerra LDAP Browser" (free). If anonymous access is supported, setup a new profile with "Anonymous Bind" selected. Otherwise provide User DN and password. Configure the server's IP address and port plus the "Base DN" and you should be able to browse the LDAP tree.

18.5 Configuration files

18.5.1 server.conf

This file includes configuration parameters for the XML server.

```
[General]
# Public IP address (optional), if not provided $_SERVER['HTTP_HOST'] is used
public=
# Path for the Aastra cache directory (optional), if not provided /var/cache/aastra is used
cache=
# Path for the TFTP root directory (optional) if not provided /tftpboot is used
tftp=
# Path for the XML directory behind the HTTP Server (optional), default is xml
xmldirectory=
# Mode DEBUG (0 or 1), default is 0
debug=
# Mode TRACE (0 or 1), default is 0
trace=
# Forced language (optional), can be en, de, fr...
language=
```

When activated, the traces are stored in a log file located in the 'cache' directory (by default /var/cache/aastra) indexed by the date, a file is generated per day.

18.5.2 ldap_directory.conf

This file includes configuration parameters for the LDAP Directory application.

```
#####
# ldap_directory.conf
#
# Configuration file for the LDAP directory application
#####
## Global configuration
#
# [LDAP_Server]
# hostname    Hostname or IP address of LDAP server
# port        TCP server port of LDAP server. Typically this is 389 or 3268
# baseDN      Base / Root Search DN. Example: dc=company, dc=com
# userdomain  User domain to connect to the LDAP server (optional)
# username    User DN to connect to the LDAP server. Leave blank if anonymous bind is used.
# password    Password for the User DN. Leave blank if anonymous bind is used.

#####
[LDAP_Server]
hostname=
port=3268
basedn=
userdomain=
username=
password=

#####
# Dialing profile
#
# [Dialplan]
# countrycode  Country code
#                 If phone number starts with "+<countrycode>", this will be removed
#
# longdistance Long distance prefix
#                 This prefix will be added to the number in case +<countrycode> has been stripped.
#                 Leave blank if not needed.
#
# international International prefix
#                 The "+" sign will be replaced with this prefix
#
# outgoing     Outgoing prefix
#                 Prefix that needs to be appended for outgoing calls
#                 (all call but local calls), e.g. 0 or 9
#
# local        List of local PBX number prefixes separated by a comma (in national format).
#                 Prefix will be removed, no outgoing prefix will be added.
#                 Examples: local=905760,978262
#                 --> 9057602222 will be replaced by 2222 and 9782623333 will be replaced by 3333.
#
# localextlen  Numbers with this number of digits or less will be treated as local PBX extensions
#                 No prefix added (useful in case numbers are stored in local format in LDAP)
#####

[Dialplan]
countrycode=1
longdistance=1
international=011
outgoing=
local=
localextlen=4
```

19 Appendix H: PictureCallerID (6867i/6739i)

19.1 Introduction

This feature, unique to the Aastra 6739i, allows the display of a picture referenced by the Caller ID number for an incoming and an outgoing call.

When the user makes or receives a call, the Aastra 6739i (by configuration) fetches an image stored on a TFTP/FTP/HTTP/HTTPS server and displays it.

For instance, if the incoming or outgoing number is "9725551234" the phone makes a request for a file named "9725551234.png" which must be

6739i

- 150x200 pixels
- png format
- 24 bits depth colors

6867i

- Up to 150x200 pixels (image is rescaled)
- png format
- 24 or 32 bits depth colors

in order to be displayed. The image is cached in the phone until the next reboot.

If no image matching the request is found on the server or in its cache, the phone displays a default image (below).



This implementation means that the server must host all the pictures in the right format which can be pretty tedious.

19.2 Application implementation

To simplify the deployment of the picture Caller ID, Aastra has developed an application which answers to the phone requests but also:

- converts any size picture (png, jpeg, gif) to the right format and cache the converted picture,
- allows number/picture matching (cell phone number, home number...),
- allows phone number pattern matching,
- allows to customize the matching picture by adding a custom label.

With this application, an administrator does not have to convert the pictures to the right format, he just has to put the pictures in any format (jpeg, gif or png) in the "pictures" directory for instance using XXXX.yyy where XXXX is the user extension number.

The administrator can also create number or pattern matching to display all kind of pictures using the configuration file "pictureID.conf" as described in chapter 19.5.2.3.

Here is how the algorithm works (NUMBER is the incoming or outgoing number)

1. Checks if NUMBER.png is in the cache directory (if yes sends the image back)
2. Remove local prefixes and check the transformed number (if yes sends the image back)
3. Check basic mapping and check the transformed number (if yes sends the image back)
4. Check advanced pattern matching and check the transformed number (if yes sends the image back)
5. Remove external prefix and check the transformed number (if yes sends the image back)
6. Remove international prefix and check the transformed number (if yes sends the image back)
7. Sends a HTTP 404 (Image Not found) or the configured image

19.3 Requirements/Compatibility

19.3.1 HTTP Server

Operating System:

- Microsoft Windows Server 2003/2008
- Microsoft XP/Vista/7
- Most flavors of Linux

HTTP Server:

- Microsoft IIS
- Apache
- Lighttpd

PHP

- Release 5.0 or better,

- Configured to be called by the HTTP server for ‘.php’ files
- **php-gd extension**

19.3.2 Aastra 6739i

The Picture Caller ID application is available only for the following phones:

- Aastra 6739i using **firmware release 3.0.1** or better

19.4 Installation

19.4.1 Introduction

The Picture Caller ID application is provided to allow generic implementation and also for testing purpose as a zip file which includes only the source code to be installed on an existing HTTP Server “pictureCallerID_3.3.1.zip”.

19.4.2 HTTP Server

The Picture Caller ID application is a single php script which can be installed anywhere behind the root directory of any HTTP Server supporting php scripts.

19.4.3 Package installation

Just untar the provided tarball wherever you want behind the HTTP Server root directory (typically /var/www/html with Apache on Linux).

Just make sure that

- The “cache” directory is accessible in read/write for the HTTP Server user
- The “pictures” directory is accessible in read for the HTTP Server user

The Picture Caller ID can be relocated under any directory.

19.4.4 Test your installation

To test the HTTP server direct your Web browser (Internet Explorer, Firefox...) to


- <http://MYSERVERIP/imageServer.php?0000.png> if the application has been installed at the HTTP Server root directory

or

- <http://MYSERVERIP/PATH/imageServer.php?0000.png> if the application has been installed at a different directory

Where MYSERVERIP is the IP address/name of your server and PATH the directory behind the HTTP Server root directory.

You should see the following page:

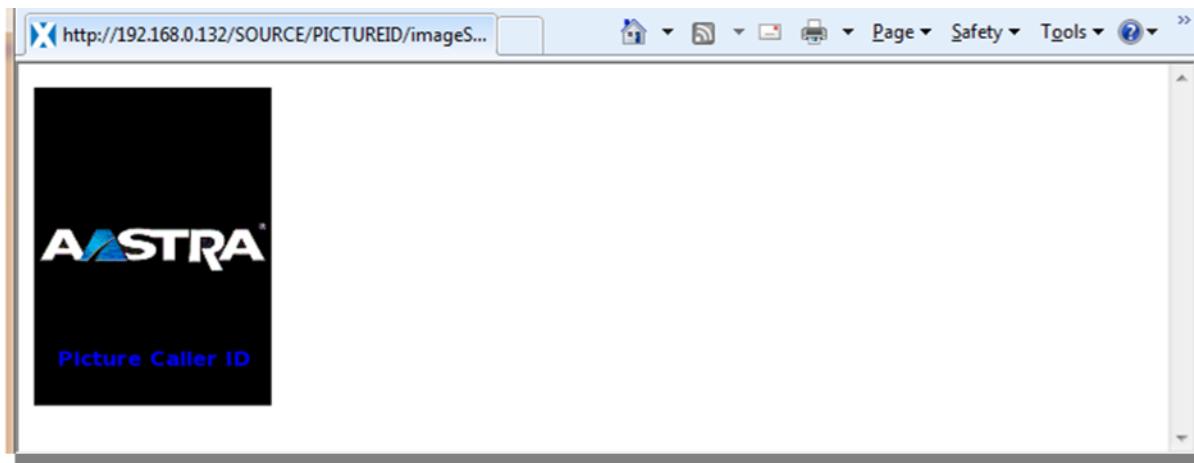

19.4.5 Troubleshooting

If the previous test did not work here are a couple of things you may want to check:

- Is the HTTP Server running?
- Is php supported?
- Is php-gd extension installed?
- Are the user rights OK for “pictures” and “cache” directories?

19.4.6 Windows PC using XAMPP Lite

Please refer to chapter 11.2 on how to use XAMPP as an http server for this application.

19.5 Configuration

19.5.1 Phone Configuration

The Picture Caller ID feature is configured using a parameter called “image server uri” in the phone config files (aastra.cfg or MAC.cfg)

image server uri: URL to access the Picture Caller ID application

HTTP Server implementation

image server uri: http://MYSERVERIP/PATH/imageServer.php?

where MYSERVERIP is the IP address/name of your HTTP server and PATH the directory behind the HTTP Server root directory.

XAMPP Implementation

image server uri: http://MYPC/imageServer.php?

where MYPC is the IP address/name of the PC where the XAMPP package has been installed.



Note: the “?” at the end of the uri is mandatory, it is not a typo.

19.5.2 Application configuration

The application can be configured by modifying ‘pictureID.conf’ in the main directory; this configuration file contains 3 sections.



Note: Changes in this file are dynamic.

19.5.2.1 General parameters

This section includes the global configuration parameters:

- Location of the ‘pictures’ directory
- Location of the ‘cache’ directory
- Enable or disable upscaling pictures
- Name and customization of the default picture (optional)

```
#####
# Global parameters
#
# [General]
# pictures          Directory for the raw pictures
#                   Default is ./pictures
#                   Must be r for HTTP Server user
#
# cache             Directory for the cached pictures
#                   Default is ./cache
#                   Must be r/w for HTTP Server user
#
# blowup            Enable (1) or disable (0) image scaling smaller than 150x200
pixels.
#                   This may/will lead to grainy/pixelized images.
#                   Default is disable
# default           Provides a default image when the number does not match
#                   any picture. A 404 is sent if no number is provided though.
#                   default=mapped_number or
mappedname,LABEL|YPOSITION|ALIGNMENT|COLOR|FONTSIZE
#                   See the [Numbers] section for the format of the line
#####
[General]
pictures=
cache=
blowup=
default=
```

19.5.2.2 Dialing plan

This section contains the PBX dialing plan which will be used to transform the numbers:

- Country code
- Long distance prefix
- International prefix
- Outgoing prefix
- Local prefix(es)

```
#####
# Dialing profile
```

```

#
# [Dialplan]
# country          Country code
#                   If phone number starts with "+<country>", this will be
#                   removed
#
# long distance    Long distance prefix
#                   This prefix will be added to the number in case +<country>
#                   has been stripped.
#
#                   Leave blank if not needed.
#
# international    International prefix
#                   The "+" sign will be replaced with this prefix
#
# outgoing         Outgoing prefix
#                   Prefix that needs to be appended for outgoing calls
#                   (all call but local calls), e.g. 0 or 9
#
# local            List of local PBX number prefixes separated by a comma
#                   (in national format). Prefix will be removed, no outgoing
#                   prefix will be added.
#
#                   Examples: local=905760,978262
#                   --> 9057602222 will be replaced by 2222 and 9782623333 will
#                   be replaced by 3333.
#####
[Dialplan]
country=1
long distance=1
international=011
outgoing=
local=

```

19.5.2.3 Number transformations

This section describes the number transformations you want the application to use to display a given picture as well as the optional customization of the picture.

Each line is formatted like this

- Number and/or patterns=picture number or name,[Optional customization]

Pattern format is P followed by:

- any digit including * or #
- X digit between 0 and 9
- Z digit between 1 and 9
- N digit between 2 and 9

The optional customization allows you to add a label on the displayed picture by defining:

- the label itself
- its vertical position in pixels (1 to 200)
- its alignment (left, center, right)
- its color
- its font size

```

#####
# Number mapping
#
```

```

# Line Format
# [Numbers]
#   number and/or patterns comma separated=mapped_number or
mappedname,LABEL|YPOSITION|ALIGNMENT|COLOR|FONTSIZE
#   Simple number matching
#     it can be used to map multiple phone numbers (cell, home , other) to a
user
#   Pattern matching
#     it can be used to map open numbers
#       Pattern format is P followed by
#         any digit including * or #
#         X digit between 0 and 9
#         Z digit between 1 and 9
#         N digit between 2 and 9
#         . indicates an open length number, must be positioned at the end of
the pattern
#   The entries in the [Numbers] section are processed based on the order in
#   the file, so it is recommended to put the open patterns at the end.
#
# Where
#   LABEL is the label to be displayed on the picture
#   YPOSITION is the vertical position of the label (between 1 and 200), default
is 100
#   ALIGNMENT is the horizontal alignment left|center|right, default is center
#   COLOR is the label color
yellow|orange|pink|purple|black|grey|red|brown|tan|magenta|blue|green|white
(default is white)
#   FONTSIZE is the font size in pixels (between 8 and 24) default is 10
#
# Example
# [Numbers]
# 0795551234=2299
#   Will display the picture "2299" when 0795551234 is dialed or incoming
# P972XXXXXXX,P469XXXXXXX,P214XXXXXXX=default,"DALLAS, TX"|187|center|blue|10
#   Will display the picture "default" with a centered blue label "Dallas, TX"
font size 10 at vertical position 187 when 10 digits numbers starting with 972 or
469 or 214 are dialed or incoming
# P44.=UK
#   Will display the picture "UK" when any number starting with 44 is dialed or is
incoming
#####
[Numbers]
*97,*98=voicemail
*76,*78,*79,*21,*65=phone

```

19.5.3 Number matching examples

The number matching can be used to map external phone numbers (cell phone, home...) to a local extension.

John Doe is extension 2000 on the local PBX, '2000.jpg' is available in the "pictures" directory.

The following line in the configuration file

```
4085551234,3105551234=2000
```

Will display the '2000.jpeg' picture when '4085551234' or '3105551234' are calling or being called.

19.5.4 Pattern matching examples

The pattern matching allows you to define hierarchical rules to match a number with a picture; the order in the configuration file is significant.

Example 1

```
P972XXXXXXX,P469XXXXXXX,P214XXXXXXX =default,"DALLAS, TX"|187|center|red|10
```

Will display the following picture on the phone



When a 10 digit number starting with 972, 469 or 214 is calling or being called.

Example 2

This example demonstrates the relevance of the lines order in the configuration files.

```
P972555XXXX=default,"ACME Dallas"|187|center|blue|10  
P972XXXXXXX,P469XXXXXXX,P214XXXXXXX =default,"DALLAS, TX"|187|center|red|10
```

Will display:



When a 10 digit number starting with 972555 is calling or being called.



When a 10 digit number starting with 972 (except if it is starting with 972555), 469 or 214 is calling or being called.

Example 3

This example demonstrates how to use undefined length patterns.

```
P44.= default,"United Kingdom"!187!center!red!10
```

Will display the following picture

 United Kingdom	When a number (any number of digits) starting with 44 is calling or being called.
--	---

19.6 Files

This chapter describes the files provided in the package

File	Comment
./	Root directory
imageServer.php	PHP script for the Picture Caller ID application
License.txt	License file
pictureID.conf	Configuration file
./cache	Cache directory
./fonts	Font directory
DejaVuSans-Bold.ttf	True Type font used to customize the labels
./pictures	Picture directory
Aastra.gif	Sample graphic files
conference.png	
default.png	
phone.png	
time.png	
voicemail.png	
Various country flags (US, UK, DE...)	

20 LAST PAGE OF THE DOCUMENT

PA-001011-03-03

This page is intentionally left blank